

[Manuals.plus](#) /

› [Kaba Mas](#) /

› LA GARD II Basic Electronic Combination Lock User Manual

Kaba Mas LGBASICII

LA GARD II Basic Electronic Combination Lock User Manual

Model: LGBASICII | Brand: Kaba Mas

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of the LA GARD II Basic Electronic Combination Lock. Designed for security applications, this lock offers reliable electronic access with a satin chrome keypad. Please read this manual thoroughly before attempting to install or operate the lock to ensure proper function and security.



Image: The LA GARD II Basic Electronic Combination Lock, showing both the satin chrome keypad and the internal lock mechanism.

SAFETY INFORMATION

Always handle the lock components with care. Ensure that the lock is installed by a qualified professional if you are unsure about the process. Keep the combination confidential and do not share it with unauthorized individuals. Regularly check the battery level to prevent unexpected lockouts.

SETUP AND INSTALLATION

The LA GARD II Basic Electronic Combination Lock requires careful installation to ensure optimal performance and security. While specific installation steps may vary depending on the safe or container, the general procedure involves mounting the keypad and the lock body, and connecting them.

Components Overview:

- **Keypad:** The external interface for entering combinations.
- **Lock Body (Mechanism):** The internal component that secures the door.
- **Mounting Hardware:** Screws and bolts for securing the components.



Image: Close-up view of the LA GARD II lock mechanism, showing mounting points and internal components.

Installation Steps:

1. **Prepare the Door:** Ensure the safe door has the necessary cutouts and mounting holes for the keypad and lock body.
2. **Mount the Keypad:** Secure the keypad to the exterior of the door using the provided screws. Ensure it is flush and stable.
3. **Install the Lock Body:** Attach the lock body to the interior of the door, aligning it with the keypad's spindle or cable connection.
4. **Connect Components:** Connect the keypad to the lock body according to the manufacturer's instructions. This typically involves a cable or spindle.
5. **Test Functionality:** Before closing the door, perform initial tests to ensure the lock mechanism retracts and extends

properly with the factory default combination.

Note: For detailed installation diagrams and specific safe models, refer to the original safe manufacturer's instructions or consult a professional locksmith.

OPERATING INSTRUCTIONS

The LA GARD II Basic Electronic Combination Lock is designed for straightforward operation. The following steps outline how to open the lock and change your combination.

Opening the Lock:

1. **Enter Valid Combination:** Input the 6-digit combination (factory set to 1-2-3-4-5-6) on the keypad.
2. **Confirmation:** The lock will confirm a valid combination entry with a double signal (two LED flashes and two beeps).
3. **Open Position:** Within 4 seconds of confirmation, turn the handle to the open position.
4. **Pull Door Open:** The door can now be pulled open.

Important Note: *Change the combination before putting the lock into operation.*

Changing Your Combination:

CAUTION: Always perform this operation with the door open.

1. Enter "zero" six times.
2. Enter your existing six (6) digit combination one time.
3. Enter your NEW six (6) digit combination two times.
4. If a mistake is made, wait thirty (30) seconds and repeat steps 1-3.
5. Test lock operation several times before closing the door.

Keypad Backlighting:

- Press either lightbulb icon to illuminate panel keys.

Audio and Visual Signals:

- **Double signal** - two (2) LED flashes and two (2) beeps - indicates entry is valid or accepted.
- **Triple signal** - three (3) LED flashes and three (3) beeps - indicates invalid or not accepted.



Image: Front view of the LA GARD II electronic keypad, showing the numerical and functional buttons.

MAINTENANCE

Proper maintenance ensures the longevity and reliable operation of your LA GARD II lock.

Battery Replacement:

- The lock requires one 9V battery.
- **Low Battery Warning:** Repeated LED flashing and beeping during opening indicates battery is low and needs immediate replacement.
- To replace the battery, locate the battery compartment, typically on the underside or rear of the keypad.
- Remove the old battery and insert a new 9V alkaline battery, ensuring correct polarity.

- Test the lock after battery replacement.

Cleaning:

- Clean the keypad surface with a soft, dry cloth.
- Avoid using abrasive cleaners or solvents, as these can damage the finish or electronic components.

TROUBLESHOOTING

This section addresses common issues you might encounter with your LA GARD II Basic Electronic Combination Lock.

Common Issues and Solutions:

- **Lock does not open after combination entry:**
 - Ensure the combination was entered correctly.
 - Check for low battery warning (repeated flashing/beeping). Replace battery if necessary.
 - Verify that the handle is turned within 4 seconds of successful combination entry.
- **Invalid Combination Entry (Triple Signal):**
 - Re-enter the combination carefully.
 - **Wrong Try Penalty:** Four (4) consecutive invalid combination entries initiate a five (5) minute delay period. The LED will flash red at ten (10) second intervals during this period. Entry will not respond to keystrokes during delay. After the delay, two (2) more consecutive invalid combinations will restart the additional five (5) minute delay period.
- **Keypad unresponsive:**
 - Check battery level and replace if low.
 - Ensure the keypad cable is securely connected to the lock body.

If problems persist after following these steps, contact customer support or a certified locksmith.

SPECIFICATIONS

Feature	Detail
Model Name	LG Basic II
Part Number	4200-3715-SC
Lock Type	Combination Lock, Keypad
Material	Chrome
Finish Type	Satin
Color	Chrome
Power Source	1 x 9V Battery (not included)
Item Weight	3 pounds
Package Dimensions	8 x 6 x 4 inches

Feature	Detail
Recommended Uses	Home, Office, Storage Units
Certifications	UL Listed

dormakaba 

LA GARD 5715

Electronic Entry Device

USER OPERATING INSTRUCTIONS

Keypads models 5715, 5750, 5750-K are compatible with 4200 (solenoid) and 4200M (motor), 3800/3801/3802/3803 Firmware, 4300 (solenoid) and 4300M (motor), 3800/3801/3802/3803 Firmware, 6040 (solenoid) and 6040M (motor) High Security electronic locks.



FEATURES

See *Manager Instructions* for additional features.

USER COMBINATION

- Open Lock
- Change Combination

KEYPAD BACKLIGHTING

- Press either lightbulb icon to illuminate panel keys.

WRONG TRY PENALTY

- Four (4) consecutive invalid combination initiates five (5) minute delay period.

LOW BATTERY WARNING

- Repeated LED flashing and beeping during opening indicates battery is low and needs immediate replacement.

AUDIO AND VISUAL SIGNAL

- Double signal - two (2) LED flashes and two (2) beeps - indicates entry is valid or accepted.
- Triple signal - three (3) LED flashes and three (3) beeps - indicates invalid or not accepted.

OPENING THE LOCK

1. Enter valid six (6) digit combination (factory set to 1-2-3-4-5-6).
2. The lock will confirm a valid combination entry with a double signal.
3. Within four (4) seconds, turn the handle to the open position.
4. Pull door open.

- **Invalid Combination Entry** - Lock will signal three (3) times.

IMPORTANT NOTE: *Change the combination before putting the lock into operation.*

WRONG TRY PENALTY

- Entry of four (4) consecutive invalid combinations starts a five (5) minute delay period.
 - LED flashed red at ten (10) second intervals.
- At the end of the delay period, two (2) more consecutive invalid combinations will restart the additional five (5) minute delay period.

NOTE: *Entry will not respond to keystrokes during delay period.*

CHANGING YOUR COMBINATION

CHANGING YOUR COMBINATION

CAUTION! Always perform this operation with the door open

1. Enter "zero" six times.
2. Enter your existing six (6) digit combination one time.
3. Enter your NEW six (6) digit combination two times.
4. If a mistake is made wait thirty (30) seconds and repeat steps 1 - 3.
5. Test lock operation several times before closing the door.

(P/N) 7030.0316 Rev A 02/17 • © copyright 2017

Kaba Mas LLC
Page 1 of 2

Image: A scanned document showing user operating instructions for LA GARD 5715, which shares similar features and operation with the Basic II model.

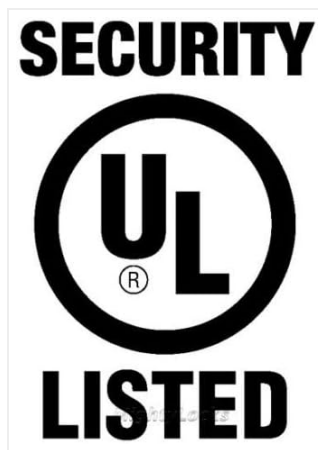


Image: The UL Listed security certification logo, indicating the product meets specific safety and performance standards.

WARRANTY INFORMATION

While specific warranty details are not provided in the product data, Kaba Mas products typically come with a manufacturer's warranty covering defects in materials and workmanship. For detailed warranty terms and conditions, please refer to the documentation included with your purchase or visit the official Kaba Mas website.

- **Protection Plans:** Additional protection plans are available for purchase, offering extended coverage beyond the standard manufacturer's warranty. These plans may cover repairs or replacements for a specified duration.
- For more information on protection plans, please check the product listing on Amazon or contact the seller.

CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Kaba Mas customer support. You may also reach out to the seller for product-specific inquiries.

- **Manufacturer:** Kaba Mas
- **Seller:** ATM Link, Inc
- **Amazon Product Page:** [LA GARD II Basic Electronic Combination Lock on Amazon](#)

