

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Pro-Ject](#) /

› [Pro-Ject RM 1.3 Turntable - High Gloss Black with Pearl Cartridge User Manual](#)

Pro-Ject RM 1.3

Pro-Ject RM 1.3 Turntable User Manual

Model: RM 1.3 | Brand: Pro-Ject

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Pro-Ject RM 1.3 Turntable. Please read it thoroughly before use to ensure proper functionality and longevity of your device.

PACKAGE CONTENTS

Before proceeding with the setup, please verify that all components are present:

- Pro-Ject RM 1.3 Turntable Unit
- Platter
- Drive Belt
- Outboard 15V AC Motor
- Power Supply
- Sumiko Pearl Cartridge (pre-installed or separate)
- Removable RCA Cables
- Counterweight
- Anti-skating Weight
- Stylus Pressure Gauge

SETUP INSTRUCTIONS

Follow these steps carefully to set up your turntable:

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future transport.
2. **Platter Installation:** Place the platter onto the central spindle. Ensure it sits securely and rotates freely.
3. **Motor Placement:** Position the outboard motor unit next to the turntable chassis. The motor pulley should align with the outer rim of the platter.
4. **Drive Belt Installation:** Gently stretch the drive belt around the motor pulley and the outer rim of the platter. Ensure

the belt is not twisted.

5. **Cartridge Installation (if not pre-installed):** If your Sumiko Pearl cartridge is not pre-installed, carefully attach it to the tonearm headshell using the provided screws. Ensure correct alignment.
6. **Counterweight Adjustment:** Slide the counterweight onto the rear of the tonearm. Adjust it until the tonearm floats horizontally. Then, set the tracking force according to the cartridge manufacturer's recommendations (typically 1.8g for Sumiko Pearl). Use a stylus pressure gauge for accuracy.
7. **Anti-skating Adjustment:** Attach the anti-skating weight to the tonearm's anti-skating mechanism. Adjust the setting to match the tracking force.
8. **Connecting to Amplifier:** Connect the removable RCA cables from the turntable's output to the "Phono" input of your amplifier or a dedicated phono preamplifier. Ensure the ground wire is connected between the turntable and your amplifier/preamplifier to minimize hum.



Figure 1: Top view of the Pro-Ject RM 1.3 Turntable, illustrating the platter, outboard motor, and tonearm assembly. This image shows the general layout for component placement.

OPERATING INSTRUCTIONS

1. **Power On:** Connect the power supply to the motor unit and a wall outlet. Press the power button on the motor unit to start the platter rotation.
2. **Select Speed:** Most turntables offer 33 1/3 RPM and 45 RPM. Ensure the correct speed is selected for your record. (Refer to motor unit for speed selection mechanism, typically a switch or belt position change).

3. **Place Record:** Carefully place your vinyl record onto the platter.
4. **Lower Tonearm:** Gently lift the tonearm using the cueing lever. Position the stylus over the desired track on the record. Slowly lower the cueing lever to allow the stylus to descend onto the record groove.
5. **Playback:** The record will now play. Adjust the volume on your amplifier.
6. **Stopping Playback:** At the end of the record, or when you wish to stop, use the cueing lever to lift the tonearm from the record. Return the tonearm to its rest and secure it. Press the power button on the motor unit to stop the platter.

MAINTENANCE

- **Record Cleaning:** Regularly clean your vinyl records using a dedicated record brush or cleaning solution to remove dust and static.
- **Stylus Care:** Use a soft stylus brush to gently clean the stylus tip before and after each play. Brush from back to front. Avoid touching the stylus with your fingers.
- **Turntable Cleaning:** Wipe the turntable chassis and platter with a soft, dry, lint-free cloth. Avoid abrasive cleaners or solvents.
- **Belt Inspection:** Periodically check the drive belt for wear or stretching. Replace if necessary to maintain accurate playback speed.

TROUBLESHOOTING

If you encounter issues with your turntable, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power / Platter not spinning	Power cable disconnected; faulty power supply/motor; power outlet issue.	Ensure power cable is securely connected. Test the power outlet with another device. If the issue persists, contact support.
Humming or buzzing sound	Ground wire not connected; proximity to other electronics; faulty cabling; internal wiring issue.	Ensure the ground wire is securely connected between the turntable and amplifier/preamplifier. Move the turntable away from other electronic devices. Check RCA cables for damage. If hum persists, it may indicate an internal grounding issue requiring professional service.
Distorted sound / Skipping	Incorrect tracking force; worn or dirty stylus; damaged record; incorrect anti-skating.	Re-adjust tracking force and anti-skating. Clean the stylus. Inspect the record for damage. Replace stylus if worn.
Incorrect playback speed	Incorrect speed selection; worn or stretched drive belt.	Verify the correct speed setting. Inspect and replace the drive belt if it appears worn or loose.

SPECIFICATIONS

Feature	Detail
Brand	Pro-Ject

Feature	Detail
Model	RM 1.3
Product Dimensions	15 x 4.33 x 13.78 inches
Item Weight	11.15 pounds
Included Components	Sumiko Pearl Cartridge, removable RCA cables
Motor Type	AC Motor
Signal Format	Analog
Voltage	15 Volts (AC)
Color	Black

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or visit the official Pro-Ject website. For technical support or service inquiries, please contact your authorized Pro-Ject dealer or the manufacturer's customer service department.

Keep your proof of purchase for warranty claims.

© 2023 Pro-Ject. All rights reserved.

Related Documents - RM 1.3

 <p>The Pro-Ject Phono Cartridge and Stylus Care Guide is a comprehensive document designed to help you maintain your Pro-Ject phono cartridge. It includes instructions for cleaning the stylus with Pro-Ject Brush-it, replacing the stylus, and general cartridge care. The guide also provides information on how to clean records and store them properly.</p>	<p>Pro-Ject Phono Cartridge and Stylus Care Guide</p> <p>Learn how to care for your Pro-Ject phono cartridge, including stylus cleaning, record cleaning with Pro-Ject Brush-it, and stylus replacement. This guide covers the essential parts of a phono cartridge and provides instructions for maintenance.</p>
 <p>The Pro-Ject X8 B Turntable: Instructions for Use, Setup, and Specifications is a detailed manual for the X8 B turntable. It covers the setup and installation of the turntable, including the connection of the power source and the turntable itself. The manual also provides information on how to use the turntable, including how to start and stop the turntable, and how to adjust the volume. It also includes a troubleshooting section and a warranty information section.</p>	<p>Pro-Ject X8 B Turntable: Instructions for Use, Setup, and Specifications</p> <p>Comprehensive guide for the Pro-Ject X8 B turntable, covering setup, installation, operation, maintenance, technical specifications, troubleshooting, and warranty information.</p>

 <small>РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ ПРИСПОСОБЛЕНИЕ ДЛЯ РЕГУЛИРОВКИ ЗВУКОСНИМАТЕЛЯ</small>	<p><u>Pro-Ject Align it: Operating Manual for Cartridge Alignment Tool</u></p> <p>Comprehensive guide to using the Pro-Ject Align it cartridge alignment tool for precise tonearm setup and optimal audio performance.</p>
 <small>INSTRUCTIONS FOR USE Pro-Ject T1 / T1 Phono SB / BT</small>	<p><u>Pro-Ject T1, T1 Phono SB, T1 BT Turntable User Manual & Setup Guide</u></p> <p>Comprehensive instructions for setting up, operating, and maintaining your Pro-Ject T1, T1 Phono SB, and T1 BT turntables. Includes technical specifications, troubleshooting, and warranty information.</p>
 <small>INSTRUCTIONS FOR USE X8</small>	<p><u>Pro-Ject X8 Turntable: Instructions for Use and Setup Guide</u></p> <p>Comprehensive instructions for setting up, operating, and maintaining the Pro-Ject X8 turntable, including technical specifications, safety guidelines, and troubleshooting tips.</p>
 <small>INSTRUCTIONS FOR USE Pro-Ject Xtension 9 Evolution</small>	<p><u>Pro-Ject Xtension 9 Evolution Turntable: User Manual and Setup Guide</u></p> <p>Comprehensive instructions for setting up, operating, and maintaining the Pro-Ject Xtension 9 Evolution turntable. Includes detailed guides on cartridge installation, tonearm adjustments, and troubleshooting.</p>

Documents - Pro-Ject – RM 1.3




[pdf] Guide Accessories

GUIDE to TAS BG Vinyl Playback 2010 images theabsolutesound 2020 10 III

S T E R E O M U L T I C H A N N E L A U D I O M U S I C G U I D E to Vinyl Playback
Sponsored by Cardas Audio NEXT page go to: Contents From the Editor On the
Horizon Feature Articles Turntables and Record Players Phono Cartridges Our Top
Picks Vinyl Accessories LPs Contents Features

lang:en score:22 filesize: 35.64 M page_count: 95 document_date: 2010-05-28

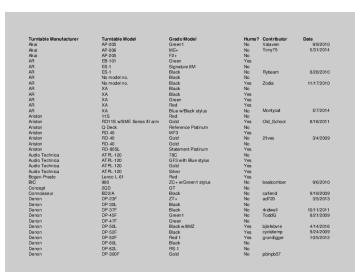

[pdf]

grado hum xlsx Stan Things we do to eliminate — Polk Audio Forum us v cdn net 5021930 editor 6y
px7v9ufita3.iii

Turntable Manufacturer Akai Akai Akai AR Ariston Ariston Ariston Ariston ... -630 PL-707 PL-L800 PL-L1000 PL-L1000 PL-L1000 PLC-590 w/SME 3009 S2 1.2 6.1 Debut III Debut Carbon **RM 1.3** RM-5 RM-5 RM-5 RPM-4 Black Gold Red E1 Red Black D-J100i Black Black Green Blue Black Black

lang:en score:11 filesize: 42.35 K page_count: 13 document_date: 2021-10-06

