

[Manuals.plus](#) /

› [Homebasix](#) /

› HOMEBASIX FT-30 3-Speed Oscillating Table Fan User Manual

Homebasix FT-30

HOMEBASIX FT-30 3-Speed Oscillating Table Fan User Manual

IMPORTANT SAFETY INSTRUCTIONS

Please read and save these important safety instructions before using this fan. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- Always unplug the fan from the power outlet before cleaning, assembling, or disassembling parts.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- This fan is intended for indoor use only. Do not use outdoors.
- Do not immerse fan in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Avoid contact with moving parts. Keep fingers, hair, and clothing away from the fan blades and grill during operation.
- Do not operate the fan in the presence of explosive and/or flammable fumes.
- The fan is UL Listed for safety, indicating compliance with recognized safety standards.

California Proposition 65 Warning: *This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.*

PRODUCT OVERVIEW

The HOMEBASIX FT-30 is a 12-inch, 3-speed oscillating table fan designed to provide personal comfort and air circulation in indoor spaces such as bedrooms and living rooms. It features a compact design with large blades for efficient airflow and a quiet motor. The fan includes easy push-button controls and a durable powder-coated safety grill.



Image: Front view of the HOMEBASIX FT-30 12-inch 3-Speed Oscillating Table Fan. The fan is white with three blades, a protective grill, and a base with four push-button controls.

Key Features:

- **Multiple Speeds:** Offers three speed settings (Low, Medium, High) for personalized comfort.
- **Oscillation:** Provides full 90-degree oscillation to distribute air across a wider area.
- **Adjustable Tilt:** Features an adjustable vertical tilt to direct airflow precisely.
- **Safety Grill:** Equipped with a durable powder-coated safety grill.
- **Compact Design:** Space-saving table fan design.

SETUP AND ASSEMBLY

While the HOMEBASIX FT-30 fan is designed for straightforward setup, some minor assembly may be required to ensure proper function and stability. Please follow these general steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components are present: fan head (motor, blades, grills), base, and any securing hardware.
2. **Attach Base:** Place the fan head onto the base. Align any grooves or holes and secure the fan head to the base using the provided screws or locking mechanism. Ensure it is firmly attached and stable.
3. **Secure Grills:** If the front and rear grills are separate, place the rear grill onto the motor housing, ensuring it aligns with the securing tabs or screws. Then, attach the fan blades to the motor shaft. Finally, place the front grill over the blades and secure both grills together using the clips, screws, or locking ring provided. Ensure the grills are securely fastened to prevent access to the blades.
4. **Position Fan:** Place the assembled fan on a stable, flat surface. Ensure there is adequate space around the fan for proper air circulation and oscillation.

Before plugging in, double-check that all parts are securely fastened and the fan is stable.

OPERATING INSTRUCTIONS

Follow these steps to operate your HOMEBASIX FT-30 Table Fan:

1. **Power Connection:** Plug the fan's power cord into a standard 120V AC electrical outlet.
2. **Adjust Vertical Tilt:** To adjust the vertical angle of the fan head, gently tilt the fan head up or down to your desired position. The fan head will hold its position once adjusted.
3. **Select Fan Speed:** Use the push-button controls located on the fan base to select the desired fan speed. Typically, these buttons are labeled or indicated by their position:
 - **OFF:** Press the '0' or 'OFF' button to turn the fan off.
 - **LOW:** Press the '1' button for low speed.
 - **MEDIUM:** Press the '2' button for medium speed.
 - **HIGH:** Press the '3' button for high speed.
4. **Activate Oscillation:** To enable the oscillation feature (fan head moving side-to-side), locate the oscillation knob or button, usually on the top or rear of the motor housing. Press it down or activate it as indicated. To stop oscillation, pull the knob up or deactivate the button. The fan will then blow air in a fixed direction.

MAINTENANCE

Regular cleaning and proper maintenance will help ensure the longevity and efficient operation of your fan.

- **Cleaning:**
 - Always unplug the fan before cleaning.
 - Use a soft, damp cloth to wipe the exterior surfaces of the fan.
 - To clean the fan blades and inside the grills, you may need to carefully remove the front grill. Refer to the assembly section for guidance on grill removal and reattachment.
 - Do not use abrasive cleaners, waxes, or solvents as these may damage the fan's finish.
 - Ensure all parts are completely dry before plugging the fan back in.
- **Storage:** When not in use for extended periods, store the fan in its original packaging or cover it to protect it from dust. Store in a cool, dry place.

TROUBLESHOOTING

If your HOMEBASIX FT-30 fan is not operating correctly, please check the following common issues before seeking professional assistance:

- **Fan Does Not Turn On:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check if the outlet is receiving power by plugging in another appliance.
 - Verify that the fan speed button is pressed (not in the 'OFF' position).
- **Weak Airflow:**
 - Ensure the fan is set to a higher speed setting.
 - Check for any obstructions blocking the front or rear grills.
 - Clean any dust or debris accumulated on the fan blades or grills.
- **Fan Makes Unusual Noise:**
 - Ensure the fan is placed on a stable, flat surface.
 - Check that all assembly screws and grill fasteners are tight.
 - Inspect the blades for any damage or foreign objects.
- **Oscillation Not Working:**
 - Ensure the oscillation knob or button is correctly engaged.

SPECIFICATIONS

Feature	Specification
Brand	Homebasix
Model Number	FT-30
Electric Fan Design	Table Fan
Color	White
Power Source	Corded Electric
Voltage	120 Volts
Number of Blades	3
Diameter	12 Inches
Special Feature	Oscillating
Control Method	Push Button
Indoor/Outdoor Usage	Indoor
Item Weight	5.1 pounds
Safety Certification	UL Listed
UPC	045734634725

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Manufacturer: ORGILL WWS