

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Orbit](#) /

› [Orbit Underground 57874 4-Zone Indoor Timer Water Irrigation Controller User Manual](#)

Orbit 57874

Orbit Underground 57874 4-Zone Indoor Timer Water Irrigation Controller

Model: 57874

Brand: Orbit

INTRODUCTION

The Orbit Underground 57874 4-Zone Indoor Timer is designed to automate your watering system with ease. Featuring Easy-Set Logic programming, this timer allows for quick setup and efficient irrigation management. Its clear LCD display and intuitive dial simplify programming, making it an ideal solution for managing your garden's watering needs.



Image: The Orbit 57874 4-Zone Indoor Timer, showing its green casing, LCD display, control buttons (Manual, Clear, Rain Delay, Program A-B, directional arrows, Enter), and the central Easy Dial with settings like Date/Clock, Start Time, Run Time, How Often, Budget, Auto, and Off.

SAFETY INFORMATION

- This device is designed for **indoor use only**. Do not expose it to direct outdoor elements or excessive moisture.
- Ensure the power outlet used is easily accessible and properly grounded.
- Disconnect power before performing any maintenance or installation.
- Do not attempt to open or repair the unit yourself. Refer all servicing to qualified personnel.
- Keep out of reach of children.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Orbit 57874 4-Zone Indoor Timer
- User Manual (this document)

SETUP

Installation

1. Select a suitable indoor location near a standard electrical outlet and away from direct sunlight or extreme temperatures.
2. Mount the timer securely to a wall using appropriate screws and anchors (not included). Ensure it is level.
3. Connect the power adapter to the timer and then plug it into the electrical outlet.
4. Connect your irrigation zone wires to the corresponding terminals on the timer. Ensure proper wiring for each zone.

Initial Power-Up and Battery Installation

The timer requires 1 CR2 battery (not included) for backup power to retain programming during power outages.

1. Locate the battery compartment, typically on the side or back of the unit.
2. Insert 1 CR2 battery, observing the correct polarity (+/-).
3. Close the battery compartment securely.

OPERATING INSTRUCTIONS

The Orbit 57874 features an Easy Dial for intuitive programming and a set of control buttons.

Understanding the Easy Dial

Rotate the dial to select the desired programming mode:

- **DATE/CLOCK:** Set the current time and date.
- **START TIME:** Define when watering cycles begin.
- **RUN TIME:** Set the duration for each watering zone.
- **HOW OFTEN:** Specify the frequency of watering (e.g., specific days, every X days).
- **BUDGET:** Adjust watering duration by a percentage for seasonal changes.
- **AUTO:** Normal operation mode where programmed schedules run automatically.
- **OFF:** Turns off all automatic watering.

Setting the Clock and Date

1. Turn the Easy Dial to **DATE/CLOCK**.
2. Use the **+** and **-** buttons to adjust the year, month, day, hour, and minute.
3. Press **ENTER** to confirm each setting and move to the next.
4. Once finished, turn the dial back to **AUTO**.

Programming Watering Schedules

The timer supports a single program for all zones.

1. **Set Start Time:** Turn the dial to **START TIME**. Use **+** and **-** to set the desired start time. Press **ENTER**.
2. **Set Run Time:** Turn the dial to **RUN TIME**. Use the directional arrows to select a zone (1-4). Use **+** and **-** to set the watering duration for that zone (e.g., minutes). Press **ENTER** to save and move to the next zone, or select another zone.
3. **Set How Often:** Turn the dial to **HOW OFTEN**. Use the directional arrows and **+/-** buttons to select watering days (e.g., specific days of the week, or every X days). Press **ENTER** to confirm.
4. Return the dial to **AUTO** for the program to run.

Manual Operation

To manually water a zone:

1. Press the **MANUAL** button.
2. Use the directional arrows to select the zone you wish to water.
3. Use **+** and **-** to set the manual watering duration.
4. Press **ENTER** to start manual watering. The timer will return to **AUTO** mode after the manual cycle completes.

Rain Delay Function

To temporarily suspend watering due to rain:

1. Press the **RAIN DELAY** button.
2. Use **+** and **-** to select the number of days for the delay (e.g., 24, 48, 72 hours).
3. Press **ENTER** to activate the rain delay. The timer will resume its schedule automatically after the delay period.

Clearing Programs

To clear all programmed settings:

- Press and hold the **CLEAR** button for a few seconds until the display indicates that settings have been cleared.

Program A-B (If Applicable)

The Orbit 57874 is specified as a single program timer. The 'Program A-B' button may not be active or may serve a different function on this specific model. Refer to the on-screen prompts if this button is present and active.

MAINTENANCE

- **Cleaning:** Wipe the timer's exterior with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.

- **Battery Replacement:** Replace the CR2 backup battery annually or when the low battery indicator appears on the LCD. Ensure the timer is powered off or unplugged before replacing the battery.
- **Winterization:** If the timer is installed in an area subject to freezing temperatures, disconnect it from power and store it indoors during winter months to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Timer display is blank.	No power; dead backup battery.	Check power connection. Replace CR2 backup battery.
Zones not watering.	Timer in OFF mode; incorrect programming; rain delay active; wiring issue.	Turn dial to AUTO. Verify start times, run times, and frequency. Check if rain delay is active. Inspect wiring connections to zones.
Timer not holding settings.	Dead backup battery.	Replace the CR2 backup battery.
Manual watering not working.	Incorrect zone selection; insufficient duration set.	Ensure correct zone is selected and a duration is set before pressing ENTER.

SPECIFICATIONS

 
Feature	Detail
Model Number	57874
Brand	Orbit
Number of Zones	4
Installation Type	Indoor
Material	Plastic
Color	Green
Item Weight	1.3 Pounds
Product Dimensions	0.79 x 0.74 x 1.33 inches

Feature	Detail
Backup Battery	1 CR2 battery (required)
UPC	046878578746

WARRANTY AND SUPPORT

Orbit products are designed for reliability and durability. For specific warranty details and terms, please refer to the documentation included with your purchase or visit the official Orbit website. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Orbit customer service. You can find more information and contact details by visiting the [Orbit Store on Amazon](#).

Related Documents - 57874

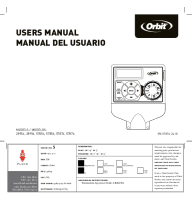	Orbit Easy Dial™ Sprinkler Timer User Manual Comprehensive guide to installing, programming, and operating your Orbit Easy Dial™ sprinkler timer. Features Easy-Set Logic™, manual watering, rain delay, and troubleshooting tips for models 28954, 28956, 57854, 57856, 57874, 57876.
	Orbit Easy Dial™ Sprinkler Timer User Manual Comprehensive user manual for the Orbit Easy Dial™ sprinkler timer, covering installation, programming, features, and troubleshooting for models 28954, 28956, 57854, 57856, 57874, 57876. Learn how to set up, program, and maintain your Orbit irrigation timer.
	Orbit Expandable Watering Timer: Installation and Programming Guide Detailed installation and programming guide for the Orbit Expandable Watering Timer. Covers setup, features like Rain Delay and Manual Watering, troubleshooting tips, and technical specifications for optimal garden irrigation.
	Orbit SunMate Single-Port Digital Timer User Manual and Instructions Comprehensive guide for the Orbit SunMate Single-Port Digital Timer, covering installation, programming, troubleshooting, and specifications. Learn how to set watering schedules, durations, and frequencies for your garden.

	Orbit 94162 Single-Port Digital Hose Faucet Timer: User Manual and Programming Guide Comprehensive instructions for the Orbit 94162 digital hose faucet timer. Covers installation, battery replacement, programming modes (clock, start time, duration, frequency), auto mode, rain delay, manual watering, troubleshooting, and specifications.
	Orbit 56908 Mechanical Water Timer: Operating Instructions Concise guide to operating the Orbit 56908 mechanical water timer, detailing programmed and manual watering modes. Includes component identification and usage instructions.

Documents - Orbit – 57874

 
[\[pdf\]](#) User Manual Quick Start Guide Dimension Guide Guide Catalog

set date quick start guide images thdstatic timer Press maNual—Program will in 5 seconds attach power connector to 24VaC plug on the wiring terminal Note The is intended help you get up and running with your new It includes basic installation programming for more detailed advanced instruction please refer included manual i 2017 4 12 · Press maNual —Program PN 57874 50 rB p 801 295 9820 f 951 5815 MAnuAl Button Function Auto Watering mode SEt CloCk Set calendar 04955b7e cae4 4915 bda f 52c4f42a65b0 1 catalog Images 04 homedepot static orbitonline 80 lib media

1. Select Location Indoor timer quick start guide ing help.

For more detailed and advanced instruction, please refer to the included timer manual. PN **57874**-50 rB Level 24VAC SENSOR COM 1 2 3 4 5 6 Fasten screw through one of the pre-formed mounting ...

lang:en **score:37** filesize: 1.89 M page_count: 2 document date: 2011-09-13

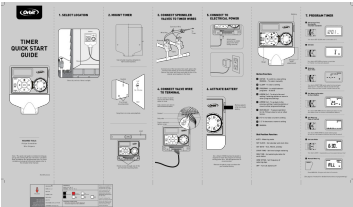


[\[pdf\]](#) User Manual Quick Start Guide Guide

57874 50 rD 1 orbitonline site files manuals

TIMER QUICK START GUIDE 2. MOUNT TIMER REQUIRED TOOLS: Phillips Screwdriver Wire Strippers Note: T C.l.ean. , dry, and out of direct sunlight. PN **57874**-50 rD 24VAC SENSOR COM 1 2 3 4 5 6 Fasten screw through one of the pre-formed mounting holes....

 lang:en **score:34** filesize: 1.45 M page_count: 2 document date: 2014-02-28

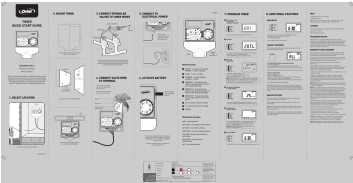


[\[pdf\]](#) User Manual Quick Start Guide Guide

57874 50 rC 6 1 orbitonline 80 site files originals manuals

timer quick start guide 2. Mount Timer Required Tools: Phillips Screwdriver Wire Strippers Note: T C.l.ean. , dry, and out of direct sunlight. PN **57874**-50 rC 24VAC SENSOR COM 1 2 3 4 5 6 Fasten screw through one of the pre-formed mounting holes....

 lang:en **score:32** filesize: 2.03 M page_count: 2 document date: 2012-07-31

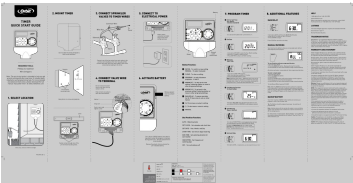


[\[pdf\]](#) User Manual Instructions Specifications Dimension Guide Catalog

Users ManUal del UsUario images thdstatic USERS MANUAL DEL USUARIO DripWorks Manual client Orbit p 801 295 9820 f 951 5815 fluid studio net 1065 South 500 West Bountiful Utah 84010 proof no Printers are responsible for 5 date 09 13 11 des SM sku 57874 upc NA file name 24 rD indd - software InDesign CS5 colors additional instructions Translation Approval Code LB682594 If the distance between sprinkler timer and valves is under 700 210 m use Orbit® wire or 20 gauge AWG plastic jacketed thermostat to Watering Your has ability allow you manually water without disturbing preset program Turn dial AUTO Note run times have not been set will initiate manual watering screen return current time To clock Go site listings This Class B digital apparatus complies with Canadian ICES 003

CLASIFICACIONES Este instrumento clase cumple con el de Canadá 6b19bcf0 3d35 4987 86bd db2da0a3524b orbit easy owners tpstr 1 easydialguide2 2171 TC TCORBEASYDIAL catalog Images 6b dripworks dl id 156 product 1186 mybigcommerce content orbitonline 80 lib media files manuals originals hrproducts au s 2016 07 sunshoweronline image

Users Manual Manual del usuario Models / Modelos: 28954, 28956, 57854, 57856, **57874**, 57876 PN **57874**-24 rD 5 proof no: date: 09.13.11 des: SM client: Orbit sku: **57874** p 801 295 9820 f 801 951 5815 www.fluid-studio.net 1065 South 500 West Bountiful, Utah 84010 upc: NA file name: **57874**-24 rD.i...

 
lang:en **score:30** filesize: 1.5 M page_count: 17 document date: 2011-09-13

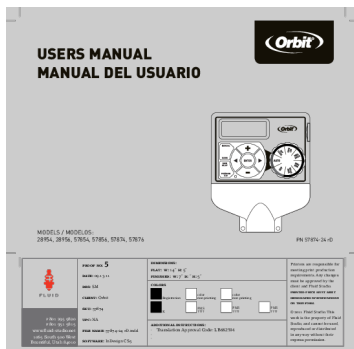

[Orbit Easy Dial™ Sprinkler Timer User Manual](#)

Comprehensive user manual for the Orbit Easy Dial™ sprinkler timer, covering installation, programming, features, and troubleshooting for models 28954, 28956, 57854, 57856, 57874, 57876. Learn how to set up, program, and maintain your Orbit irrigation timer.

 lang:en **score:30** filesize: 1.5 M page_count: 17 document date: 2018-02-19

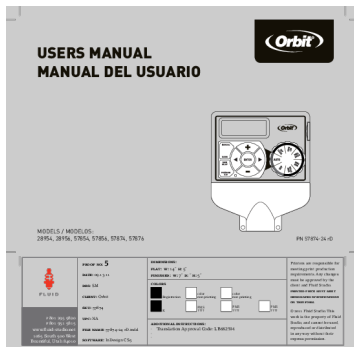



[\[pdf\]](#) User Manual Instructions Specifications Dimension Guide

Provided by ManualsAndMore Download User Manual Orbit Easy Dial 28954 manualsandmore |||

Users Manual Manual del usuario Models / Modelos: 28954, 28956, 57854, 57856, **57874**, 57876 PN **57874**-24 rD 5 proof no: date: 09.13.11 des: SM client: Orbit sku: **57874** p 801 295 9820 f 801 951 5815 www.fluid-studio.net 1065 South 500 West Bountiful, Utah 84010 upc: NA file name: **57874**-24 rD.i...

  lang:en **score:28** filesize: 1.51 M page_count: 17 document date: 2019-07-23

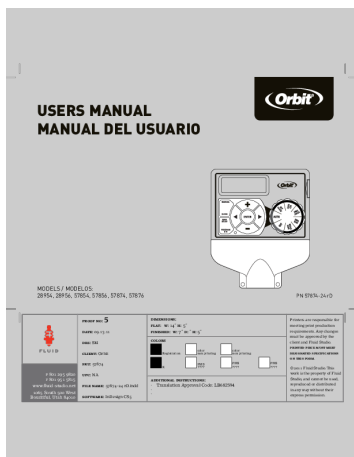

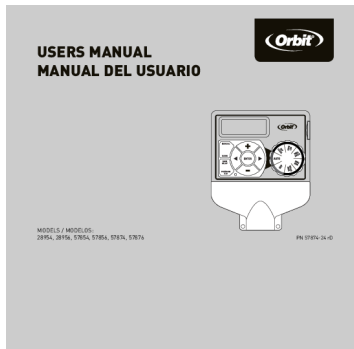


[Orbit Easy Dial™ Sprinkler Timer User Manual](#)

Comprehensive guide to installing, programming, and operating your Orbit Easy Dial™ sprinkler timer. Features Easy-Set Logic™, manual watering, rain delay, and troubleshooting tips for models 28954, 28956, 57854, 57856, 57874, 57876.
lang:en score:27 filesize: 1.5 M page_count: 17 document date: 2013-04-15




[\[pdf\] User Manual Specifications Warranty](#)

ManualsLib Makes it easy to find manuals online! AL 40 hydrobuilder media specs |||
ALITA LINEAR AIR COMPRESSORS OPERATION MAINTENANCE MANUAL
MODELS: AL-30, AL-40, AL-60, AL-80 AL- ... uals search engine Users Manual
Manual del usuario Models / Modelos: 28954, 28956, 57854, 57856, **57874**, 57876 PN
57874-24 rD 5 proof no: date: 09.13.11 des: SM client: Orbit sku: **57874** p 801...
lang:en score:20 filesize: 6.47 M page_count: 66 document date: 0000-00-00

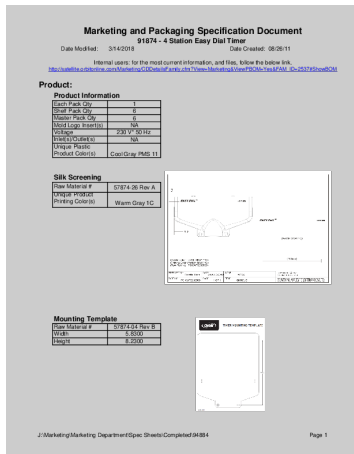 

[\[pdf\] Specifications Tech Sheet](#)

Amy Yamasaki Marketing and Packaging Specification Document Orbit Timer 101114 agrinet co za
media ables Technical Sheets |||
Marketing and Packaging Specification Document 91874 - 4 Station Easy Dial Timer
Date Modified: 3/ ... Product Color s Cool Gray PMS 11 Silk Screening Raw Material #
Unique Product Printing Color s **57874**-26 Rev A Warm Gray 1C Mounting Template
Raw Material # **57874**-04 Rev B Width 5.8300 Heigh...
lang:en score:19 filesize: 715.22 K page_count: 6 document date: 2018-07-04

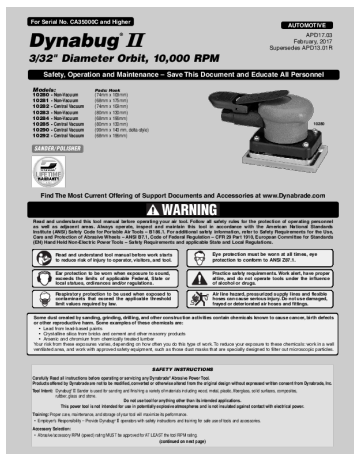 


[\[pdf\] User Manual Declaration of Conformity Accessories](#)

APD17 03 10280 qxp Automotive Michael Roth Dynabug® II Dynabrade User Manual assets unilogcorp 2
ITEM DOC |||
For Serial No. CA35000C and Higher Dynabug II 3/32" Diameter Orbit, 10,000 RPM
AUTOMOTIVE APD17.03 ... 56323 10292 56326 4
Disassembly/Assembly Instructions The Tool Repair Kit **57874** is available. This kit
includes: 56058 Lock Ring Tool, 57092 Repair Collar, 57091 Bearing Pres...
lang:en score:19 filesize: 1.16 M page_count: 8 document date: 2017-01-30

[\[pdf\] User Manual Instructions Specifications Dimension Guide Warranty](#)

 USERS MANUAL DEL USUARIO DripWorks Wait 5 seconds and your station will begin To stop Manual Watering press CLEAR The timer go back to original automatic watering schedule tpstr manual dripworks content srsltid AfmBOooJ4 AOKl4Wpst4x 4Gf5pPDzz sU9Jop2sKjjLsHKWgo11T0 K AfmBOooSbg28XvXTbRooZFAUAPMohWbVsi3bAiL6RrDAJglJeBtzfPFN RAIN DelAY allows you delay sprinkler from for a set period of time After few or by pressing eNtEr the will AfmBOopiTbVQIKslJShO4YaT8VsSiP6OVztr1PNZNwQrAP TnyjM 8cD This product is intended be used as an activating 24 VAC irrigation valves described in this WARRANTY AND AfmBOopWw2O 5AuBX2QmzEir5XJ2GzVCcQocsKL OkCqkRAB6dwpQwTa DripWorksUSERS DripWorksRAIN will Wait scheduleWait scheduleThis AND Press ENTER select day A frame appear around selected days delete previously entered CleAR dripworks 8cDdripworks AfmBOooSbg28XvXTbRooZFAUAPMohWbVsi3bAiL6RrDAJglJeBtzfPFNdripworks Kdripworks OkCqkRAB6dwpQwTadripworks AfmBOop6IRlprgfjBcXgLaWB e4sMtmY 2 yAtPUermM jQyAVd 1aXs Your new provides convenience flexibility letting run fully semi program all watering dripworks 1aXsdripworks AfmBOopi8SzmKxAgH3Bduylxsaskjv KzzRjFGRUlivS zCKq1f c X watering from water infiltration Connecting Sprinkler Wires timedripworks Xdripworks AfmBOorbsQqS y1UebH Z35meDCpMj3oqgWgbbLve1HY SMQB0V2 bGG timeYour using independent programs B are where store settingsdripworks bGGdripworks AfmBOoqu7Jlh36kWN7CcLnfmndr0LqIGhtIDwbXorsK09CuVeeQzPDBt settingsYour settings each dripworks AfmBOoqu7Jlh36kWN7CcLnfmndr0LqIGhtIDwbXorsK09CuVeeQzPDBtdripworks AfmBOop4GARWf8m04ltbZe6M9DzGEB7kq2FiLa heGGL3h0WACvwB8Rc each Your heGGL3h0WACvwB8Rcdripworks AfmBOoqg5M96sl8pNV5es3SlnFxlgywYpSfpTI900 lyOVOsybxZGvT4 watering RAIN Delay 48 72 hours Press <=> lyOVOsybxZGvT4dripworks AfmBOoqRXQ0ysGzuACuAYj934BAR9 S5yIKKiZjc5vl68CESsECscYmz sprinkler If distance over S5yIKKiZjc5vl68CESsECscYmzdripworks AfmBOorSJQKmuH3rY pw9D1qKiGoklCq6fSVXVVHoeK4DsRKg8gFcJy timeFelicitaciones por seleccionar su nuevo temporizador easy Dial™ Con logic™ exclusivo de orbit® la programación y configuración simples se dripworks pw9D1qKiGoklCq6fSVXVVHoeK4DsRKg8gFcJydripworks AfmBOopBXE4eGk3JRB9PDlwVmZzjilfitqdSjmbhjYQbnKyShmTYCttv se This AND dripworks AfmBOopBXE4eGk3JRB9PDlwVmZzjilfitqdSjmbhjYQbnKyShmTYCttVdripworks AfmBOoogXebU2Zk6y5OHmyM hAlbsEm2ldPBclFd4fyve8irg8VfYiY1 AND Congratulations on selecting timer! With orbit s exclusive simple programming setup aredripworks hAlbsEm2ldPBclFd4fyve8irg8VfYiY1dripworks AfmBOoohlvsOJe9SQanugwaMK6LSdZgM pgx4FqgbFM5EIh3N0hXS6D6 areFelicitaciones pgx4FqgbFM5EIh3N0hXS6D6dripworks AfmBOormm p4u0tGflcQMoaWC8LyknM7bNRGXF pz2LM Un3kGj1PO areRAIN Felicitaciones AfmBOopeVnnHYE9CUHczpRqGswL2U50vE7NocJobdGjoxg6nyBJjAL8ddripworks RAIN AfmBOooa85eZL8 zCTbNBnzlxVPoHS8QC8A3IE5SQI9VK3ml2q4 uEjndripworks se Felicitaciones Un3kGj1POdripworks AfmBOoqwT9jkmH8ImS4jafzZ64M9pvPG qC T9gZ4MaNfn7WMahjTQVc T9gZ4MaNfn7WMahjTQVcdripworks AfmBOopWkzcE9m4EtVDjQwoLLBxghA3agCpBM6arghIseNTh 3Hll x AND This AfmBOooqp2DYZN4kxToXdoSM4c8M TBjLo9llmxZBtSHWSwzDZX4hA9ldripworks AfmBOordGg8kKkrXAibA46FzqbdNTZXjlp3d6Tfluh6byabrmWBf703Odripworks xdripworks AfmBOoqt6O6R1z7RD5K4jTRHBsAaFFNekayyNqs kKU5ohKVu0cgNp2C AfmBOosGq2vJ20LkDF9Uko2rrQwV1bkEWPb MJ99Q7XccfJ5h9QCukbdripworks AND RAIN This AfmBOorOZZnuKJ F YkOmpgu515HPvgSMuzUZZTc0DnoX2SeBEN4uQB2dripworks AfmBOoo SdeAwVJhMIKapl1dlNm1vSPS0V oOAdg5cSHKF kZ3oY8aBfzdripworks areTaking wire strip 1 12 mm plastic insulation off Your independent dripworks kKU5ohKVu0cgNp2Cdripworks AfmBOopqNAKh5kCryqMgKhWDDJ2SyVw YhO 915RP29sERPMNaaLo1 l independent Your ldropworks AfmBOop3mF9cVi QabLEaVkr6u k3u i77rmKAmBPd7sY5ul1z0EroX9 settingsThis i77rmKAmBPd7sY5ul1z0EroX9dripworks AfmBOoo2d1vr1MUgReJYhTmTixAqXnjga3eSug950Fei2fsriJfSm78j AfmBOoo2d1vr1MUgReJYhTmTixAqXnjga3eSug950Fei2fsriJfSm78jdripworks AfmBOooN 5LeHXiNV1nCN2HOHo4x7b 69gcVSJZo dNzchFJC3pdCiOl AfmBOop9g7OjAwDBPNrd0la8FfjCQv1UsY2wRa0Efc8cwkp7dEpWMA3Ddripworks

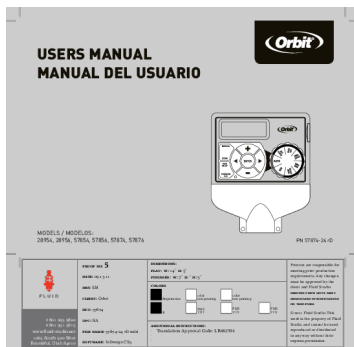

dNzchFJC3pdCioldripworks AfmBOorY5sVYc4LHENHEB6WV7CtcatlF2cMHraVrD2Dms7gRZdtxSJpg
este instrumento digital clase cumple con el ICes 003 de dripworks
AfmBOorY5sVYc4LHENHEB6WV7CtcatlF2cMHraVrD2Dms7gRZdtxSJpgdripworks
AfmBOoqGG9uxf69eo1odLT9QuZ3jHhqj9vKl6xDk6Z1 howMwG3LWJUi de Se recomienda utilizar un
sellador rápido o engrasador Orbit en ambientes húmedos como una caja válvulas para evitar corrosión
conexión para dripworks howMwG3LWJUIdripworks AfmBOoqr3QVJ08E9OXAlaKTHM4F3eL7zsxsnLW
2EqGMZWNVGa062nbE para RAIN the dripworks 2EqGMZWNVGa062nbEdripworks
AfmBOoqjPg4qtY7zX3BMinC1E8NkVgd c4hk4m 2Be QiNIYSdRCd UK the Con se combinan última
tecnología versatilidad temporizadores su dripworks UKdripworks AfmBOoq
8dyHCX7yVAGEHCvM3YSq9jvnsg1 Z4IYA05Tgb27jmUwJcK |||
Users Manual Manual del usuario Models / Modelos: 28954, 28956, 57854, 57856,
57874, 57876 PN **57874**-24 rD 5 proof no: date: 09.13.11 des: SM client: Orbit sku:
57874 p 801 295 9820 f 801 951 5815 www.fluid-studio.net 1065 South 500 West
Bountiful, Utah 84010 upc: NA file name: **57874**-24 rD.i...
lang:en **score:18** filesize: 1.5 M page_count: 17 document date: 2011-09-13



[pdf]
PODRECZNIKA UŻYTKOWNIKA SONY Instrukcja Pocket Ultima irriga pl 2019 05 |||
PODRCZNIKA UYTKOWNIKA MODELE: 28954, 28956, 57854, 57856, **57874**, 57876
5 nr dowodu: CIECZ data: 09.13.11 des: SM P 8OI 295 9820 F 801 951 5815
www.fluid- studio.net 1065 South 500 West Bountiful, Utah 84010 klient: Orbit sku:
57874 upc: N.D. nazwa pliku:**57874**-24 rD.indd oprogramowanie: InDes...
lang:pl **score:14** filesize: 754.28 K page_count: 17 document date: 2012-08-03



[pdf] User Manual Accessories

PD10 01 58500 xqd New muffler black housing and comfort platform Jason Bolis

74642e3a26815219d26d0204b516365e burnstools media wysiwyg |||

For Serial No. 10A1000 and Higher Dynabug II Parts Page Reorder No. PD1001

Effective January, 2010 ... urers warranty is void if the tool is disassembled before the

warranty expires. The Tool Repair Kit **57874** is available. This kit includes: 56058

Lock Ring Tool, 57092 Repair Collar, 57091 Bearing Pres...

lang:en score:10 filesize: 580.75 K page_count: 8 document date: 2010-03-18