

[Manuals.plus](#) /

> [Philips](#) /

> Philips CL015 Universal Remote Control User Manual

Philips CL015

Philips CL015 Universal Remote Control User Manual

Comprehensive guide for setup, operation, and maintenance of your Philips CL015 Universal Remote Control.

INTRODUCTION

The Philips CL015 Universal Remote Control is designed to simplify your home entertainment experience by consolidating the control of multiple audio/video devices into a single unit. This manual provides detailed instructions for setting up, operating, and maintaining your remote control, ensuring optimal performance and ease of use.



This image displays the Philips CL015 Universal Remote Control. It features a silver body with blue and grey buttons. Key sections include device selection buttons (TV, DVD, VCR), a power button, channel and volume controls, a numeric keypad, menu navigation, and media playback buttons (record, play, stop, pause, scan).

SETUP

1. Battery Installation

Before using your remote control, you must install two AAA batteries (not included).

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
3. Close the battery compartment cover securely.

Note: Replace batteries when the remote's indicator light dims or the remote becomes unresponsive.

2. Programming Your Remote Control

The Philips CL015 Universal Remote Control can be programmed to operate various devices using specific codes. There are typically two main methods for programming:

Method A: Direct Code Entry

This method involves entering a specific 3 or 4-digit code for your device's brand directly into the remote.

1. Turn on the device you wish to program (e.g., TV, DVD player).
2. Press and hold the **SET** button (if available, otherwise refer to specific model instructions) and simultaneously press the device button you want to program (e.g., **TV**, **DVD**, **VCR**). The indicator light on the remote should illuminate.
3. While holding the device button, enter the 3 or 4-digit code for your device's brand using the numeric keypad. *(Refer to the code list provided with your remote or available on the Philips support website.)*
4. Release the device button. The indicator light should turn off, indicating the code has been saved.
5. Test the remote by pressing the **POWER** button. If the device turns off, the programming was successful. If not, repeat the process with the next code for your brand.

Method B: Auto Code Search

If you cannot find a code or prefer not to use direct entry, the remote can search for the correct code automatically.

1. Turn on the device you wish to program.
2. Press and hold the **SET** button (if available) and simultaneously press the device button (e.g., **TV**, **DVD**, **VCR**). The indicator light should illuminate.
3. Release the **SET** button.
4. Point the remote at the device and repeatedly press the **POWER** button (or **CHAN+** button) slowly, allowing time for the device to respond. The remote is cycling through codes.
5. Once the device turns off (or changes channel), immediately press the **SET** button to lock in the code. The indicator light should turn off.
6. Test the remote's functions. If not all functions work, repeat the auto search process to find a more compatible code.

OPERATING YOUR REMOTE CONTROL

Once programmed, your Philips CL015 remote can control your devices. Familiarize yourself with the button layout:

- **Device Select Buttons (TV, DVD, VCR):** Press these buttons to select which device the remote will control. The indicator light may flash to confirm selection.
- **POWER:** Turns the selected device on or off.
- **Numeric Keypad (0-9):** Used for direct channel entry or entering programming codes.

- **VOL+/-:** Adjusts the volume of the selected device.
- **CHAN+/-:** Changes channels on the selected device.
- **MUTE:** Mutes or unmutes the audio.
- **MENU / OK / Navigation Arrows:** Used to navigate menus on your TV or DVD player.
- **INPUT / TV/VCR:** Switches between video inputs or TV/VCR modes.
- **Playback Controls (REC, PLAY, STOP, PAUSE, SCAN):** Control media playback functions for DVD players or VCRs.

Always ensure the remote is pointed directly at the device's infrared sensor for proper operation.

MAINTENANCE

Proper care will extend the life of your remote control:

- **Cleaning:** Wipe the remote with a soft, slightly damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries promptly when they are depleted. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as this can damage internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not working / No response from device.	<ul style="list-style-type: none"> Dead or weak batteries. Incorrect device code programmed. Remote not pointed at device. Obstruction between remote and device. 	<ul style="list-style-type: none"> Replace batteries. Re-program the remote using a different code for your device. Ensure direct line of sight to the device's IR sensor. Remove any obstructions.
Only some functions work.	Code is partially compatible.	Try programming with another code from the code list or use the auto code search function again.
Indicator light does not illuminate.	Batteries are dead or incorrectly inserted.	Check battery polarity or replace batteries.

SPECIFICATIONS

Brand	Philips
Model Number	CL015
Connectivity Technology	Infrared
Controller Type	Button Control
Special Feature	Universal

Dimensions (L x W x H)	19.81 x 10.41 x 2.29 cm
Weight	10 g
UPC	609585166790

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Philips support website. Philips provides customer support for product inquiries, troubleshooting assistance, and warranty claims. Please retain your proof of purchase for any warranty-related services.