

Bosch TWK7801

Bosch 1.7 Liter Electric Kettle TWK7801

User Manual

INTRODUCTION

Thank you for choosing the Bosch 1.7 Liter Electric Kettle, model TWK7801. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read these instructions carefully before first use and keep them for future reference.

This electric kettle features a 1.7-liter capacity, 1850-2200 Watts of power, a stainless steel interior base with a concealed heating element, and a removable limescale filter. It also includes a 360-degree rotational base, an external water level indicator, a secure lid, an illuminated on/off switch, automatic shut-off upon boiling, and boil-dry/overheat protection for enhanced safety.

SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent injury or damage:

- **Electrical Safety:** Ensure the voltage indicated on the appliance matches your local mains voltage before connecting. Do not operate the kettle with a damaged cord or plug.
- **Hot Surfaces:** The kettle body, especially the stainless steel parts, becomes very hot during and after operation. Always use the handle to pour water.
- **Water Level:** Do not fill the kettle above the maximum fill line or below the minimum fill line. Overfilling may cause boiling water to spill out, while underfilling can lead to boil-dry damage.
- **Placement:** Place the kettle on a stable, flat, heat-resistant surface, away from the edge of the countertop and out of reach of children.
- **Children and Vulnerable Persons:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- **Cleaning:** Always unplug the kettle and allow it to cool completely before cleaning. Do not immerse the kettle or its base in water or any other liquid.
- **Intended Use:** This appliance is intended for boiling water only. Do not use it for heating other liquids or food.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Bosch electric kettle:

- **Lid:** Hinged lid for easy filling.
- **Handle:** Ergonomically designed for safe pouring.
- **Spout:** Designed for controlled pouring.
- **Water Level Indicator:** Transparent window to view water level.
- **On/Off Switch:** Illuminated switch to start and stop boiling.
- **Power Base:** 360-degree rotational base with cord storage.
- **Limescale Filter:** Removable filter located in the spout.



Figure 1: The kettle's hinged lid, designed for easy opening and closing to facilitate filling and cleaning.



Figure 2: View of the kettle with the lid open, showing the removable limescale filter located within the spout for easy

cleaning and maintenance.



Figure 3: Illustrates the process of filling the kettle with water through the spout, highlighting the convenient design for refilling.



Figure 4: A close-up of the kettle's base, showing the illuminated power switch and the external water level indicator for clear visibility of the water volume.

SETUP

1. **Unpacking:** Carefully remove the kettle and all accessories from the packaging. Dispose of packaging materials responsibly.
2. **First Use Cleaning:** Before using for the first time, fill the kettle with clean water to the maximum level. Boil the water, then discard it. Repeat this process two to three times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, and stable surface. Ensure the power cord is not dangling or in a position where it can be tripped over.

4. **Cord Storage:** The power base has integrated cord storage. Adjust the cord length as needed to keep your countertop tidy.

OPERATING INSTRUCTIONS

1. **Fill the Kettle:** Open the lid and fill the kettle with the desired amount of fresh water. Ensure the water level is between the minimum and maximum marks on the water level indicator. Close the lid securely.
2. **Place on Base:** Position the kettle onto its power base. The 360-degree rotational base allows for easy placement from any angle.
3. **Switch On:** Plug the power base into a suitable electrical outlet. Press the illuminated on/off switch downwards to start the boiling process. The indicator light will illuminate.
4. **Automatic Shut-off:** The kettle will automatically switch off once the water has boiled. The indicator light will turn off.
5. **Pouring:** Carefully lift the kettle from its base and pour the hot water. Be cautious of steam escaping from the spout and lid.
6. **Switch Off Manually:** To stop the boiling process before the water reaches boiling point, simply press the on/off switch upwards.

MAINTENANCE

Regular cleaning and maintenance will prolong the life of your kettle.

Cleaning

- **Exterior:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the finish.
- **Interior:** For general cleaning, rinse the interior with clean water.
- **Limescale Filter:** The removable limescale filter can be detached from the spout for cleaning. Rinse it under running water and gently brush away any deposits. Reattach it securely after cleaning.

Descaling

Limescale buildup can affect the kettle's performance and energy efficiency. Descale your kettle regularly, especially in areas with hard water.

1. Fill the kettle with a mixture of water and a descaling agent (e.g., white vinegar or a commercial descaler) according to the descaler's instructions.
2. Boil the solution and let it stand for the recommended time.
3. Discard the solution and rinse the kettle thoroughly several times with fresh water to remove any residue.

TROUBLESHOOTING

If you encounter issues with your kettle, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Kettle does not switch on.	No power supply; Kettle not properly seated on base; On/off switch not pressed.	Check power outlet and plug; Ensure kettle is correctly placed on the power base; Press the on/off switch firmly.
Water does not boil.	Insufficient water; Limescale buildup.	Ensure water level is above the minimum mark; Descale the kettle.
Kettle switches off too quickly.	Limescale buildup.	Descale the kettle thoroughly.
Water tastes unusual.	First use residues; Limescale buildup.	Perform first use cleaning steps again; Descale the kettle.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand Name	Bosch
Model Name	TWK7801
Model Number	TWK7801
Product Type Name	Electric Kettle
Capacity	1.7 Liters
Power	1850-2200 Watts
Voltage	230 Volts
Material	Stainless Steel
Color	Silver
Finish Type	Silver
Special Features	Water Level Indicator
Care Instructions	Hand wash, Wipe clean
Item Weight	1.4 Kilograms
Manufacturer	Bosch
UPC / GTIN	787162385014
ASIN	B00B6GAKDO

WARRANTY AND SUPPORT

Your Bosch Electric Kettle TWK7801 comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details. For technical support, service, or to inquire about replacement parts, please contact Bosch customer service. Contact information can typically be found on the Bosch official website or in your product documentation.

© 2023 Bosch. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question