

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Coby](#) /

› [Coby LEDTV1956 18.5-inch HD Television User Manual](#)

Coby LEDTV1956

Coby LEDTV1956 18.5-inch HD Television User Manual

Model: LEDTV1956

INTRODUCTION

Thank you for purchasing the Coby LEDTV1956 18.5-inch HD Television. This manual provides essential information for the safe and efficient use of your new television. Please read these instructions thoroughly before operating the device and retain them for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using this television to reduce the risk of fire, electric shock, and injury. Keep the television away from water and moisture. Do not block ventilation openings. Use only attachments/accessories specified by the manufacturer. Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Coby LEDTV1956 18.5-inch HD Television
- Remote Control (with 2 AAA batteries)
- AV Cables
- Power Cord
- User Manual (this document)
- Tabletop Stand (if not pre-assembled)

SETUP

1. Attaching the Stand (Optional)

If your television did not come with the stand pre-attached, carefully place the TV screen-down on a soft, clean surface. Align the stand with the mounting holes on the bottom of the TV and secure it with the provided screws.

2. Wall Mounting (Optional)

This television supports VESA wall mounts with a 200 x 100 mm pattern. Ensure you use a compatible wall mount bracket and follow the instructions provided with the wall mount. Disconnect the tabletop stand before wall mounting.

3. Connecting External Devices

Refer to the rear panel diagram below for connection points. Ensure the TV and all devices are powered off before making connections.



Image: Rear panel of the Coby LEDTV1956 television, displaying input ports including HDMI, VGA, AV, Component, and RF antenna input.

- **HDMI:** Connect a high-definition device (e.g., Blu-ray player, game console) to the HDMI port.
- **AV (Composite Video):** Use the included AV cables to connect standard definition devices (e.g., DVD player, VCR) to the yellow (video), white (left audio), and red (right audio) ports.
- **Component Video (YPbPr/YCbCr):** For higher quality analog video, connect devices using component video cables (green, blue, red for video) and separate audio cables (white, red).
- **PC (D-Sub/VGA):** Connect a computer to the VGA port for video and use the PC Audio In port for audio.
- **RF (Antenna/Cable):** Connect an antenna or cable TV signal to the RF input for over-the-air or basic cable channels.
- **Headphone Out:** Connect headphones for private listening.

4. Power Connection

Plug the power cord into the AC input on the TV and then into a standard electrical outlet (AC 110-240V, 50/60Hz).

5. Remote Control Batteries

Insert the two AAA batteries (included) into the remote control, ensuring correct polarity (+/-).

OPERATING INSTRUCTIONS

1. Powering On/Off

Press the **POWER** button on the remote control or on the TV's side panel to turn the TV on or off.

2. Initial Setup Wizard

Upon first power-on, the TV may guide you through an initial setup wizard. Follow the on-screen prompts to select language, time zone, and perform a channel scan.

3. Channel Scan (ATSC Tuner)

To receive over-the-air digital (ATSC) or analog channels, navigate to the **MENU**, then **Channel Setup**, and select **Auto Scan**. This will search for available channels and store them.

4. Selecting Input Source

Press the **SOURCE** or **INPUT** button on the remote control to cycle through available input sources (HDMI, AV, Component, PC, TV Tuner). Select the input corresponding to your connected device.

5. On-Screen Display (OSD) Menu

Press the **MENU** button on the remote to access the OSD. Use the arrow buttons to navigate and **OK** or **ENTER** to select options. Common menu categories include:

- **Picture:** Adjust brightness, contrast, color, tint, sharpness, and picture mode.
- **Sound:** Adjust volume, bass, treble, balance, and sound mode.
- **Channel:** Perform channel scans, edit channels, and access the Electronic Program Guide (EPG).
- **Time:** Set time, date, and sleep timer.
- **Setup:** Change language, parental controls, and other system settings.

6. Parental Control

The parental control feature allows you to restrict access to certain channels or programs based on ratings. Access this feature through the OSD menu, usually under the **Setup** or **Channel** menu. A password may be required to enable or disable this feature.

7. Electronic Program Guide (EPG)

The EPG provides a schedule of upcoming programs for digital channels. Press the **GUIDE** button on your remote (if available) or access it through the **Channel** menu in the OSD.

MAINTENANCE

1. Cleaning the Screen

Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a screen-cleaning solution specifically designed for televisions. Do not spray liquid directly onto the screen.

2. Cleaning the Cabinet

Wipe the TV cabinet with a soft, dry cloth. Avoid using abrasive cleaners or solvents.

3. Power Saving

The Coby LEDTV1956 is Energy Star certified, indicating its energy efficiency. To further reduce power consumption, turn off the TV when not in use and consider unplugging it during extended periods of inactivity.

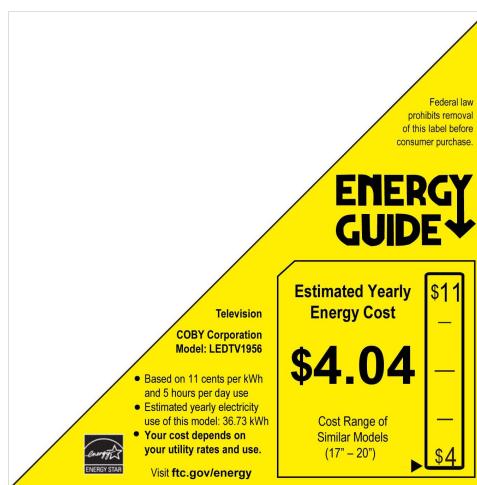


Image: Energy Guide label for the Coby LEDTV1956 television, indicating estimated yearly energy cost and consumption.

TROUBLESHOOTING

Before contacting customer support, please refer to the following common issues and solutions:

- **No Power:**

- Ensure the power cord is securely plugged into both the TV and the electrical outlet.
- Check if the outlet is working by plugging in another device.
- Press the power button on the TV itself, not just the remote.

- **No Picture/No Signal:**

- Verify that the correct input source is selected (e.g., HDMI 1, AV, Component).
- Check all cable connections between the TV and the external device.
- Ensure the external device is powered on and functioning correctly.
- If using an antenna, check antenna connection and perform a channel scan.

- **No Sound:**

- Increase the volume on both the TV and the external device.
- Check if the TV is muted.
- Verify audio cable connections for AV or Component inputs.
- If using HDMI, ensure the audio settings on the external device are correctly configured.

- **Remote Control Not Working:**

- Replace the batteries with new AAA batteries, ensuring correct polarity.
- Ensure there are no obstructions between the remote and the TV's IR sensor.
- Point the remote directly at the TV.

- **Picture Quality Issues:**

- Adjust picture settings (brightness, contrast, sharpness) in the OSD menu.
- Ensure the input source is providing a high-quality signal.

- Check for loose cable connections.

SPECIFICATIONS


Model	LEDTV1956
Screen Size	18.5 inches (47 cm)
Display Type	LCD
Resolution	1366 x 768 pixels (HD Ready)
Aspect Ratio	16:9
Refresh Rate	60 Hz
Response Time	5 ms
Tuner Type	ATSC (Analog and Digital)
Audio Output	6W RMS (2 speakers)
Connectivity	1 x HDMI 1 x Composite Video (AV) 1 x Component Video (YPbPr/YCbCr) 1 x PC (D-Sub/VGA) 1 x PC Audio In 1 x RF Input 1 x Headphone Out
Power Supply	AC 110-240V, 50/60Hz
Power Consumption	Energy Star 6.0 Certified
VESA Mount Compatible	200 x 100 mm
Dimensions (W x H x D)	43.94 cm x 27.94 cm x 4.57 cm (without stand)
Weight	2.72 kg (approx.)
Special Features	Parental Control, OSD, EPG, Noise Reduction, HDCP

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Coby website. For technical support or service inquiries, please contact Coby customer service through their official channels. Keep your purchase receipt as proof of purchase.

Coby Official Website: www.cobyusa.com (Note: This is a placeholder link as no specific support link was provided in the product data.)

Related Documents - LEDTV1956

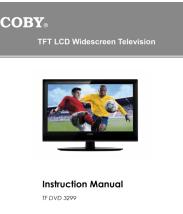 <p>COBY TFT LCD Widescreen Television Instruction Manual TF DVD-3299 Please read this manual carefully before connection and use.</p>	<p>COBY TF DVD 3299 TFT LCD Widescreen Television Instruction Manual Comprehensive instruction manual for the COBY TF DVD 3299 TFT LCD Widescreen Television. Learn about setup, operation, safety, and troubleshooting for your COBY television with integrated DVD player.</p>
 <p>COBY DVD209 The bottom portion of the DVD player Replacement The guide will show you how to safely remove the DVD player in order to access the internal components. Written By: Kyle VanDerveer Page 1 of 4</p>	<p>Coby DVD209 DVD Player Bottom Portion Replacement Guide A step-by-step repair guide from iFixit for replacing the bottom portion of a Coby DVD209 DVD player. Learn how to safely remove screws, disconnect cables, and access internal components.</p>
 <p>COBY MP201 Instruction Manual MP201 EN Coby MP201 USB MP3 Player ES Coby MP201 USB Reproductor MP3 FR Coby MP201 Lecteur MP3 Page 1 of 4</p>	<p>Coby MP201 USB MP3 Player Instruction Manual Comprehensive instruction manual for the Coby MP201 USB MP3 Player, covering setup, features, controls, music playback, software installation, and troubleshooting.</p>
 <p>COBY Digital Photo Frame Alarm Clock Teardown I am going to take apart my working Coby digital photo frame alarm clock to see what's inside of it, and how repairable it is. I bought this one used for \$30.00, when it was nearly \$40.00. I got it for 25% off, and I am going to sell it for 25% off again. I am going to sell it for 25% off again. Written By: Jonathan L. Peeler Page 1 of 4</p>	<p>Coby Digital Photo Frame Alarm Clock Teardown Guide A detailed teardown guide of the Coby Digital Photo Frame Alarm Clock (Model DP356) by iFixit, exploring its internal components and reparability.</p>
 <p>COBY WIRELESS HEADPHONES Instruction Manual CHBT590 MODEL #: CHBT590 </p>	<p>Coby CHBT590 Wireless Headphones Instruction Manual Instruction manual for the Coby CHBT590 Wireless Headphones, covering setup, operation, music controls, and warranty information.</p>
 <p>COBY CETW645 Active Noise Cancelling TWS Earbuds Auriculares TWS con cancelación de ruido With Hi-Res LCD Touchscreen Case Gra / Fone de Ouvido à Bateria LCD de Alta Resolução User Manual Manual De Usuario   01-01-01   01-01-02</p>	<p>CETW645 Active Noise Cancelling TWS Earbuds User Manual User manual for the CETW645 Active Noise Cancelling TWS Earbuds with Hi-Res LCD Touchscreen Case. Learn about powering on/off, pairing, controls, troubleshooting, and specifications.</p>