

## SF NT7982PP04

# SF Venus Digital Watch User Manual

MODEL: NT7982PP04

## 1. Introduction

---

This manual provides comprehensive instructions for the SF Venus Digital Watch, model NT7982PP04. Please read this manual carefully before using your watch to ensure proper operation and longevity. This watch is designed for active lifestyles, featuring a clear digital display and robust construction.

## 2. Product Overview

---

The SF Venus Digital Watch offers multi-functionality with a clear digital display for time, date, alarm, and chronograph features. It is equipped with a comfortable and durable black plastic strap, engineered for lightweight comfort and active wear. The watch provides dependable digital timekeeping for consistent and precise performance.





Figure 1: Front view of the SF Venus Digital Watch, highlighting the digital display and control buttons.

### Watch Components:

- **Display:** Digital screen showing time, date, and other functions.
- **Light Button:** Activates the backlight for visibility in low light conditions.
- **Mode Button:** Cycles through different functions (Time, Date, Alarm, Chronograph).
- **Date Button:** Used for setting the date and other adjustments.
- **Alarm Button:** Used for setting and activating the alarm.



SONATA

ALARM CHRONOGRAPH

DATE

ALARM

WATER RESIST

SU MO TU WETHFRSA

SF

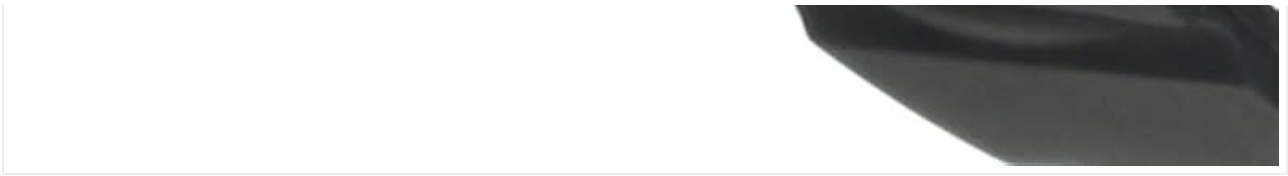


Figure 2: Watch face with button labels and display showing current time.

### 3. Setup

---

#### Initial Power-On:

Your watch comes with a pre-installed AAA battery. If the display is blank, press any button to activate it. If it remains blank, the battery may need replacement (refer to Maintenance section).

#### Setting Time and Date:

1. Press the **MODE** button repeatedly until the time setting mode is displayed (usually indicated by flashing digits).
2. Use the **DATE** or **ALARM** buttons to adjust the hours, minutes, and seconds. The **LIGHT** button may be used to cycle between adjustment fields.
3. Once the time is set, press the **MODE** button again to move to the date setting.
4. Adjust the year, month, and day using the **DATE** or **ALARM** buttons.
5. Press the **MODE** button to exit the setting mode and return to normal time display.

### 4. Operating Instructions

---

#### Basic Functions:

- **Time Display:** The default mode shows the current time (hours, minutes, seconds) and day of the week.
- **Date Display:** From the time display, press the **DATE** button to view the current date.
- **Backlight:** Press the **LIGHT** button to illuminate the display for a few seconds.

#### Alarm Function:

1. Press the **MODE** button until the alarm mode is displayed.
2. Press and hold the **ALARM** button to enter alarm setting mode (digits will flash).
3. Use the **DATE** or **LIGHT** buttons to adjust the alarm hour and minute.
4. Press the **ALARM** button again to confirm and exit setting mode.
5. To activate/deactivate the alarm, press the **ALARM** button briefly in alarm mode. An alarm icon will appear/disappear on the display.

#### Chronograph (Stopwatch) Function:

1. Press the **MODE** button until the chronograph mode is displayed (usually shows '00:00:00').
2. Press the **DATE** button to start the stopwatch.
3. Press the **DATE** button again to pause the stopwatch.
4. To reset the stopwatch, press the **ALARM** button while the stopwatch is paused.
5. Press the **MODE** button to exit chronograph mode.

### 5. Maintenance

---

## Cleaning:

Wipe the watch case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the watch's finish and seals.

## Water Resistance:

This watch is water resistant up to 30 meters (3 ATM). This means it is suitable for daily use and can withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, or diving. Do not operate buttons while the watch is wet or submerged.

## Battery Replacement:

The watch uses 1 AAA battery. When the display becomes dim or functions irregularly, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

## 6. Troubleshooting

---

- **Display is blank:** Check if the battery needs replacement. If recently replaced, ensure it is inserted correctly.
- **Time is incorrect:** Refer to the 'Setting Time and Date' section to reset the time.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though this model does not feature a lock). If wet, dry the watch thoroughly before attempting to use buttons. If issues persist, a battery replacement or professional inspection may be required.
- **Alarm not sounding:** Ensure the alarm function is activated (alarm icon visible on display) and the alarm time is set correctly.

## 7. Specifications

---

<b>Model Number</b>	NT7982PP04
<b>Display Type</b>	Digital
<b>Movement Type</b>	Quartz
<b>Case Diameter</b>	44.5 Millimetres
<b>Case Thickness</b>	14.5 Millimetres
<b>Band Material</b>	Plastic
<b>Band Colour</b>	Black
<b>Water Resistance Depth</b>	30 Metres (3 ATM)
<b>Power Source</b>	Battery Powered (1 AAA)
<b>Special Features</b>	Alarm, Timer
<b>Item Weight</b>	89.44 Grams
<b>Product Dimensions</b>	9.09 x 9.8 x 8.1 cm
<b>Manufacturer</b>	Titan Company Limited
<b>Country of Origin</b>	India



Figure 3: Watch size guide for men's and unisex watches.

## 8. Warranty and Support

---

### Warranty Information:

This product comes with a 6-month manufacturer warranty covering manufacturing defects.

### How to Avail Warranty:

To avail warranty services, present your original purchase invoice at any authorized Titan Service Center. No separate warranty card is required.

### Customer Support:

For further details or service-related queries, please contact Titan India customer support:

- **Toll-Free Number:** 1800-266-0123 (Available 10 AM to 7 PM, all days of the week)
- **Email:** [customercare@titan.co.in](mailto:customercare@titan.co.in)