

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GEWA](#) /

› [GEWA Keyboard Stand KS-30B User Manual](#)

GEWA KS-30B

GEWA Keyboard Stand KS-30B User Manual

Model: KS-30B | Item Model Number: 900544

1. INTRODUCTION

Thank you for choosing the GEWA Keyboard Stand KS-30B. This stand is designed to provide stable and adjustable support for your keyboard instrument. Constructed from high-quality steel tubing, it offers durability and ease of use. This manual provides essential information for the safe assembly, operation, and maintenance of your keyboard stand.





Image 1.1: The GEWA Keyboard Stand KS-30B in its fully assembled, upright position, showcasing its double-braced X-frame design.

2. SAFETY INSTRUCTIONS

- **Maximum Load Capacity:** Do not exceed the maximum load capacity of 30 kg (66 lbs). Overloading can cause instability and damage.
- **Stable Surface:** Always place the stand on a flat, stable, and non-slip surface to prevent tipping.
- **Secure Placement:** Ensure your instrument is securely placed on the stand's support arms.
- **Finger Safety:** Exercise caution when adjusting the stand's height and width to avoid pinching fingers.
- **Children and Pets:** Keep children and pets away from the stand during assembly and adjustment.
- **Regular Inspection:** Periodically check all bolts and adjustment mechanisms for tightness and proper function.

3. PACKAGE CONTENTS

Verify that all components are present before proceeding with assembly:

- GEWA Keyboard Stand KS-30B (pre-assembled main frame)

- Support arms (integrated)
- Adjustment knob (integrated)
- End caps/feet (integrated)

Note: The stand comes largely pre-assembled for convenience.

4. SETUP AND ASSEMBLY

The GEWA KS-30B Keyboard Stand is designed for quick and easy setup. No complex assembly is required.

1. **Unfold the Stand:** Gently pull the two halves of the X-frame apart. The stand will begin to open.
2. **Locate the Adjustment Mechanism:** Identify the central adjustment knob and the interlocking gear mechanism.



Image 4.1: Close-up view of the stand's central adjustment knob and the interlocking gear mechanism, used for setting height and width.

3. **Adjust Height and Width:** Loosen the adjustment knob by turning it counter-clockwise. This will disengage the interlocking gears, allowing you to adjust the stand to your desired height and width. The stand's height and width are inversely related; as height increases, width decreases, and vice-versa.



Image 4.2: Another perspective of the adjustment knob and the gear system, showing how the two X-frame sections connect.

4. **Secure the Adjustment:** Once the desired position is achieved, tighten the adjustment knob by turning it clockwise until it is firm and

the gears are securely engaged. Ensure there is no wobble.

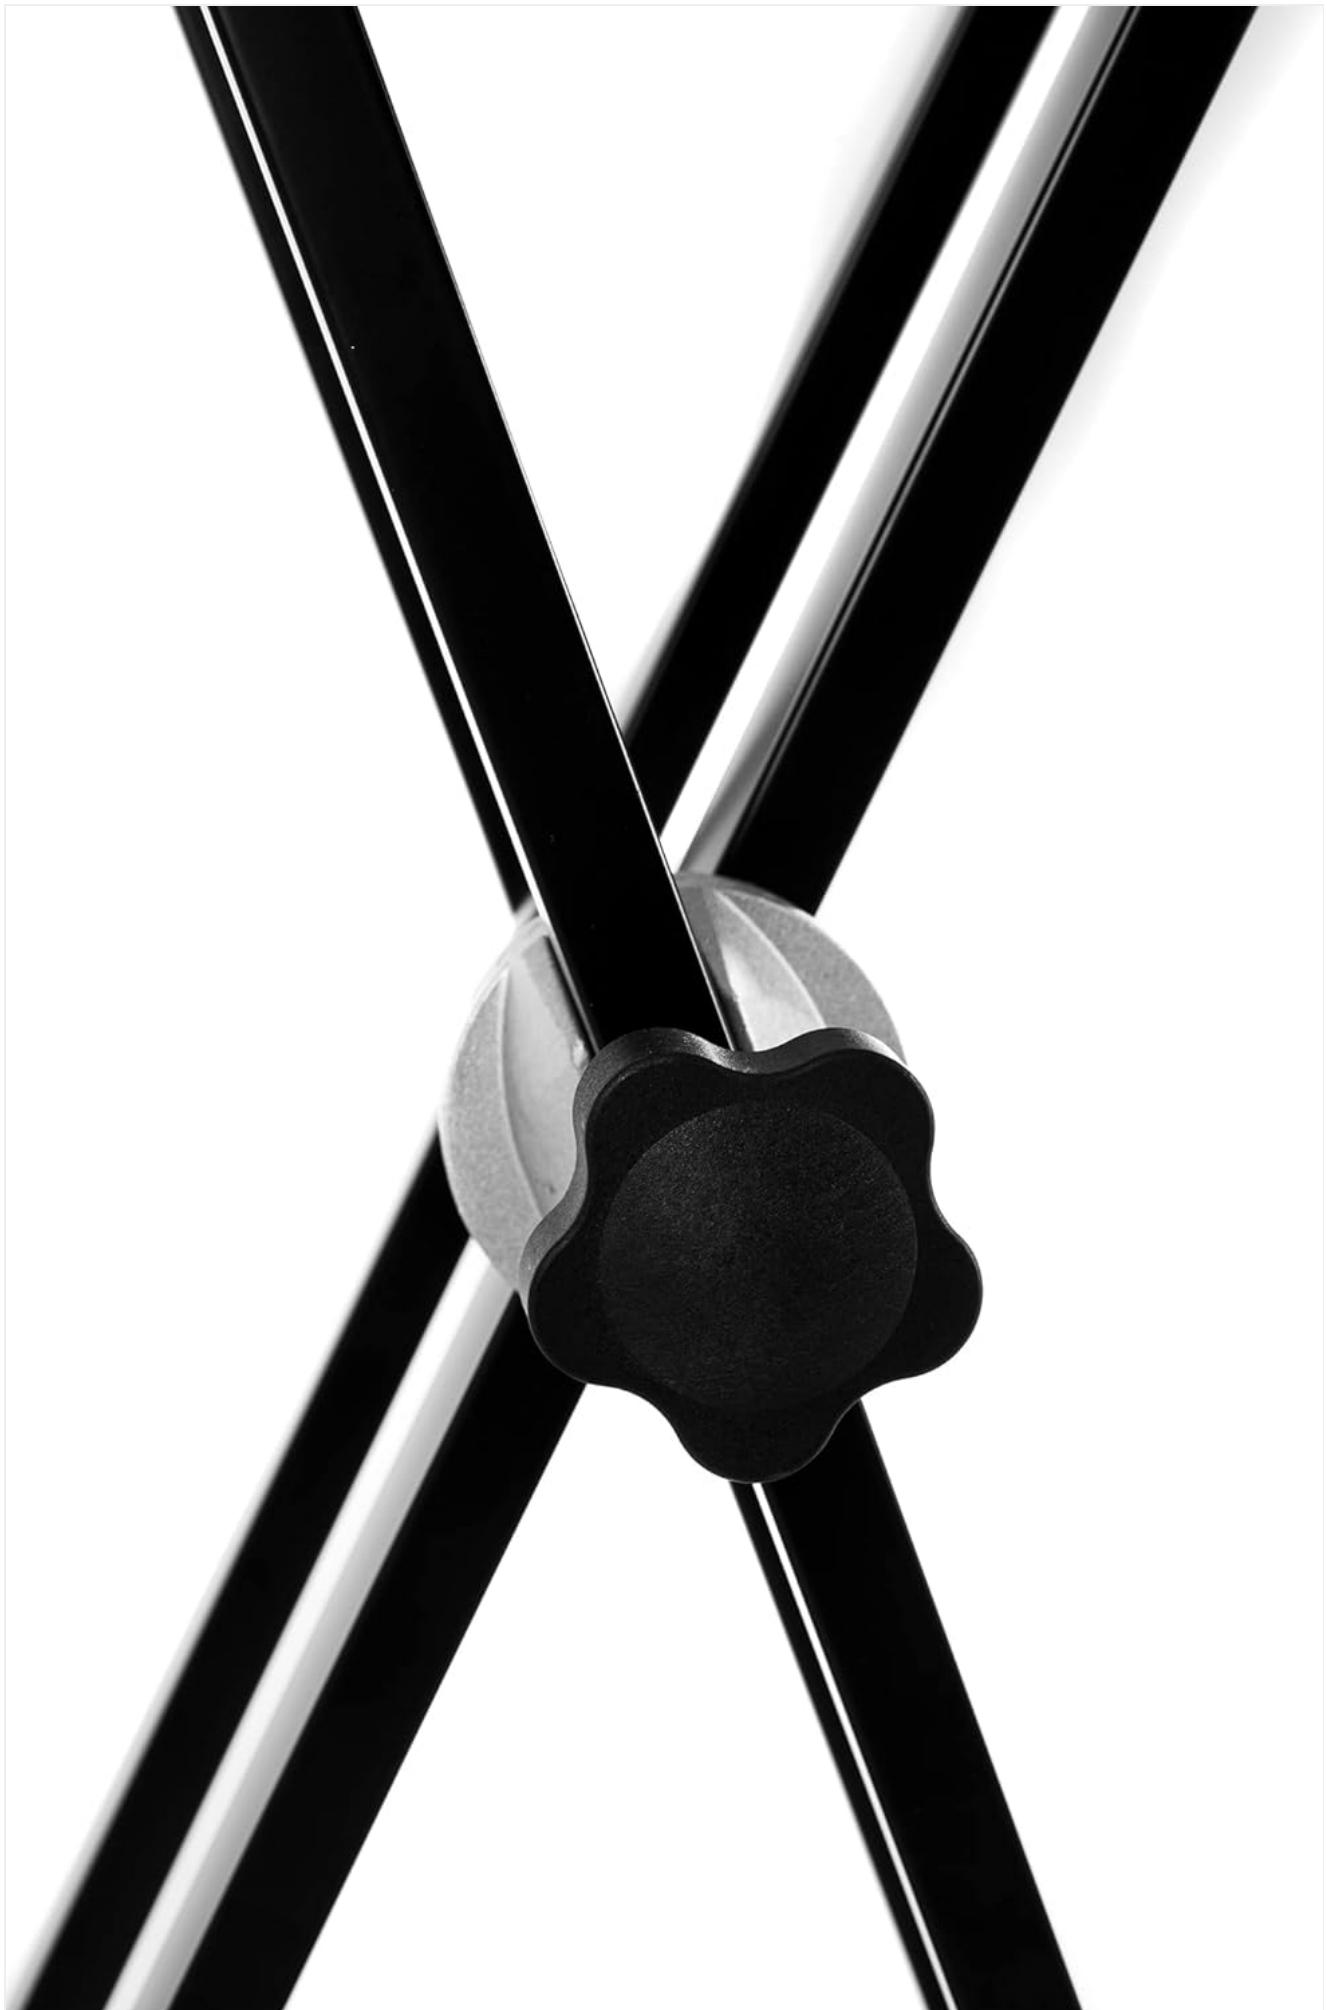


Image 4.3: Frontal view of the adjustment knob, highlighting its ergonomic design for easy grip and turning.

5. **Place Instrument:** Carefully place your keyboard or instrument onto the support arms of the stand. Ensure it is centered and stable.
6. **Check Stability:** Before use, gently test the stand's stability with the instrument in place.

5. OPERATION AND ADJUSTMENT

The GEWA KS-30B allows for flexible adjustment to suit various playing positions and instrument sizes.

- **Height Adjustment:** The stand can be adjusted in height from approximately 70 cm to 100 cm. To change the height, loosen the central knob, move the stand to the desired height, and then firmly tighten the knob.
- **Width Adjustment:** The width of the stand automatically adjusts with the height. A lower height results in a wider stance, and a higher height results in a narrower stance.
- **Folding for Storage:** To fold the stand for storage or transport, remove the instrument, loosen the central knob, and push the two halves of the X-frame together until fully collapsed. Tighten the knob to keep it folded.



Image 5.1: Detail of the protective end cap on one of the stand's feet, designed to prevent scratching floors and provide grip.

6. MAINTENANCE

- **Cleaning:** Wipe the stand with a soft, dry cloth to remove dust and dirt. For stubborn marks, use a slightly damp cloth and mild soap, then dry thoroughly. Avoid abrasive cleaners.
- **Lubrication:** Periodically check the adjustment mechanism. If it becomes stiff, a small amount of silicone-based lubricant can be applied to the moving parts, avoiding contact with the instrument.
- **Storage:** Store the stand in a dry environment, away from extreme temperatures and direct sunlight, to prevent material degradation.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Adjustment knob not fully tightened; uneven surface; overloaded.	Ensure the adjustment knob is firmly tightened. Move the stand to a flat, stable surface. Verify instrument weight does not exceed 30 kg.
Difficulty adjusting height/width.	Adjustment knob too tight; mechanism requires lubrication.	Loosen the adjustment knob completely before attempting to adjust. Apply a small amount of silicone lubricant to the moving parts if stiff.
Stand slides on floor.	Floor surface is too smooth; rubber feet are worn or missing.	Place a non-slip mat under the stand. Check if rubber feet are intact and replace if necessary.

8. SPECIFICATIONS

Model	KS-30B
Item Model Number	900544
Material	High-quality Steel Tube
Color	Black
Adjustable Height	70 cm - 100 cm (approx. 27.5 - 39.4 inches)
Depth of Support Arms	40 cm (approx. 15.7 inches)
Maximum Load Capacity	30 kg (66 lbs)
Item Weight	4 kg (8.8 lbs)
Product Dimensions (Folded)	55 x 7.5 x 102 cm (approx. 21.7 x 3 x 40.2 inches)

9. WARRANTY AND SUPPORT

GEWA products are manufactured to high-quality standards. For specific warranty information, please refer to the warranty card included with your purchase or visit the official GEWA website. For technical support or inquiries, please contact GEWA customer service through their official channels.

Official GEWA Website: www.gewamusic.com

© 2023 GEWA Music. All rights reserved.

Related Documents - KS-30B

 <p>GEWA KEYS</p> <p>USER MANUAL GEWA Digital Piano UP385</p> <p>Before you begin using your User Manual (Model: UP385) Manual de instrucciones www.gewaelectronics.com</p> <p>Keep these operating instructions before use and observe the safety information. Guardar este manual de instrucciones antes de usar y observar las instrucciones de seguridad.</p>	<p>GEWA Digital Piano UP385 User Manual</p> <p>Comprehensive user manual for the GEWA Digital Piano UP385, covering setup, operation, features, and safety. Learn to master your digital piano with detailed instructions from GEWA music.</p>
 <p>GEWA KEYS</p> <p>QUICK START GUIDE GEWA UP355</p> <p>Before you begin using your Quick Start Guide (Model: UP355) Manual de instrucciones www.gewaelectronics.com</p> <p>Keep these operating instructions before use and observe the safety information. Guardar este manual de instrucciones antes de usar y observar las instrucciones de seguridad.</p>	<p>GEWA UP355 Digital Piano Quick Start Guide</p> <p>This quick start guide provides essential information for setting up and using the GEWA UP355 digital piano. It covers safety precautions, package contents, assembly, operation, connections, Bluetooth features, the GEWA Piano Remote App, and technical specifications. Multilingual instructions are included to access the full user manual.</p>
 <p>GEWA KEYS</p> <p>QUICK START GUIDE GEWA PP-3</p> <p>Before you begin using your Quick Start Guide (Model: PP-3) Manual de instrucciones www.gewaelectronics.com</p> <p>Keep these operating instructions before use and observe the safety information. Guardar este manual de instrucciones antes de usar y observar las instrucciones de seguridad.</p>	<p>GEWA PP-3 Digital Piano Quick Start Guide</p> <p>Quick start guide for the GEWA PP-3 digital piano, covering setup, operation, sound selection, Bluetooth connectivity, and app integration.</p>
 <p>DEUTSCH</p> <p>G5 Drum-Modul</p> <p>Modell: G5 Erfolgt die Montage des G5 Drum-Moduls, um die Bedienungsanleitung und technische Spezifikationen zu erhalten. Das Modul kann nicht ohne die Anleitung montiert werden.</p> <p>www.gewaelectronics.com</p>	<p>GEWA G5 Drum-Modul Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für das GEWA G5 Drum-Modul, die Installation, Einrichtung, Bedienung und technische Spezifikationen abdeckt.</p>
 <p>GEWA KEYS</p> <p>USER MANUAL GEWA Digital Piano UP405</p> <p>Before you begin using your User Manual (Model: UP405) Manual de instrucciones www.gewaelectronics.com</p> <p>Keep these operating instructions before use and observe the safety information. Guardar este manual de instrucciones antes de usar y observar las instrucciones de seguridad.</p>	<p>GEWA Digital Piano UP405 User Manual - Features, Setup, and Operation</p> <p>Comprehensive user manual for the GEWA Digital Piano UP405. Learn about setup, operation, features, connectivity, and troubleshooting for your GEWA UP405 digital piano.</p>



[GEWA G3 Drum-Modul Bedienungsanleitung](#)

Umfassende Bedienungsanleitung für das GEWA G3 Drum-Modul von GEWA music GmbH.

Erfahren Sie mehr über Einrichtung, Funktionen, Sicherheit und technische Details dieses digitalen Schlagzeugmoduls.