

[Manuals.plus](#) /

> [Moser](#) /

> MOSER 1400 PLUS Professional Hair Clipper User Manual

## Moser 1400 PLUS

# MOSER 1400 PLUS Professional Hair Clipper User Manual

Model: 1400 PLUS (ELETTRASOIMOS)

## INTRODUCTION

Welcome to the user manual for your new MOSER 1400 PLUS Professional Hair Clipper. This manual provides essential information for the safe and effective use, maintenance, and care of your device. Please read it thoroughly before first use and keep it for future reference.

The MOSER 1400 PLUS is a high-quality, corded electric hair clipper designed for professional and home use, featuring precision-ground blades and a robust motor for consistent performance.



Image: The MOSER 1400 PLUS Professional Hair Clipper along with its included accessories: multiple attachment combs, a cleaning brush, a pair of scissors, and a small bottle of blade oil.

## SAFETY INFORMATION

For your safety and to prevent damage to the appliance, please observe the following precautions:

- Avoid use near water. Do not use the clipper in or near bathtubs, showers, basins, or other vessels containing water.
- Keep blades clean and dry. Regular cleaning prevents hair buildup and ensures optimal cutting performance.
- Supervise children. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Always unplug the clipper from the electrical outlet immediately after use and before cleaning.

- Do not operate the appliance with a damaged cord or plug, or if it malfunctions, or has been dropped or damaged in any manner.
- Use only attachments supplied by the manufacturer.


## SETUP

Before using your MOSER 1400 PLUS clipper for the first time, follow these steps:

1. **Unpacking and Inspection:** Carefully remove all components from the packaging. Inspect the clipper and accessories for any signs of damage. Ensure all listed items are present: the clipper, attachment combs, cleaning brush, scissors, and blade oil.
2. **Attaching Combs:** Select the desired attachment comb for your cutting length. Align the comb with the clipper blade and slide it firmly into place until it clicks. The MOSER 1400 PLUS comes with 4 combs for various lengths.
3. **Power Connection:** Ensure the clipper is switched off before plugging it into a suitable electrical outlet (220-240V ~ 50Hz 10W).

# 1400

# M MOSER

 Incl. 4,5 mm, 6 mm, 9 mm, 14 mm  
Attachment Combs



**EN** Professional stainless steel blade set „Made in Germany“ 0,7-3 mm for precise cutting results • MULTICLICK® cutting length adjustment with 5 pre-set positions • Powerful and robust oscillating armature motor for an extra long service life

**ES** Cabezal de corte profesional en acero especial „Made in Germany“ de 0,7-3 mm para un corte preciso • Ajuste de la longitud de corte MULTICLICK® con 5 posiciones • Accionamiento de ancora oscilante potente y robusto para una vida útil extralarga.

**IT** Testina professionale in acciaio inox „Made in Germany“ 0,7-3 mm per risultati di taglio precisi • Regolazione della lunghezza di taglio MULTICLICK® con 5 posizioni di regolazione • Potente e robusto motore a indotto oscillante per una durata di vita particolarmente elevata.

**UKR** Професійний ніжовий блок з нержавіючої сталі. Зроблено в Німеччині, 0,7-3 мм для точного результату стрижки • Регульована довжина стрижки MULTICLICK® з 5 заданими позиціями • Потужний та надійний двигун постійного струму з діючим якорем для тривалого терміну експлуатації.

**RU** Профессиональный блок ножей из нержавеющей стали качества «Сделано в Германии» 0,7-3 мм для идеально точного результата стрижки • Регулятор длины стрижки MULTICLICK® с 5 положениями фиксации • Мощный и надежный двигатель с якорным движением для максимально длительного срока службы.

**DE** Professioneller Edelstahl-Schnittsatz „Made in Germany“ 0,7-3 mm für präzise Schnittergebnisse • MULTICLICK® Schnittlängenverstellung mit 5 Raststellungen • Kraftvoller und robuster Schwingankermotor für eine extra lange Lebensdauer

**FR** Tête de coupe professionnelle en acier inoxydable « Made in Germany » 0,7-3 mm pour des résultats de coupe précis • Réglage de la longueur de coupe MULTICLICK® avec 5 positions verrouillables • Robuste moteur à armature oscillante pour une durée de vie extra longue.

**NL** Professionele roestvrijstalen snijkop „Made in Germany“ 0,7-3 mm voor precieze snijresultaten • MULTICLICK® snijlengteverstelling met 5 vergrendelstanden • Krachtige en robuuste magneetspoel aandrijving voor een extra lange levensduur.

**PL** Profesjonalny zestaw noży ze stali nierdzewnej „Made in Germany“ 0,7-3 mm do precyzyjnego cięcia • Regulacja długości cięcia MULTICLICK® z 5 pozycjami ustawień • Mocny i wytrzymały silnik obrotowy zapewniający wyjątkowo długą żywotność.



www.tuv.com  
ID 111215634

Image: Rear view of the product packaging for the MOSER 1400 PLUS Professional Hair Clipper, detailing the included accessories and multilingual product information.

## OPERATING INSTRUCTIONS

Follow these instructions for effective use of your hair clipper:

1. **Turning On/Off:** Once plugged in, switch the clipper on using the power switch located on the side of the unit. To turn off, simply toggle the switch to the 'off' position.
2. **Adjusting Cutting Length (MultiClick System):** The MOSER 1400 PLUS features a MultiClick system for precise cutting length adjustment. This lever allows for 5 different positions without an attachment comb, ranging from 0.1mm. When using attachment combs, the lever can be used to fine-tune the length.
3. **Hair Trimming Techniques:**
  - For best results, ensure hair is clean and dry.
  - Start with a longer comb length and gradually reduce it if a shorter cut is desired.
  - Guide the clipper against the direction of hair growth for an even cut.
  - Use smooth, overlapping strokes.
4. **Using Scissors:** The included scissors can be used for detailed trimming, shaping, or for cutting longer hair before using the clipper.



Image: Side view of the MOSER 1400 PLUS Professional Hair Clipper, highlighting the adjustable MultiClick cutting length lever.

## MAINTENANCE

Proper maintenance ensures the longevity and performance of your clipper.

1. **Cleaning Blades:** After each use, switch off and unplug the clipper. Use the provided cleaning brush to remove loose hairs from the blades and the clipper body. For thorough cleaning, the blade set can be removed (refer to manufacturer's specific instructions for blade removal if needed, though not explicitly detailed in provided data).
2. **Oiling Blades:** Regularly oil the blades to maintain their sharpness and smooth operation. Apply a few drops of the included blade oil to the teeth of the blades after cleaning. Turn the clipper on for a few seconds to distribute the oil evenly. Wipe off any excess oil.
3. **Storage:** Store the clipper in a dry place, away from moisture and direct sunlight. Ensure the cord is not tightly wrapped around the clipper to prevent damage.



Image: Close-up image of the MOSER 1400 PLUS Professional Hair Clipper's blade assembly, showing the removable cutting blade and the fixed blade.

## TROUBLESHOOTING

If you encounter issues with your MOSER 1400 PLUS clipper, refer to the table below for common problems and their solutions.

Problem	Possible Cause / Solution
Clipper does not turn on.	<p>Ensure the power cord is securely plugged into a working electrical outlet.</p> <p>Check if the power switch is in the 'on' position.</p> <p>Verify the power outlet is functional by testing with another appliance.</p>
Blades are pulling or snagging hair.	<p>Blades may be dull or misaligned. Consider professional sharpening or blade replacement.</p> <p>Blades may be dirty or lack lubrication. Clean and oil the blades thoroughly.</p> <p>Hair may be too thick or wet. Ensure hair is clean and dry before clipping.</p>
Clipper is unusually noisy or vibrating excessively.	<p>Blades may need oiling. Apply blade oil as per maintenance instructions.</p> <p>Internal components may be loose or damaged. If the issue persists after oiling, contact customer support.</p>
Uneven cutting.	<p>Attachment comb may not be securely attached. Re-attach the comb firmly.</p> <p>Blades may be misaligned. Check blade alignment.</p> <p>Technique may need adjustment. Ensure consistent pressure and angle during clipping.</p>

## SPECIFICATIONS

Feature	Detail
Brand	Moser
Model Name	1400 Starblade
Item Model Number	ELETRASOIMOS
Power Source	Corded Electric
Product Dimensions	9.21 x 2.28 x 6.3 inches; 1.32 Pounds
Included Components	Attachment combs, Cleaning Brush, Clipper, Scissors, Blade Oil
Voltage	220-240V ~ 50Hz 10W (as per packaging)
Manufacturer	WAHL
Date First Available	October 27, 2013



Image: Bottom view of the MOSER 1400 PLUS Professional Hair Clipper packaging, displaying manufacturer details, electrical specifications, and the product barcode (UPC).

## WARRANTY AND SUPPORT

While specific warranty details are not provided in this manual, MOSER products are known for their quality and durability. For warranty information, product registration, or technical support, please contact the manufacturer directly or visit their official website.

**Manufacturer:** WAHL

**Official Website:** [moserpro.com](https://moserpro.com)

**Product Page (example):** [moser-1400.com/1406-0278](https://moser-1400.com/1406-0278)

**UPC:** 4015110000624

## LEGAL DISCLAIMER

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is a hair clipper and is not a dietary supplement.