

[manuals.plus](#) /

- › [Mitsubishi Electric](#) /
- › [Mitsubishi Electric LCD TV Remote Control RL14103 User Manual](#)

Mitsubishi Electric RL14103

Mitsubishi Electric LCD TV Remote Control RL14103 User Manual

Model: RL14103

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Mitsubishi Electric LCD TV Remote Control, model RL14103. Please read this manual thoroughly before using the remote control to ensure proper functionality and to prevent damage.

For optimal performance, ensure the remote control is used within its specified operating range and conditions.

2. PRODUCT OVERVIEW

The Mitsubishi Electric RL14103 is a dedicated remote control designed for Mitsubishi Electric LCD televisions. It features a comprehensive set of buttons for channel selection, volume control, input switching, and menu navigation.



Figure 2.1: Front view of the Mitsubishi Electric RL14103 Remote Control. The remote is silver-colored with various buttons for power, input selection, channel numbers, volume, and menu navigation. The Mitsubishi logo and model number are visible at the bottom.

2.1. Button Layout and Functions

Button Name	Function
Power ()	Turns the TV on or off.
Input Select ()	Switches between different video input sources (e.g., HDMI, AV).
Digital ()	Selects digital broadcast input.
BS/CS	Selects BS (Broadcast Satellite) or CS (Communication Satellite) input.
Analog ()	Selects analog broadcast input.
Number Buttons (1-12)	Direct channel selection.
Channel Up/Down ()	Changes channels sequentially.
Volume Up/Down ()	Adjusts the sound volume.
Mute ()	Mutes or unmutes the TV sound.
Menu ()	Opens the TV's on-screen menu.
Navigation Buttons (Up, Down, Left, Right, OK/)	Navigates through menu options and confirms selections.
Return ()	Goes back to the previous screen or menu level.

Button Name	Function
Color Buttons (Red, Green, Yellow, Blue)	Context-sensitive functions within menus or interactive services.

3. SETUP

3.1. Battery Installation

The RL14103 remote control requires two AAA alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) ends align with the polarity indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Remove batteries if the remote control will not be used for an extended period to prevent leakage.

3.2. Initial Pairing (If Applicable)

This remote control is typically pre-programmed for compatible Mitsubishi Electric LCD TVs and does not require manual pairing. Simply install the batteries and point the remote towards your TV.

If the remote does not respond, ensure there are no obstructions between the remote and the TV's IR receiver, and that the batteries are correctly installed and charged.

4. OPERATING INSTRUCTIONS

4.1. Basic Operation

- **Power On/Off:** Press the **Power** button once to turn the TV on or off.
- **Channel Selection:** Use the **Number Buttons** (1-12) for direct channel access, or the **Channel Up/Down** buttons to browse.
- **Volume Adjustment:** Press the **Volume Up (+)** or **Volume Down (-)** buttons to adjust the sound level. Press **Mute** to temporarily silence the TV.
- **Input Switching:** Press the **Input Select** button to cycle through available input sources (e.g., HDMI 1, AV, Component).

4.2. Menu Navigation

To access and navigate the TV's on-screen menu:

1. Press the **Menu** button to display the main menu.

2. Use the **Navigation Buttons** (Up, Down, Left, Right) to move between menu options.
3. Press the **OK ()** button to select an option or confirm a setting.
4. Press the **Return ()** button to go back to the previous menu or exit the menu system.

5. MAINTENANCE

5.1. Cleaning the Remote Control

To maintain the appearance and functionality of your remote control:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

5.2. Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control does not work.	Dead or incorrectly installed batteries.	Check battery polarity and replace with new AAA batteries.
Remote control range is poor.	Weak batteries; Obstruction between remote and TV.	Replace batteries. Ensure clear line of sight to TV's IR receiver.
Specific buttons not responding.	Button stuck or internal fault.	Clean around the button. If problem persists, contact customer support.
TV does not respond to power button.	TV is unplugged or main power switch is off.	Check TV power connection and main power switch.

7. SPECIFICATIONS

- **Model:** RL14103

- **Brand:** Mitsubishi Electric
- **Compatible Devices:** Mitsubishi LCD Televisions
- **Power Source:** 2 x AAA Alkaline Batteries (not included)
- **Dimensions:** Approximately 24.2 x 6.6 x 3.3 cm (9.5 x 2.6 x 1.3 inches)
- **Weight:** Approximately 0.14 kg (0.31 lbs) (without batteries)
- **Controller Type:** Remote Control
- **ASIN:** B00B9D7XIO

8. WARRANTY AND SUPPORT

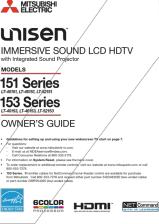
For warranty information and customer support, please refer to the documentation provided with your Mitsubishi Electric television or visit the official Mitsubishi Electric website. You can also contact their customer service directly for assistance with your RL14103 remote control.

Mitsubishi Electric Official Website: www.mitsubishielectric.com

Note: Warranty terms may vary by region and purchase date. Please retain your proof of purchase.

© 2023 Mitsubishi Electric. All rights reserved.
This manual is subject to change without notice.

Related Documents - RL14103

 <p>LCD HIGH-DEFINITION TELEVISION OWNER'S GUIDE WD-62530 WD-52531 WD-62531 OWNER'S GUIDE</p> <p>SCOLOR HDMI ESS Connect</p>	<p>Mitsubishi Unisen LCD HDTV Owner's Guide</p> <p>Comprehensive owner's guide for Mitsubishi Unisen IMMERSIVE SOUND LCD HDTV models 151 and 153 Series, covering setup, features, connections, and operation.</p>

 <p>LCD FLAT PANEL HDTV MODELS LT-46149 LT-52149 OWNER'S GUIDE</p> <p>For further information about your television, visit www.mitsubishi-tv.com or call 1-800-541-8000. For additional information about the Mitsubishi Home Theater System, visit www.mitsubishi-tv.com or call 1-800-541-8000.</p> <p>x.v.Color HDMI NET SimplePlayer</p>	<p>Mitsubishi LT-46149/LT-52149 LCD Flat Panel HDTV Owner's Guide</p> <p>User manual for Mitsubishi LT-46149 and LT-52149 LCD Flat Panel HDTVs. Covers setup, connections, operation, features like 1080p display and Smooth120Hz™ Film Motion, NetCommand IR Control, and troubleshooting. Visit www.mitsubishi-tv.com for support.</p>
 <p>CLICK User Manual</p> <p>MITSUBISHI ELECTRIC</p>	<p>Mitsubishi Electric CLICK Pro User Manual: Image Processing and Printing System Guide</p> <p>Comprehensive user manual for the Mitsubishi Electric CLICK Pro system, detailing image processing, digital camera integration, scanning, Photo ID, index prints, and printing solutions for professional photo services.</p>
 <p>UNISEN IMMERSIVE SOUND LED LCD HDTV with Integrated Sound Projector</p> <p>MODELS 154 Series 164 Series 265 Series</p> <p>OWNER'S GUIDE</p> <p>E COLOR HDMI ScreenTV</p>	<p>Mitsubishi Unisen LED LCD HDTV Owner's Guide</p> <p>Comprehensive owner's guide for Mitsubishi Unisen LED LCD HDTVs (154, 164, 265 Series). Covers setup, features, connections, operation, and troubleshooting for immersive home theater experiences.</p>
 <p>MITSUBISHI ELECTRIC LCD PROJECTOR XL5980U XL5980LU</p> <p>User Manual</p> <p>XL5980</p>	<p>Mitsubishi XL5980U/XL5980LU LCD Projector User Manual</p> <p>User manual for Mitsubishi Electric XL5980U and XL5980LU LCD projectors, covering setup, operation, safety, maintenance, and troubleshooting. Includes detailed specifications and connection guides.</p>