

[Manuals.plus](#) /

› [Nite Ize](#) /

› Nite Ize Inka Mobile Pen and Stylus (IMP-M1-R7) Instruction Manual

## Nite Ize IMP-M1-R7

# Nite Ize Inka Mobile Pen and Stylus (IMP-M1-R7) Instruction Manual

Model: IMP-M1-R7

[Introduction](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

[Support](#)

## 1. INTRODUCTION

The Nite Ize Inka Mobile Pen and Stylus is a versatile writing and touch-screen tool designed for portability and durability. Constructed from polycarbonate and carbon fiber, it offers a lightweight yet robust solution for various environments. This device features a dual function: a ballpoint pen with pressurized, waterproof blue ink, and a capacitive touch-screen stylus. Its compact design allows for easy attachment and quick transformation for use.



Image 1.1: The Nite Ize Inka Mobile Pen and Stylus in its compact, clipped configuration, ready for attachment to a keychain or bag.

## 2. SETUP

---

The Inka Mobile Pen and Stylus is designed for immediate use. No complex assembly is required. To prepare the device for writing or stylus use:

1. **Uncap the desired end:** The device has two capped ends. One end protects the pen tip, and the other protects the stylus tip. Both caps are translucent, allowing visual identification.
2. **Extend for use:** To use the pen or stylus in its full-size configuration, remove the cap from the desired end and firmly snap it onto the opposite end of the pen body. This extends the length of the device for comfortable handling.



Image 2.1: The Inka Mobile Pen and Stylus with one cap removed, illustrating the initial step before extending the device for use.

## 3. OPERATION

---

### 3.1 Using the Pen Function

Once the pen is extended (cap snapped onto the opposite end), the ballpoint pen is ready for writing. The pen utilizes a pressurized cartridge with waterproof blue ink, allowing it to write smoothly and consistently in various conditions, including extreme temperatures, upside down, and at any altitude, even underwater.

- Hold the pen comfortably as you would any standard writing instrument.

- Apply light pressure to write on paper or other surfaces.
- After use, remove the cap from the extended end and place it back over the pen tip to protect it and return the device to its compact form.



Image 3.1: The Inka Mobile Pen fully extended, with the cap securely attached to the stylus end, ready for writing.

### 3.2 Using the Stylus Function

To use the stylus, ensure the stylus end is uncapped and extended. The capacitive stylus is compatible with most touch-screen devices, including smartphones and tablets.

- Gently touch the stylus tip to your device's screen to navigate, select, or write.
- The stylus is ideal for quick notes, navigating menus, or presentations.
- After use, cap the stylus end to protect it and return the device to its compact form.



Image 3.2: A view of the Inka Mobile Pen and Stylus, highlighting both the pen tip and the stylus tip, each protected by a translucent cap.

## 4. MAINTENANCE

---

### 4.1 Cartridge Replacement

The Inka Mobile Pen uses a replaceable pressurized ink cartridge. When the ink runs out or if you wish to change the ink color (if other colors are available from Nite Ize), follow these steps:

1. Unscrew the pen body to separate the two halves.
2. Carefully remove the old ink cartridge from the pen mechanism.

- 3. Insert a new Nite Ize compatible pressurized ink cartridge, ensuring it is seated correctly.
- 4. Screw the pen body halves back together until secure. Do not overtighten.

*Note:* Use only genuine Nite Ize replacement cartridges or compatible pressurized cartridges to ensure optimal performance and waterproof ink properties.

4.2 Cleaning

To clean the exterior of the pen and stylus, wipe with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these may damage the polycarbonate and carbon fiber finish.

5. TROUBLESHOOTING

| Problem                                         | Possible Cause                                            | Solution                                                                                              |
|-------------------------------------------------|-----------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
| Pen does not write or ink flow is inconsistent. | Ink cartridge is empty or dried out.                      | Replace the ink cartridge (refer to Section 4.1).                                                     |
| Stylus is unresponsive on touch screen.         | Screen protector interference or dirty stylus tip/screen. | Ensure screen is clean. Gently wipe stylus tip. Test on another device if possible.                   |
| Cap detaches easily or feels loose.             | Cap not fully snapped into place or wear over time.       | Ensure the cap is firmly snapped onto the pen body. If wear is significant, contact customer support. |

6. SPECIFICATIONS

- **Model Number:** IMP-M1-R7
- **Color:** Black with blue ink
- **Material:** Polycarbonate, Carbon Fiber
- **Item Weight:** 27.22 g
- **Item Dimensions (L x W x H):** 7.5 x 0.5 x 4.1 inches (compact)
- **Ink Type:** Pressurized, waterproof blue ink
- **Stylus Type:** Capacitive touch-screen
- **Compatible Devices (Stylus):** Tablets, smartphones (e.g., Amazon Fire 7 5th Generation, Amazon Fire HD 10 5th Generation, Amazon Fire HD 8 5th Generation)
- **Unit Count:** 1 Count

7. WARRANTY INFORMATION

All Nite Ize products purchased from authorized resellers are backed by our Worry-Free Guarantee. For detailed information regarding warranty coverage, terms, and conditions, please refer to the official Nite Ize website or contact customer support.

8. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your Nite Ize Inka Mobile Pen and Stylus, please visit the official Nite Ize website or contact their customer service department.

- **Manufacturer:** Nite Ize
- **Website:** [www.niteize.com](http://www.niteize.com)

Please have your product model number (IMP-M1-R7) available when contacting support.

**ASK A QUESTION ABOUT THIS MANUAL**

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question