

Esschert Design TF008

Esschert Design Large Plastic Outdoor Clock and Thermometer Manual

Model: TF008

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Esschert Design Large Plastic Outdoor Clock and Thermometer, model TF008. This device is designed to display time, temperature, and humidity, making it a functional addition to your indoor or outdoor space.

Key features include:

- Integrated clock, thermometer, and hydrometer.
- Suitable for both indoor and outdoor wall placement.
- Durable plastic construction.
- Large, easy-to-read analog display.

PACKAGE CONTENTS

- Esschert Design Large Plastic Outdoor Clock and Thermometer (Model TF008)
- Instruction Manual (this document)

Note: Batteries are not included and must be purchased separately.

SETUP AND INSTALLATION

1. Battery Installation

1. Locate the battery compartment cover on the back of the unit.
2. Twist the cover counter-clockwise to open.
3. Insert one (1) AA battery (not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the cover and twist clockwise to secure.



Image: Rear view of the clock, highlighting the central battery compartment and the triangular mounting hook.

2. Setting the Time

1. After installing the battery, locate the time-setting knob on the back of the clock, usually near the battery compartment.
2. Rotate the knob to adjust the clock hands to the correct time.

3. Mounting the Unit

1. Choose a suitable location for mounting. For accurate temperature and humidity readings, avoid direct sunlight or areas with extreme temperature fluctuations.
2. Securely fasten a screw or hook into the wall at your desired height.
3. Hang the clock using the keyhole slot located on the back of the unit. Ensure it is stable and level.



Image: Front view of the Esschert Design Large Plastic Outdoor Clock and Thermometer, displaying time, temperature, and humidity dials.

OPERATING INSTRUCTIONS

Your Esschert Design clock and thermometer operates continuously once the battery is installed and the time is set. No further adjustments are typically required for the thermometer or hydrometer, as they are mechanical and react to ambient conditions.

- **Clock:** Displays time in a 12-hour analog format.
- **Thermometer:** Measures ambient temperature in both Celsius and Fahrenheit.
- **Hydrometer:** Measures relative humidity as a percentage.



Image: Angled view of the Esschert Design Large Plastic Outdoor Clock and Thermometer, showcasing its depth and design.

MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the finish or display.
- **Battery Replacement:** Replace the AA battery annually or when the clock hands stop moving. Follow the battery installation steps outlined in the "Setup and Installation" section.
- **Placement:** Periodically check the mounting to ensure the unit remains securely attached to the wall.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Clock not keeping time or stopped	Dead or low battery; improperly installed battery.	Replace the battery with a fresh AA battery, ensuring correct polarity.
Inaccurate temperature/humidity readings	Unit placed in direct sunlight, near a heat source, or in an area with poor air circulation.	Relocate the unit to a shaded area, away from direct heat sources or vents, and where air can circulate freely. Allow time for readings to stabilize.
Condensation inside the display	High humidity or rapid temperature changes.	This is usually temporary and should clear as conditions stabilize. Ensure the unit is not exposed to extreme weather conditions.

SPECIFICATIONS

- **Model:** TF008
- **Brand:** Esschert Design
- **Material:** Plastic
- **Color:** Brown frame, Beige dial
- **Display Type:** Analog
- **Functions:** Clock, Thermometer, Hydrometer
- **Power Source:** 1 x AA Battery (not included)
- **Mounting Type:** Wall Mount
- **Product Dimensions:** Approximately 14.96 inches (Height) x 14.96 inches (Width) x 2.36 inches (Depth)
- **Item Weight:** Approximately 2.51 pounds
- **Indoor/Outdoor Usage:** Suitable for both indoor and outdoor environments.

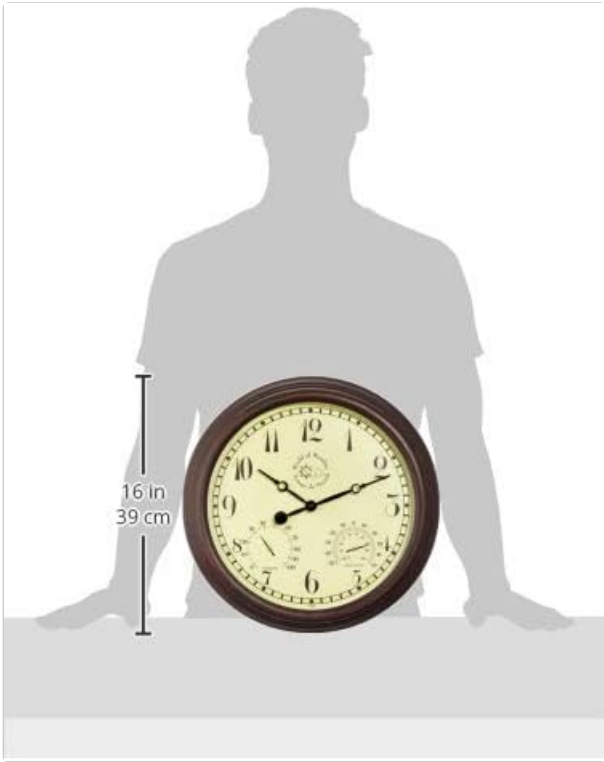


Image: Dimensional diagram illustrating the approximate size of the clock. Note: The diagram indicates a height of 16 inches (39 cm), which is consistent with the product's large size.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the Esschert Design official website or contact their customer service department. Keep your purchase receipt as proof of purchase.

Manufacturer: Esschert Design USA, LLC