

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Wahl](#) /

> [Wahl Lithium Ion Pro Series Cordless Animal Clippers - Model 9766 User Manual](#)

## Wahl 9766

# Wahl Lithium Ion Pro Series Cordless Animal Clippers - Model 9766 User Manual

Brand: Wahl | Model: 9766

## 1. INTRODUCTION AND OVERVIEW

The Wahl Lithium Ion Pro Series Cordless Animal Clippers, Model 9766, is a rechargeable, heavy-duty electric grooming tool designed for both small and large breeds with various coat types, from thick to heavy. This cordless clipper offers flexibility and convenience for at-home pet grooming.

Key features include:

- **Cordless Operation:** Provides up to 120 minutes of run time on a full charge, allowing for multiple grooming sessions without being tethered to an outlet.
- **Self-Sharpening Precision Blades:** High-carbon stainless steel blades are designed for snag-free cutting and maintain sharpness for consistent grooming performance.
- **Quick Charge Capability:** A 15-minute quick charge provides instant power for immediate use, with a full charge achieved in 3-5 hours. The lithium-ion battery retains its charge for up to a year.
- **Comprehensive Grooming Kit:** Includes various attachment guards for different coat lengths, a finishing comb, scissors, blade oil, and a cleaning brush.

## 2. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- Wahl Lithium Ion Pro Series Clipper
- Blade Guard
- Charger/Power Cord
- Hard Storage Case
- Styling Comb
- Cleaning Brush
- Blade Oil
- Scissors
- Guide Combs:
  - No. 1 - 1/8" (3mm)
  - No. 2 - 1/4" (6mm)

- No. 3 - 3/8" (10mm)
- No. 4 - 1/2" (13mm)



Image: All components included in the Wahl Lithium Ion Pro Series Clipper Kit. This includes the clipper, various guide combs, scissors, a comb, blade oil, a cleaning brush, charger, and a hard storage case.

### 3. SETUP

#### 3.1 Initial Charge

Before first use, fully charge the clipper. Connect the charger to the clipper and plug it into a standard electrical outlet. A full charge typically takes 3-5 hours. The lithium-ion battery is designed to hold its charge for an extended period.

#### 3.2 Blade Preparation

Prior to each use, apply a few drops of the included blade oil to the blades. This ensures smooth operation and prolongs blade life. Wipe off any excess oil.

#### 3.3 Attaching Guide Combs

Select the desired guide comb based on the coat length you wish to achieve. The kit includes color-coded guide combs for easy identification (1/8", 1/4", 3/8", 1/2"). Align the comb with the clipper blade and snap it

securely into place. Ensure it is firmly attached before beginning grooming.



Image: Close-up view of the Wahl Lithium Ion Pro Series Clipper, highlighting the precision blade and charging indicator light.

## 4. OPERATING INSTRUCTIONS

### 4.1 Preparing Your Pet

Ensure your pet's coat is clean, dry, and free of tangles or mats. Brushing the coat thoroughly before clipping will help achieve a smoother, more even cut and prevent blade snagging.

### 4.2 Grooming Technique

- Turn on the clipper using the power switch.
- Hold the clipper firmly and move it in the direction of hair growth (with the grain) for pets. This helps prevent irritation and provides a natural finish.
- Use long, even strokes. Avoid pressing too hard against the skin.
- Regularly clear hair from the blades and guide comb during grooming to maintain cutting efficiency.
- For sensitive areas, exercise extra caution and consider using a longer guide comb or scissors.



Image: A Wahl clipper being used to groom a small, light-colored dog's head, demonstrating proper handling during grooming.

## 5. MAINTENANCE

### 5.1 Cleaning the Blades

After each use, turn off the clipper and remove the guide comb. Use the provided cleaning brush to remove any trapped hair from the blades. For thorough cleaning, the blades can be detached (refer to the full user guide for specific instructions) and rinsed under water, ensuring they are completely dry before reattaching.

### 5.2 Oiling the Blades

Regularly oil the blades with the included blade oil. Apply 2-3 drops across the top of the blades and 1 drop on each side of the blade set. Run the clipper for a few seconds to distribute the oil, then wipe off any excess. This lubrication is crucial for maintaining cutting performance and preventing rust.

### 5.3 Storage

Store the clipper and all accessories in the hard storage case in a cool, dry place. Ensure the blade guard is in place to protect the blades when not in use.

## 6. TROUBLESHOOTING

- **Clipper not turning on:** Ensure the clipper is fully charged. If it has been stored for a long time, it may require a full charge cycle.
- **Blades snagging or pulling hair:** This is often due to dull blades, insufficient oiling, or a dirty blade. Clean and oil the blades. Ensure the pet's coat is clean, dry, and detangled. If issues persist, blades may need replacement.
- **Clipper getting warm:** It is normal for clippers to generate some heat during extended use. Ensure blades are clean and well-oiled. If the clipper becomes excessively hot, turn it off and allow it to cool down before resuming use.
- **Excessive noise:** Ensure blades are properly aligned and oiled. Loose components can also cause increased noise.

If you encounter issues not covered here, please refer to the Warranty and Support section for contact information.

## 7. SPECIFICATIONS

Specification	Detail
Model Number	9766
Power Source	Battery Powered (Lithium-Ion)
Blade Material	Stainless Steel
Charging Time	3-5 Hours (15-minute quick charge available)
Run Time	Up to 120 minutes
Item Weight	1.6 Pounds
Product Dimensions	3 x 9.13 x 10 inches
Color	Black, Silver
Manufacturer	Wahl Clipper Corp.

## 8. SAFETY INFORMATION

- Always ensure the product is clean and free of any foreign particles before use.
- Do not use the clipper on wet hair or fur. The pet's coat must be completely dry.
- Keep the clipper away from water or other liquids.
- Do not attempt to disassemble or repair the clipper yourself. Refer to qualified service personnel.
- Keep out of reach of children and pets when not in use.
- Unplug the charger from the outlet when not charging.

## 9. WARRANTY AND SUPPORT

Wahl is a USA-based company committed to providing quality products and service. For any product-related issues or inquiries, please reach out directly to Wahl. Contact information can typically be found on the product packaging and in the included instruction booklet.

For product tutorials and additional guidance, visit the official Wahl website, [wahlusa.com](http://wahlusa.com), and navigate to

the relevant 'How To' sections under each main category.