

Honda 15400-PLM-A01PE

Genuine Honda Marine BF75-BF225 Outboard Oil Filter User Manual

Model: 15400-PLM-A01PE

INTRODUCTION

This manual provides essential instructions for the proper installation and maintenance of your Genuine Honda Marine Outboard Oil Filter, model 15400-PLM-A01PE. This oil filter is designed for use with Honda Marine BF75-BF225 series outboard engines to ensure optimal engine performance and longevity. Adhering to these guidelines will help maintain the integrity of your engine's lubrication system.

SETUP AND INSTALLATION

Before beginning installation, ensure the engine is cool and the boat is securely moored or on a stable surface. Always wear appropriate safety gear, including gloves and eye protection. Refer to your engine's service manual for specific oil change procedures and safety precautions.

- Clean Seating Area:** Thoroughly clean the oil filter seating area on the engine block to remove any old gasket material, dirt, or debris. A clean surface is crucial for a proper seal.
- Lubricate Gasket:** Apply a light coat of clean engine oil to the rubber gasket of the new oil filter. This lubrication helps ensure a smooth installation and proper sealing.
- Install Filter:** Thread the new oil filter onto the engine by hand until the gasket makes contact with the engine block. Then, tighten the filter an additional 3/4 to 1 full turn. Alternatively, tighten to the specified torque of 10-14 ft-lbs (1.0-1.4 kgf-m or 7.5-10 Nm) if using a torque wrench. Do not overtighten.
- Fill Oil and Check for Leaks:** Refill the engine with the recommended amount and type of engine oil. Start the engine and allow it to run for a few minutes. Carefully check around the new oil filter for any signs of oil leaks. If leaks are detected, shut off the engine immediately and re-check the installation.



Image: Genuine Honda Marine Outboard Oil Filter. The filter's side displays fitting instructions: 1. Clean seating area on engine. 2. Lightly oil new filter gasket. 3. Tighten using specified torque (10-14 ft-lbs / 7.5-10 Nm). 4. Fill oil, start engine, and check for leaks. The Honda logo is also visible.

Regular oil filter replacement is a critical part of routine engine maintenance. Consult your Honda Marine outboard engine's service manual for the recommended oil and filter change intervals. Typically, oil filters should be replaced at least once per season or every 100 hours of operation, whichever comes first. Using genuine Honda parts ensures compatibility and performance.

SPECIFICATIONS


 


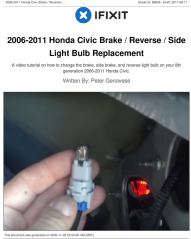
 
Brand	Honda
OEM Part Number	15400-PLM-A01PE
Item Model Number	15400-PLM-A02PE
Material	Cellulose, Steel
Product Grade	Performance Part
Vehicle Service Type	Personal Watercraft (Outboard Engines)
Item Dimensions (L x W x H)	12 x 4 x 10 inches
Item Weight	7.2 ounces
UPC	659682564036

TROUBLESHOOTING

- Oil Leaks After Installation:** If oil leaks are observed, immediately shut down the engine. Re-check that the old gasket material has been completely removed from the engine block. Ensure the new filter gasket was properly lubricated and the filter is tightened to the correct specification. Do not overtighten.
- Difficulty Threading Filter:** Ensure the filter is aligned correctly with the engine's mounting stud. Do not force the filter; cross-threading can damage the engine block. If difficulty persists, inspect the threads on both the filter and the engine.
- Engine Oil Pressure Warning:** If an oil pressure warning light illuminates after an oil and filter change, immediately shut off the engine. Check the oil level and ensure the filter is correctly installed and sealed. Consult a qualified marine technician if the issue persists.

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Genuine Honda Marine Outboard Oil Filter, please refer to the documentation provided with your Honda outboard engine or contact an authorized Honda Marine dealer. Always use genuine Honda parts for optimal performance and to maintain warranty validity.

	<p>Honda Carburetion Manual: Assembly, Adjustment, and Specifications for Marine Outboard Engines</p> <p>A comprehensive service manual detailing the assembly, adjustment, troubleshooting, and specifications for Honda Marine carburetor systems across various BF series outboard engine models. Includes safety precautions and technical diagrams.</p>
	<p>Honda BF5A Outboard Motor Owner's Manual</p> <p>Comprehensive owner's manual for the Honda BF5A outboard motor, detailing safe operation, installation, maintenance, and troubleshooting procedures. Includes information for US and Canadian models.</p>
	<p>Honda BF25A/30A Outboard Motor Owner's Manual</p> <p>Comprehensive owner's manual for Honda BF25A and BF30A outboard motors, covering operation, safety, installation, maintenance, troubleshooting, and specifications.</p>
	<p>Honda NMEA 2000 Digital Tachometer & Speedometer Operating Instructions</p> <p>Operating instructions for the Honda NMEA 2000 Digital Tachometer and Speedometer, covering system setup, user interface, alarms, ECO mode, and trim adjustments for Honda marine engines.</p>
	<p>2006-2011 Honda Civic Brake, Reverse, and Side Light Bulb Replacement Guide</p> <p>A step-by-step guide from iFixit on how to replace the brake, reverse, and side light bulbs for the 8th generation 2006-2011 Honda Civic.</p>
	<p>Honda BF4A, BF5D, BF6A Outboard Motor Owner's Manual</p> <p>Comprehensive owner's manual for Honda BF4A, BF5D, and BF6A outboard motors, covering safety, operation, maintenance, troubleshooting, and specifications. Includes US and Canadian models.</p>