



Manuals.plus /

› Samsung /

› Samsung UN19F4000 19-Inch 720p LED TV User Manual

## Samsung UN19F4000

# Samsung UN19F4000 19-Inch 720p LED TV User Manual

Model: UN19F4000 | Brand: Samsung

## INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your Samsung UN19F4000 19-Inch 720p LED TV. Please read this manual thoroughly before operating your television and retain it for future reference.

## SAFETY INFORMATION

Always follow basic safety precautions when using this television to reduce the risk of fire, electric shock, and injury.

- Do not expose the TV to rain or moisture.
- Do not block ventilation openings. Ensure adequate space around the TV for proper airflow.
- Do not place the TV on an unstable cart, stand, tripod, bracket, or table.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

## WHAT'S IN THE BOX

Verify that the following items are included with your Samsung UN19F4000 TV:

- Samsung UN19F4000 19-Inch 720p LED TV
- TV Stand
- Standard Remote Control (requires 2 AA batteries, included)

 
- Power Cord

 
## SETUP

---

### 1. Attaching the Stand

Carefully place the TV screen-down on a soft, clean surface to prevent damage. Align the stand with the mounting holes on the bottom of the TV. Secure the stand using the provided screws. If the stand feels wobbly, adding small washers to the screws can improve stability.

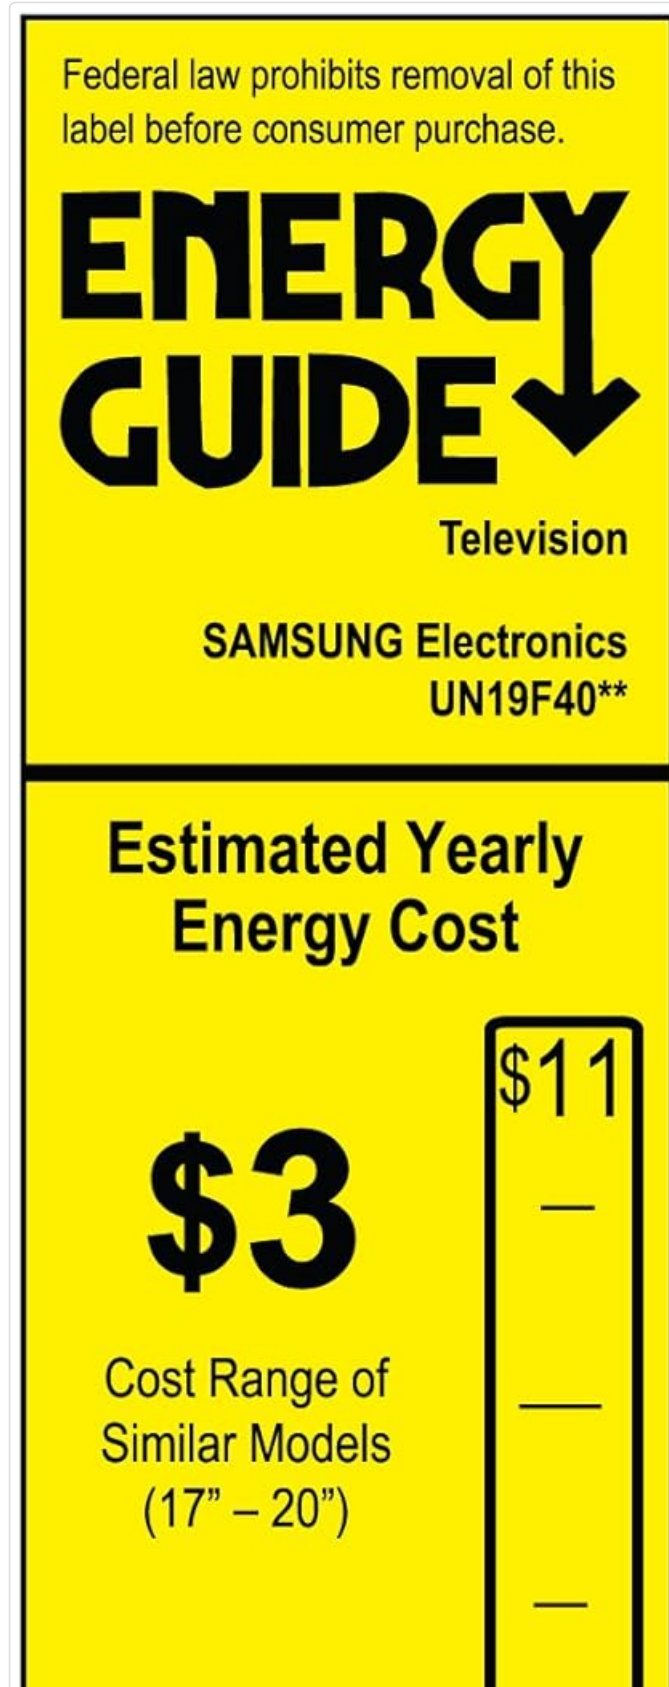

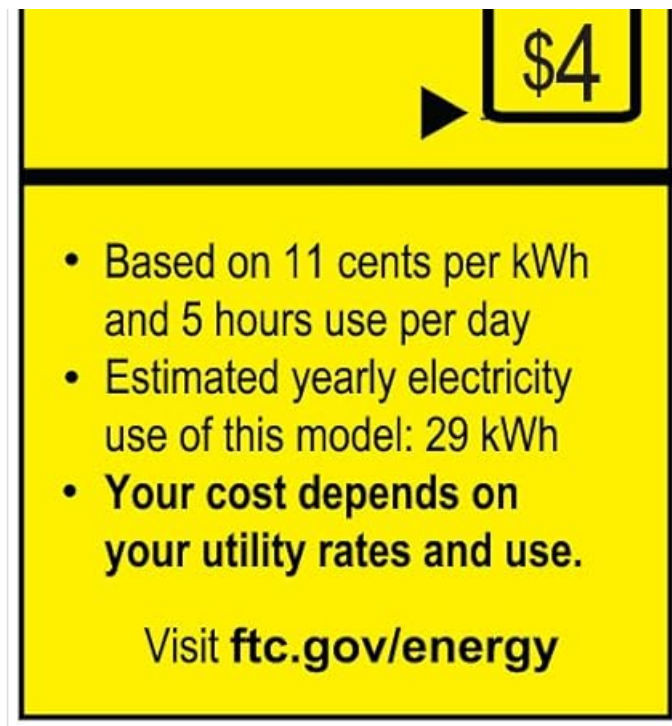A yellow rectangular graphic with a black border. In the top right corner, there is a black square containing the text "\$4" in white, with a black arrow pointing to the left. Below this, there is a list of three bullet points. At the bottom, there is a line of text.

- Based on 11 cents per kWh and 5 hours use per day
- Estimated yearly electricity use of this model: 29 kWh
- **Your cost depends on your utility rates and use.**

Visit **[ftc.gov/energy](http://ftc.gov/energy)**

Image: Front-right view of the Samsung UN19F4000 TV with its stand attached, illustrating the TV's design and how the stand supports it.

## 2. Connecting Devices

Your TV features multiple input ports for connecting external devices such as Blu-ray players, game consoles, and cable boxes.





Image: Side view of the Samsung UN19F4000 TV, highlighting the various input ports available for connecting external devices.

- **HDMI:** Connect up to two HDMI devices for high-definition video and audio.
- **USB:** Connect a USB storage device to play media files.
- **Component In:** Use for older high-definition devices.
- **Composite In:** Use for standard-definition devices.
- **RF In:** Connect an antenna or cable for broadcast television.

### 3. Power Connection

After connecting all desired devices, plug the power cord into the TV's power input and then into a wall outlet.

## OPERATING

---

### Basic Controls

Use the remote control to power on/off the TV, adjust volume, and change channels. The remote control features a backlit function for use in low-light conditions.

## Picture Settings

- **Wide Color Enhancer Plus:** This technology improves image quality and uncovers hidden details by optimizing colors.
- **Samsung Magic Angle:** Adjusts the picture quality to compensate for off-axis viewing, ensuring a consistent image from various angles. Access this setting in the picture menu.

## Sound Settings

- **Clear Voice:** Emphasizes dialogue over background sounds, making speech easier to understand.
- **Auto Volume:** Automatically adjusts the volume level across different channels or inputs to maintain a consistent sound experience.

## Connect Share Movie (USB Media Playback)

Insert a USB storage device into the TV's USB port. The TV supports playback of various video (including DivX and .mkv with embedded subtitles), music, and photo files directly from the USB device. Navigate through the media menu to select and play your content.

## MAINTENANCE

---

### Cleaning the TV

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner. Avoid using harsh chemicals or abrasive materials. For the TV frame, use a soft, dry cloth.

### General Care

Avoid placing heavy objects on the TV. Keep the TV away from direct sunlight, heat sources, and areas with high humidity. Ensure proper ventilation to prevent overheating.

## TROUBLESHOOTING

---

- **Wobbly Stand:** If the TV stand feels unstable after assembly, ensure all screws are tightened. In some cases, adding small washers to the stand screws can provide a more secure fit.
- **Poor Audio Quality:** Check the sound settings for features like 'Clear Voice' or 'Auto Volume' which can enhance clarity. Ensure external speakers (if used) are properly connected.
- **No Picture/Sound:** Verify all cables are securely connected to the correct input ports. Ensure the TV is powered on and the correct input source is selected.
- **Remote Control Not Working:** Check the batteries and ensure there are no obstructions between the remote and the TV's sensor.

## SPECIFICATIONS

---

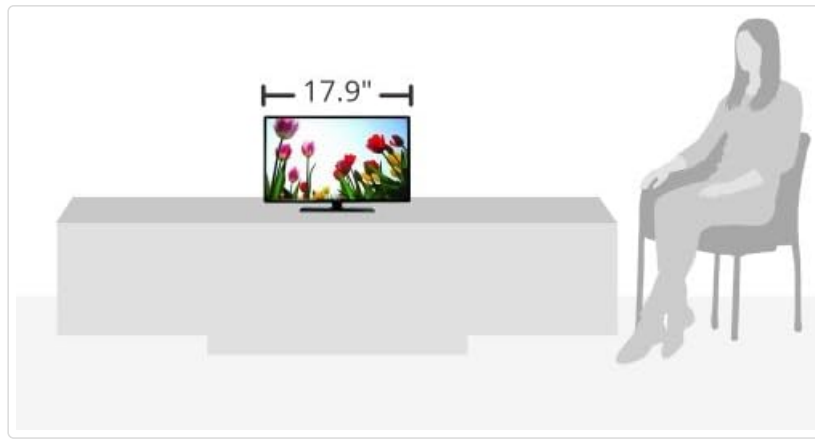 


Image: Energy Guide label for the Samsung UN19F4000 TV, detailing estimated yearly energy cost and consumption.

Feature	Detail
Model Number	UN19F4000
Screen Size	19 Inches
Display Technology	LED (Edge-Lit)
Resolution	720p
Refresh Rate	60Hz (Native); Clear Motion Rate 120 (Effective)
Connectivity	2 HDMI, 1 USB, 1 Component, 1 Composite In, 1 RF In
Dimensions (with stand)	17.9"W x 12.4"H x 4.9"D
Dimensions (without stand)	17.9"W x 11.1"H x 1.9"D
Item Weight	5.5 Pounds
Power Consumption	15 Watts
VESA Mount Standard	200 x 200 mm
Included Components	Remote Control, Stand, TV

## WARRANTY

This Samsung UN19F4000 TV comes with a standard warranty covering **1 year for labor** and **1 year for parts** from the date of purchase. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included with your product or visit the official Samsung support website.

## SUPPORT

For further assistance, technical support, or service inquiries, please visit the official Samsung support website or contact Samsung customer service. You will need your TV's model number (UN19F4000) and serial number (located on the back of the TV) when contacting support.

