

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Onkyo](#) /

› [Onkyo RC-487S Audio Remote Control Instruction Manual](#)

## Onkyo RC-487S

# Onkyo RC-487S Audio Remote Control Instruction Manual

Model: RC-487S

## 1. INTRODUCTION

---

This manual provides essential instructions for the proper setup, operation, and maintenance of your Onkyo RC-487S Audio Remote Control. Please read this manual thoroughly before using the remote control to ensure correct usage and to maximize its lifespan. Keep this manual for future reference.

## 2. PRODUCT OVERVIEW

---

The Onkyo RC-487S is a dedicated audio remote control designed for use with compatible Onkyo audio components. It allows convenient control over various functions such as power, volume, input selection, and playback controls from a distance.



**Figure 1:** Front view of the Onkyo RC-487S Audio Remote Control. This image displays the layout of the buttons and the overall design of the remote.

## 3. SETUP

---

### 3.1 Battery Installation

The RC-487S remote control requires two AA (1.5V) alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open it.



**Figure 2:** Back view of the remote control with the battery compartment cover visible. This shows the location of the cover before opening.

3. Insert two new AA (1.5V) alkaline batteries, ensuring the positive (+) and negative (-) terminals are aligned correctly according to the diagram inside the compartment.



**Figure 3:** Remote control with the battery compartment open, revealing the slots for two AA batteries and polarity markings.

4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

## 4. OPERATING INSTRUCTIONS

---

To operate your Onkyo audio component using the RC-487S remote control, point the remote directly at the component's infrared sensor. Ensure there are no obstructions between the remote and the component.

- **Power On/Off:** Press the **POWER** button to turn the audio component on or off.
- **Volume Control:** Use the **VOLUME +** and **VOLUME -** buttons to adjust the sound level.
- **Input Selection:** Press the designated input buttons (e.g., CD, DVD, TUNER, AUX) to switch between different audio sources.
- **Playback Controls:** For compatible devices, use buttons such as **PLAY**, **PAUSE**, **STOP**, **SKIP**, and **REWIND/FAST FORWARD** to control media playback.

Refer to your Onkyo audio component's specific instruction manual for detailed functions corresponding to each button on the RC-487S remote control.

## 5. MAINTENANCE

---

Proper maintenance ensures the longevity and reliable performance of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- **Battery Replacement:** Replace both batteries with new ones when the remote control's range decreases or it stops responding. Always replace both batteries at the same time and use the same type (AA alkaline).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

## 6. TROUBLESHOOTING

---

If you experience issues with your RC-487S remote control, refer to the following common solutions:

Problem	Solution
Remote control does not work.	<ul style="list-style-type: none"><li>Check if the batteries are inserted correctly with the correct polarity.</li><li>Replace old batteries with new AA alkaline batteries.</li><li>Ensure there are no obstructions between the remote control and the audio component's sensor.</li><li>Make sure the remote control is pointed directly at the component's sensor.</li></ul>
Remote control range is reduced.	<ul style="list-style-type: none"><li>Replace the batteries.</li><li>Ensure the remote control's infrared emitter and the component's sensor are clean and unobstructed.</li></ul>

## 7. SPECIFICATIONS

---

- Model Number:** RC-487S
- Brand:** Onkyo
- Color:** Silver metallic (Note: Product appearance may vary)
- Dimensions (approx.):** 19.2 x 7 x 3.3 cm
- Weight (approx.):** 74 g
- Power Source:** 2 x AA (1.5V) Alkaline Batteries (not included)

## 8. WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the documentation that came with your Onkyo audio component or visit the official Onkyo website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you require further assistance, please contact Onkyo customer support.