

Numark MixTrack Pro II

Numark Mixtrack Pro II User Manual

USB DJ Controller with Integrated Audio Interface and Trigger Pads

1. INTRODUCTION

The Numark Mixtrack Pro II is a complete DJ system designed for use with your Mac or PC. It offers a streamlined design with an expanded layout of professional controls, including 16 backlit multifunction drum pads and illuminated touch-activated platters. This controller provides everything needed for digital DJ performance, such as hot cues, looping, and effects controls, along with a built-in professional DJ audio interface and Serato DJ Intro software.

Key Features:

- 16 backlit rubber drum pads with Loop Mode, Sample Mode, and Hot Cue Mode.
- Touch-activated illuminated platters for precise scratching and control.
- Complete mixer section with a crossfader, 3-band EQ, and music library navigation controls.
- 16 dedicated effects controls to add and manipulate flanger, phaser, echo, and more.
- Built-in audio system for headphone cueing, microphone input, and PA system output.
- Pitch and Sync controls for seamless and easy mixing.
- Serato DJ Intro software included.
- Standard MIDI for use with most popular DJ software.
- Class-compliant with both Mac and PC; no driver required.
- USB-powered; no power adapter required.
- 1/8-inch and 1/4-inch headphone inputs.

2. WHAT'S IN THE BOX?

Upon unpacking your Numark Mixtrack Pro II, please ensure all the following items are present:

- Mixtrack Pro II Controller
- USB Cable

- Quickstart Guide
- Serato DJ Intro Software Installation Instructions

3. SETUP

3.1. Software Installation

1. Visit the Serato website (as indicated in the included instructions) to download the latest version of Serato DJ Intro.
2. Follow the on-screen instructions to install the software on your Mac or PC.
3. No additional drivers are required as the Mixtrack Pro II is class-compliant.

3.2. Hardware Connection

1. Connect the included USB cable from the Mixtrack Pro II to an available USB port on your computer. The unit is USB-powered, so no external power adapter is needed.
2. Connect your headphones to either the 1/8-inch or 1/4-inch headphone output on the front of the unit for cueing.
3. Connect your main speakers or PA system to the RCA outputs on the rear of the unit.
4. If using a microphone, connect it to the microphone input.
5. Launch Serato DJ Intro. The software should automatically detect your Mixtrack Pro II.

4. OPERATING THE MIXTRACK PRO II

4.1. Navigating Your Music Library

Use the dedicated music library navigation controls located in the center mixer section to browse and load tracks into your virtual decks within Serato DJ Intro.

4.2. Using the Platters

The Mixtrack Pro II features advanced low-profile, capacitive, and dual-zone platters. Touching the top of the platter allows you to scratch or stop a track, while manipulating the platter from the side enables pitch adjustment. These platters provide precise control over every track and transition.

4.3. Performance Pads

The 16 backlit rubber drum pads allow for dynamic performance. You can create loops, launch samples, and control hot cues. Instantly switch between Loop Mode, Sample Mode, and Hot Cue Mode using the dedicated buttons above the pads.

4.4. Mixer Section

The complete mixer section includes a precise crossfader for smooth transitions between decks, 3-band EQ

knobs (Treble, Mid, Bass) for frequency control, and gain knobs for adjusting individual deck volumes. Use these controls to blend your tracks seamlessly.

4.5. Effects Control

Utilize the 16 dedicated effects controls to add and manipulate various effects such as flanger, phaser, and echo. Experiment with these effects to enhance your mixes and create unique sounds.

4.6. Pitch and Sync

The Pitch faders allow for fine-tuning the tempo of your tracks. The Sync button automatically matches the tempo of one track to another, facilitating seamless mixing.

5. MEDIA GALLERY

5.1. Product Images



Overall view of the Numark Mixtrack Pro II DJ Controller, showcasing its layout and design.



Front view of the Mixtrack Pro II, highlighting its slim profile and accessible headphone jacks.



Angled view of the Mixtrack Pro II, showing the illuminated jog wheels and performance pads.



Top-down view of the Mixtrack Pro II, detailing

 
the mixer section, jog wheels, and pads for comprehensive control.




Side view of the Mixtrack Pro II, with the Numark logo prominently displayed on its sleek chassis.



Close-up of the performance pads and various control knobs on the Mixtrack Pro II, showing their tactile design.

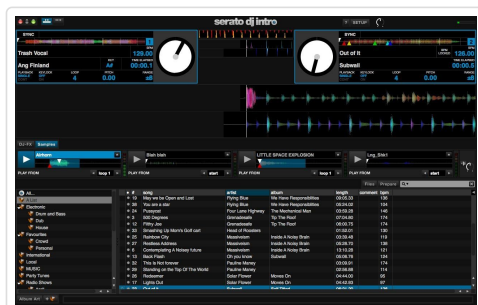


Screenshot of the Serato DJ Intro software interface, displaying waveforms and the music library for track management.

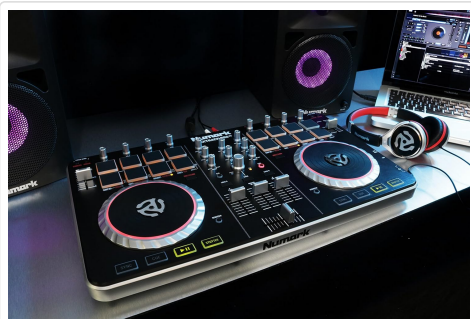 

The Mixtrack Pro II controller set up with studio monitors, headphones, and a laptop, illustrating a complete DJ workstation.



 A hand interacting with the illuminated jog wheel of the Mixtrack Pro II, demonstrating its responsive design.

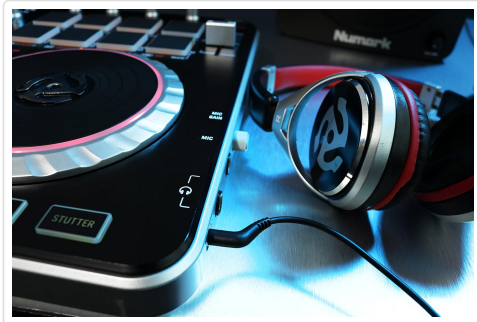

Close-up of the headphone and microphone input jacks on the Mixtrack Pro II, highlighting its integrated audio capabilities.



A hand adjusting the mixer knobs on the central section of the Mixtrack Pro II, showing control over audio levels and EQ.

5.2. Official Product Videos

Official product video showcasing the features and capabilities of Numark DJ controllers, including the Mixtrack Pro II.

Detailed overview video of the Numark Mixtrack Pro II, demonstrating its key features such as touch-activated platters, backlit drum pads, and integrated audio interface.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Mixtrack Pro II, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the surface of the controller. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the unit. Avoid abrasive cleaners or solvents.

- **Storage:** When not in use, store the controller in a cool, dry place away from direct sunlight, excessive heat, or humidity. If transporting, use a protective case to prevent damage.
- **Connections:** Periodically check all cable connections for wear and tear. Ensure USB and audio cables are securely plugged in during operation.

7. TROUBLESHOOTING

If you encounter issues with your Mixtrack Pro II, refer to the following common solutions:

7.1. No Power/Unit Not Recognized

- Ensure the USB cable is securely connected to both the controller and your computer.
- Try a different USB port on your computer.
- If using a USB hub, ensure it is a powered hub.
- Restart your computer and the Serato DJ Intro software.

7.2. No Audio Output

- Check that your speakers/PA system are properly connected to the RCA outputs and are powered on.
- Verify that the Master Gain knob on the controller is turned up.
- Ensure the volume levels within Serato DJ Intro are not muted or too low.
- Check your computer's sound settings to ensure the Mixtrack Pro II is selected as the audio output device.

7.3. Software Not Responding

- Close and reopen Serato DJ Intro.
- Ensure your operating system and Serato DJ Intro software are up to date.
- Disconnect and reconnect the USB cable from the controller.

8. SPECIFICATIONS

Feature	Specification
Item Weight	4.7 pounds
Product Dimensions	10.4 x 18.3 x 2 inches
Item Model Number	MixTrack Pro II
Connectivity Technology	USB
Connector Type	USB, RCA
Digital Audio Protocol	MIDI
Hardware Interface	USB 1.0, USB 1.1, USB 2.0, USB 3.0

Supported Software	Traktor Pro, Serato DJ, Virtual DJ
Material Type	plastic, brushed aluminum, rubber, metal
Mixer Channel Quantity	2
Power Source	USB-powered (Corded Electric)




9. WARRANTY AND SUPPORT




For warranty information and technical support, please refer to the documentation included with your product or visit the official Numark website. Numark provides resources and customer service to assist with any product-related inquiries.

Numark Official Website: www.numark.com

© 2025 Numark. All rights reserved.

Related Documents - MixTrack Pro II

	<p>Numark Mixtrack Platinum FX User Guide Setup, Features, Operation</p> <p>Comprehensive user guide for the Numark Mixtrack Platinum FX DJ controller, covering setup, features, operation, and technical specifications. Learn how to connect, configure, and use all functions.</p>
	<p>Numark Mixtrack Pro FX User Guide</p> <p>A comprehensive user guide for the Numark Mixtrack Pro FX DJ controller, detailing setup, connection, and operation of all features.</p>
	<p>Numark Mixtrack Platinum FX User Guide</p> <p>Comprehensive user guide for the Numark Mixtrack Platinum FX DJ controller, covering setup, connection diagram, features, operation, and technical specifications.</p>

	<p>Numark Mixtrack Platinum FX User Guide</p> <p>Comprehensive user guide for the Numark Mixtrack Platinum FX DJ controller, detailing setup, controls, features, and operation. Includes information on connections, panel layouts, display indicators, and performance pad modes.</p>
	<p>Numark Mixtrack Pro FX DJ Controller User Guide</p> <p>Comprehensive user guide for the Numark Mixtrack Pro FX DJ controller, covering setup, features, operation, technical specifications, and troubleshooting.</p>
	<p>Numark Scratch DJ Mixer User Guide and Setup</p> <p>Discover the features and functionality of the Numark Scratch DJ mixer. This guide provides essential information on setup, connections, software integration with Serato DJ Pro, and advanced DVS capabilities for professional DJs.</p>