

[Manuals.plus](#) /

› [Hotpoint](#) /

› Hotpoint Ariston FT 850.1 (AN)/HA Oven User Manual

Hotpoint FT 850.1 (AN)/HA

Hotpoint Ariston FT 850.1 (AN)/HA Oven User Manual

Model: FT 850.1 (AN)/HA

1. PRODUCT OVERVIEW

The Hotpoint Ariston FT 850.1 (AN)/HA is a built-in multifunction electric oven designed for modern kitchens. It features a 56-liter capacity, an anthracite finish, and a tangential cooling ventilation system. The oven is equipped with an analog clock and a timer for precise cooking control. Its glass door ensures easy monitoring of food during cooking.



Front view of the Hotpoint Ariston FT 850.1 (AN)/HA built-in oven, showcasing its anthracite finish, control knobs, analog clock, and glass door.

This oven offers various cooking functions, including conventional heating and grilling, making it versatile for a wide range of culinary needs. It boasts an energy efficiency class A, ensuring efficient operation.

2. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your Hotpoint Ariston oven. It is recommended that installation be performed by a qualified technician.

2.1. Unpacking

Carefully remove the oven from its packaging. Inspect for any signs of damage during transit. Retain packaging materials for potential future transport or service.

2.2. Placement and Ventilation

The oven is designed for built-in installation. Ensure the cabinet opening dimensions match the oven's specifications. Adequate ventilation around the appliance is essential to prevent overheating. Do not obstruct the ventilation openings.

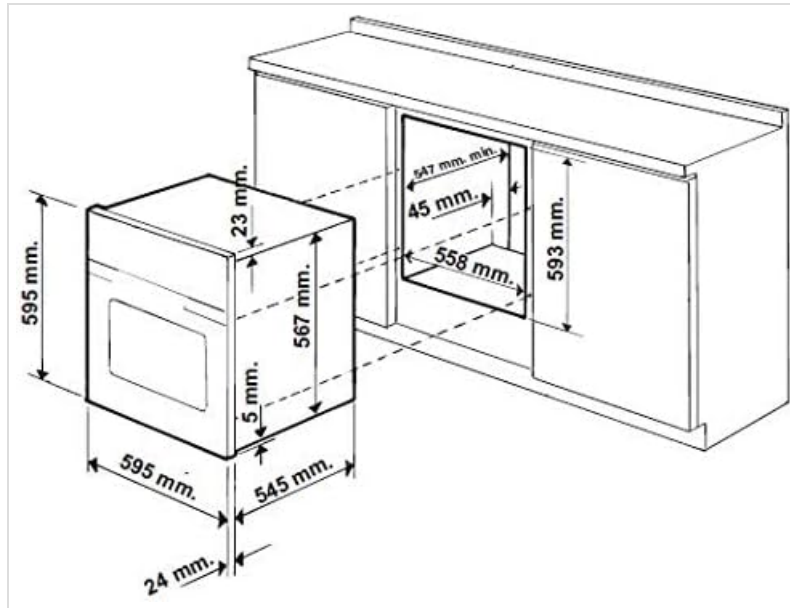


Diagram illustrating the precise dimensions for the Hotpoint Ariston FT 850.1 (AN)/HA oven and the required cabinet cutout for built-in installation. Dimensions are provided in millimeters.

2.3. Electrical Connection

Connect the oven to a properly grounded electrical outlet according to local electrical codes. The oven operates on 230V and has a power consumption of 2800W. Ensure the power supply is disconnected before making any electrical connections.

2.4. Initial Cleaning

Before first use, clean the oven interior and accessories with a damp cloth and mild detergent. Run the oven empty at maximum temperature for approximately 30 minutes to burn off any manufacturing residues. Ensure the kitchen is well-ventilated during this process.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the oven's controls before first use.

3.1. Control Panel

The oven features two main control knobs and an analog clock with timer functionality.

- **Function Selector Knob:** Used to select the desired cooking function (e.g., conventional, grill).
- **Temperature Selector Knob:** Used to set the desired cooking temperature.
- **Analog Clock with Timer:** Displays the time and allows setting cooking duration or a delayed start.

3.2. Setting the Time

Refer to the specific instructions for the analog clock to set the current time. This is usually done by rotating a central pin or knob on the clock face.

3.3. Starting a Cooking Program

1. Turn the **Function Selector Knob** to the desired cooking mode.
2. Turn the **Temperature Selector Knob** to the required temperature.

- 3. If desired, set the cooking duration using the analog timer. The oven will automatically switch off when the set time expires.
- 4. The oven will begin to heat. A light may indicate when the set temperature is reached.

3.4. Using the Timer

The analog timer can be used to set a cooking duration. Once the set time elapses, the oven will typically signal and/or switch off. Consult the detailed timer instructions in the full manual for specific operation.

3.5. Oven Light

The oven is equipped with an internal light to illuminate the cavity during cooking. This light typically activates when the oven is in operation or when the door is opened.

4. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

4.1. General Cleaning

- Always ensure the oven is cool and disconnected from the power supply before cleaning.
- Use a soft cloth and non-abrasive cleaning agents.
- For the exterior, use a damp cloth and dry thoroughly. Avoid harsh chemicals that may damage the finish.
- For the interior, wipe away spills immediately. For stubborn stains, use oven cleaner specifically designed for electric ovens, following the product instructions carefully.

4.2. Glass Door Cleaning

Clean the glass door with a soft cloth and glass cleaner. Avoid abrasive materials that could scratch the glass.

4.3. Accessories

Oven racks and trays can be washed in warm soapy water or in a dishwasher, if suitable.

4.4. Replacing the Oven Light Bulb

If the oven light needs replacement, ensure the oven is cool and unplugged. Unscrew the protective cover, replace the bulb with a new one of the same type and wattage (typically heat-resistant oven bulbs), and reattach the cover.

5. TROUBLESHOOTING

Before contacting service, please check the following common issues:

Problem	Possible Cause	Solution
Oven does not heat up.	No power supply; oven not switched on; timer not set correctly.	Check power connection and circuit breaker. Ensure function and temperature knobs are set. Verify timer is not set to 'off' or 'delay'.
Oven light not working.	Bulb is faulty or loose.	Replace the oven light bulb (refer to Maintenance section).

Problem	Possible Cause	Solution
Food not cooking evenly.	Incorrect temperature setting; improper rack position; door not fully closed.	Verify temperature and cooking function. Use recommended rack positions. Ensure oven door is fully closed.
Excessive smoke during cooking.	Food spills or grease buildup inside the oven.	Clean the oven interior thoroughly. Avoid excessive grease when cooking.

If the problem persists after attempting these solutions, please contact a qualified service technician. Do not attempt to repair the appliance yourself.

6. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Hotpoint
Model	FT 850.1 (AN)/HA
Type	Built-in Electric Multifunction Oven
Color	Anthracite
Capacity	56 Liters
Wattage	2800 Watts
Voltage	230 V
Dimensions (W x D x H)	59.51 x 54.51 x 59.51 cm
Weight	40 Kilograms
Material	Glass (door)
Energy Efficiency Class	A
Special Features	Tangential cooling ventilation system, Analog clock with timer
Heating Methods	Convection, Grill

7. WARRANTY AND SUPPORT

Your Hotpoint Ariston FT 850.1 (AN)/HA oven is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims. For technical assistance, spare parts, or to schedule a service appointment, please contact Hotpoint customer support. Contact details can typically be found on the manufacturer's official website or in the documentation provided with your appliance.

Note: Unauthorized repairs or modifications may void your warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question