

[Manuals.plus](#) /

› [Artemide](#) /

› Artemide Dioscuri 35 Wall / Ceiling Light User Manual

Artemide USC-0116018A

Artemide Dioscuri 35 Wall / Ceiling Light User Manual

Model: USC-0116018A

INTRODUCTION

The Artemide Dioscuri Wall/Ceiling Luminaire is a design-award winning lighting fixture known for its tasteful minimalism. It features a spherical diffuser made of acid-etched blown glass and a thermoplastic base. This manual provides essential information for the safe and proper installation, operation, and maintenance of your Dioscuri light.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before installation and use. Retain this manual for future reference.

- Always disconnect power at the circuit breaker before installing, servicing, or cleaning the fixture.
- Installation must be performed by a qualified electrician in accordance with all local electrical codes.
- Do not exceed the maximum wattage specified for the lamp.
- Ensure the fixture is securely mounted to a structurally sound surface.
- Avoid direct contact with the bulb when it is hot.
- Do not use abrasive cleaners on the glass diffuser or thermoplastic base.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Dioscuri Wall/Ceiling Luminaire (Spherical diffuser, thermoplastic base)
- Mounting Hardware (screws, anchors, etc. - specific items may vary)
- Instruction Manual (this document)

SETUP AND INSTALLATION

Follow these steps for proper installation of your Dioscuri light fixture. Professional installation is recommended.

1. **Prepare the Installation Area:** Ensure the power supply to the installation location is turned off at the circuit breaker. Clear the area of any obstructions.
2. **Mount the Base:** Secure the thermoplastic base to the wall or ceiling junction box using the provided mounting hardware. Ensure it is firmly attached and level.
3. **Wire the Fixture:** Connect the electrical wires from the fixture to the corresponding wires in the junction box (live to live, neutral to neutral, ground to ground) using appropriate wire connectors. Ensure all connections are secure. The fixture operates on 120V.
4. **Install the Bulb:** For the Dioscuri 35 model, use a MAX 100W E26/A19 lamp. Carefully screw the bulb into the socket.
5. **Attach the Diffuser:** Carefully place the acid-etched blown glass spherical diffuser onto the base, ensuring it is properly seated and secured according to the fixture's design.
6. **Restore Power:** Once installation is complete and all components are securely in place, restore power at the circuit breaker.



Image: The Artemide Dioscuri 35 Wall/Ceiling Light, showcasing its spherical design and diffused illumination when installed.

OPERATING INSTRUCTIONS

The Dioscuri 35 light fixture is designed for ease of use.

- **Power On/Off:** The light is controlled via a wall switch or the dimmable control (if installed) connected to your electrical system.
- **Dimming Functionality:** For the Dioscuri 35 model, the fixture supports dimmable control. Ensure you use a compatible dimmable bulb and a suitable dimmer switch for optimal performance. The control type is Dimmable (on cord) or via remote, depending on your specific setup.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Dioscuri light.

- **Cleaning:** Disconnect power before cleaning. Wipe the glass diffuser and thermoplastic base with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
- **Bulb Replacement:** Disconnect power before replacing the bulb. Allow the bulb to cool completely. Unscrew the old bulb and replace it with a new MAX 100W E26/A19 lamp. Ensure the replacement bulb matches the specified type and wattage.

TROUBLESHOOTING

If you encounter issues with your Dioscuri light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture; Loose wiring connection; Faulty bulb; Faulty switch.	Check circuit breaker; Verify wiring connections are secure; Replace bulb; Test or replace switch.
Light flickers.	Loose bulb; Incompatible dimmer switch or bulb; Voltage fluctuations.	Tighten bulb; Ensure dimmer and bulb are compatible; Consult an electrician for voltage issues.
Light is too dim or too bright.	Incorrect bulb wattage; Dimmer setting.	Use correct wattage bulb (MAX 100W E26/A19); Adjust dimmer setting.

If the problem persists after attempting these solutions, contact a qualified electrician or the manufacturer for assistance.

SPECIFICATIONS

Brand:	Artemide
Model:	USC-0116018A
Lamp Type (Dioscuri 35):	LED, CFL, INC
Lamp (Dioscuri 35):	MAX 100W E26/A19
Control Type (Dioscuri 35):	DIMMABLE (ON CORD) / Remote
Input Voltage:	120V
Materials:	Base: Thermoplastic resin; Diffuser: Acid-etched handblown glass
Color:	White
Mounting Type:	Wall Mount / Ceiling Mount

Item Weight:	8.38 pounds
---------------------	-------------

WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the documentation provided at the time of purchase or contact the authorized seller or Artemide directly. Warranty terms and conditions may vary.

If you require technical support or have questions not covered in this manual, please contact the retailer from whom you purchased the product or visit the official Artemide website for customer service contact information.