

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [HABA](#) /
- › [HABA Fun with Sounds Wooden Eggs - Instruction Manual](#)

HABA 7733

HABA Fun with Sounds Wooden Eggs - Instruction Manual

INTRODUCTION

The HABA Fun with Sounds Wooden Eggs set is a Montessori-inspired sensory toy designed for toddlers and children aged 2 years and up. This set includes five unique wooden eggs, each producing a distinct acoustic sound, encouraging sensory exploration, fine motor skill development, and musical engagement. Crafted in Germany from high-quality, sustainably sourced wood, these durable eggs are a timeless addition to any child's toy collection.

WHAT'S IN THE BOX

- 5 Wooden Musical Eggs

SETUP

The HABA Fun with Sounds Wooden Eggs require no assembly. Simply remove the eggs from their packaging. Inspect each egg to ensure it is free from damage before first use. The newly designed sturdier box can be used for convenient storage.



Image: The five HABA Fun with Sounds Wooden Eggs, illustrating their distinct sound types.

OPERATING INSTRUCTIONS

Each wooden egg is designed to produce a unique acoustic sound, encouraging children to explore different auditory experiences. To operate, simply shake, tap, or rattle the eggs. One egg also features a twist mechanism for a distinct clicking sound.

- **Shaking:** Gently shake the eggs to hear their individual sounds.
- **Tapping:** Tap the eggs lightly against a soft surface or each other to create rhythmic patterns.
- **Twisting:** One specific egg is designed to produce a clicking sound when its two halves are twisted.

Encourage children to experiment with different movements and listen to the various sounds each egg produces. This promotes auditory discrimination and rhythm development.

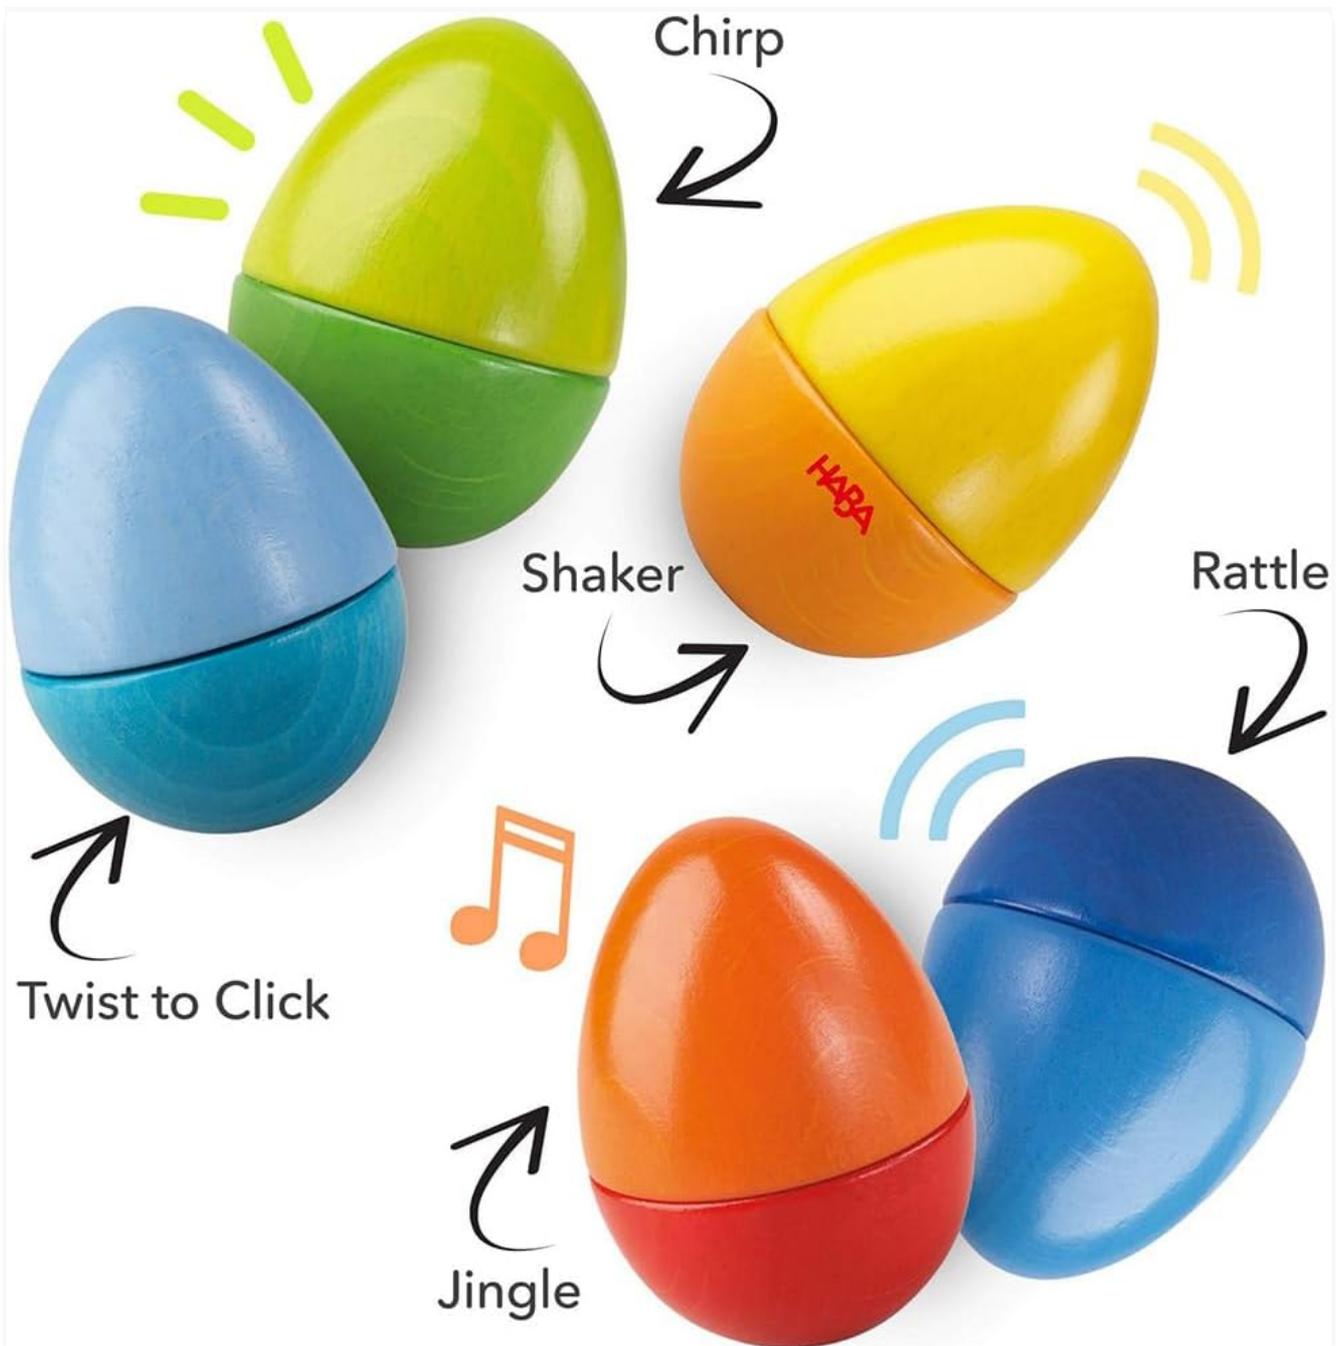


Image: Detailed view of the eggs and their corresponding sound actions.

Your browser does not support the video tag.

Video: A short demonstration of the musical eggs and their sensory play potential.

MAINTENANCE & CARE

HABA wooden toys are made with water-based non-toxic stains and a protective non-toxic clear finish. To ensure the longevity and hygiene of your wooden eggs, follow these care instructions:

- **Cleaning:** Wipe with a cloth dampened with water only. Immediately wipe dry with a soft cloth.
- **Do Not Submerge:** Do not immerse the wooden eggs in water.
- **Avoid Disinfectants:** Do not use disinfectants or harsh cleaning agents.
- **No Baby Wipes:** Avoid using baby wipes, as they may contain chemicals that can damage the wood finish.

Improper cleaning methods can damage the wood or its finish.

Image: HABA wooden toy cleaning instructions and warnings.

SAFETY INFORMATION

This product is designed for children aged 24 months to 2 years and older. Always supervise children during play. Ensure the toys are clean and in good condition before each use. The eggs are large enough to not be a choking hazard for the recommended age group.



Image: A child safely interacting with the HABA Fun with Sounds Wooden Eggs.

SPECIFICATIONS

- **Product Dimensions:** 4.6 x 2.3 x 6.3 inches
- **Item Weight:** 10.1 ounces
- **ASIN:** B00BF3D666

- **Item Model Number:** 7733
- **Manufacturer Recommended Age:** 24 months - 2 years
- **Manufacturer:** HABA
- **Material:** High-quality wood, made in Germany from sustainably managed forests (PEFC certified).



3 in

**MADE IN
GERMANY**

Image: Product dimensions and origin details.

WARRANTY & SUPPORT

For any questions regarding your HABA Fun with Sounds Wooden Eggs, including product information, care, or potential issues, please contact HABA customer support. HABA is committed to quality and customer satisfaction. Visit the official HABA Store on Amazon for more information: [HABA Store](#)

