

[Manuals.plus](#) /

› [Philips](#) /

› Philips S-Bag FC8027/01 Vacuum Cleaner Bags User Manual

Philips FC8027/01

Philips S-Bag FC8027/01 Vacuum Cleaner Bags User Manual

Model: FC8027/01

INTRODUCTION

This manual provides essential information for the proper use and maintenance of your Philips S-Bag FC8027/01 Vacuum Cleaner Bags. Please read these instructions carefully to ensure optimal performance and longevity of your vacuum cleaner bags.

The Philips S-Bag FC8027/01 is a universal dust bag designed for various Philips and Electrolux Group vacuum cleaners. It features Ultra Long Performance with a 5-layer filtration system, ensuring efficient dust removal and a longer lifespan compared to traditional paper bags.

PRODUCT OVERVIEW



Figure 1: Front view of the Philips S-Bag FC8027/01 vacuum cleaner bags packaging. This image displays the product name, brand, and key features such as "Ultra long performance" and "x3" indicating three bags per pack. The S-Bag logo and compatibility with Philips, Electrolux, AEG, and Tornado are also visible.



Figure 2: Angled view of the Philips S-Bag FC8027/01 vacuum cleaner bags packaging. This perspective highlights the compact design of the packaging and reiterates the "Ultra long performance" feature, along with the S-Bag branding and compatible vacuum cleaner brands.

SETUP AND INSTALLATION

Follow these steps to properly install a new Philips S-Bag FC8027/01 vacuum cleaner bag:

1. **Power Off:** Ensure your vacuum cleaner is unplugged from the power outlet before attempting to replace the dust bag.
2. **Open Compartment:** Locate and open the dust bag compartment on your vacuum cleaner. The method for opening may vary by model; refer to your vacuum cleaner's specific user manual if unsure.
3. **Remove Old Bag:** Carefully remove the full dust bag. The Philips S-Bag features a hygienic closure system that automatically seals the bag opening upon removal, preventing dust from escaping.
4. **Insert New Bag:** Take a new Philips S-Bag FC8027/01 from the packaging. Align the bag's cardboard collar with the bag holder inside the vacuum cleaner compartment. Push firmly until it clicks securely into place. Ensure the bag is fully unfolded within the compartment.
5. **Close Compartment:** Close the dust bag compartment securely. Ensure it is latched properly to maintain optimal suction and prevent dust leakage.
6. **Ready for Use:** Your vacuum cleaner is now ready for operation with the new dust bag.

OPERATING CONSIDERATIONS

The Philips S-Bag FC8027/01 is designed for optimal performance during vacuuming. Consider the following points for effective use:

- **Compatibility:** This S-Bag is a universal standard compatible with all Philips and Electrolux Group (Electrolux, Volta, Tornado, AEG-Electrolux) bag vacuum cleaners. Verify your vacuum cleaner model against the compatibility list provided in the product description or your vacuum cleaner's manual.
- **Performance:** The 5-layer synthetic material construction ensures high filtration and maintains strong suction power even as the bag fills. This "Ultra Long Performance" design prevents premature clogging of the bag's pores.
- **Dust Capacity:** The bags have a capacity of 5 liters, allowing for extended use before replacement is needed.

- **Airflow:** The design promotes longer-lasting air circulation, contributing to consistent cleaning results throughout the bag's lifespan.

MAINTENANCE AND REPLACEMENT

Regular replacement of your vacuum cleaner bag is crucial for maintaining cleaning efficiency and air quality.

- **When to Replace:** Replace the S-Bag when the dust bag full indicator on your vacuum cleaner illuminates, or when you notice a significant decrease in suction power. Even with its long-lasting design, a full bag will impede performance.
- **Hygienic Disposal:** The S-Bag's hygienic closure system automatically seals the bag opening when removed from the vacuum cleaner. This minimizes dust exposure during disposal. Simply remove the bag and discard it in your household waste.
- **Storage:** Store unused S-Bags in a cool, dry place, away from direct sunlight and extreme temperatures, to preserve their material integrity.

TROUBLESHOOTING

If you encounter issues related to the vacuum cleaner bag, consider the following:

Problem	Possible Cause	Solution
Reduced Suction Power	Dust bag is full or nearly full.	Replace the S-Bag with a new one.
Reduced Suction Power	Dust bag not installed correctly.	Ensure the S-Bag's cardboard collar is securely seated in the bag holder.
Dust escaping from vacuum cleaner	Dust bag compartment not closed properly.	Check that the dust bag compartment is fully latched and sealed.
Dust escaping from vacuum cleaner	Dust bag is damaged.	Replace the damaged S-Bag immediately.

SPECIFICATIONS

Model Number: FC8027/01

Brand: Philips

Material: Synthetic (5-layer filtration)

Capacity: 5 liters

Dimensions (Product): 5 x 16.5 x 24 cm (L x W x H)

Item Weight: 180 g

Contents: 3 vacuum cleaner bags per pack

Compatibility: Universal standard for Philips and Electrolux Group (Electrolux, Volta, Tornado, AEG-Electrolux) bag vacuum cleaners.

Certifications: TÜV Rheinland certified for 80% longer life compared to plain paper bags.

WARRANTY AND SUPPORT

Specific warranty details for the Philips S-Bag FC8027/01 vacuum cleaner bags are typically provided with your vacuum cleaner or can be found on the official Philips website. As these are consumable items, their warranty may differ from that of the vacuum cleaner itself.

For further support or inquiries regarding the Philips S-Bag FC8027/01, please refer to the support section of the official Philips website or contact Philips customer service directly. Keep your purchase receipt as proof of purchase.

Official Philips Website: www.philips.com

© 2024 Philips. All rights reserved.