



Manuals.plus /

› Philips /

› Philips myGarden Wall Light 16412/47/16 Veranda INOX User Manual

Philips My Garden Veranda

Philips myGarden Wall Light

MODEL: 16412/47/16 VERANDA INOX

1. Introduction

This manual provides essential information for the safe installation, operation, and maintenance of your Philips myGarden Wall Light, model 16412/47/16 Veranda INOX. Please read these instructions carefully before proceeding with installation or use, and retain them for future reference.



Image 1.1: Front view of the Philips myGarden Wall Light Veranda INOX. This image displays the brushed stainless steel finish and the layered design of the light fixture.

2. Safety Information

WARNING: Electrical installation should only be performed by a qualified electrician in accordance with all local and national electrical codes. Always disconnect power at the main fuse or circuit breaker before installation, maintenance, or bulb replacement.

- Ensure the supply voltage matches the voltage specified on the product label (220 Volts).
- Do not connect this fixture to an ungrounded electrical system.
- Avoid touching the light fixture with wet hands.
- Do not modify the product in any way. Unauthorized modifications may void the warranty and create safety hazards.
- Keep packaging materials out of reach of children.

3. Package Contents

Carefully unpack the box and ensure all items are present and undamaged. If any items are missing or damaged, contact your retailer.



Image 3.1: Packaging for the Philips myGarden Wall Light Veranda INOX. The box indicates it is an outdoor wall light designed for outdoor use with a bulb included, in Veranda | Stainless steel finish.

Typically included:

- Philips myGarden Wall Light (1 unit)
- Mounting hardware (screws, wall plugs)
- Instruction manual

4. Setup & Installation

This wall light is designed for flush mount, wall mount installation in garden environments. Ensure the installation surface is suitable and can support the weight of the fixture (0.9 Kilograms).

1. **Power Disconnection:** Before starting, turn off the power supply at the main circuit breaker or fuse box to prevent electrical shock.
2. **Prepare Mounting Location:** Choose a suitable outdoor wall location. Mark the drilling points for the mounting bracket using the fixture as a template.
3. **Drill Holes:** Drill holes at the marked points. Insert wall plugs if necessary, depending on the wall material.
4. **Attach Mounting Bracket:** Secure the mounting bracket to the wall using the provided screws.
5. **Electrical Connection:** Connect the household electrical wires to the fixture's wires. Ensure proper polarity (live to live, neutral to neutral, ground to ground). Use appropriate wire connectors.
6. **Mount Fixture:** Carefully align the light fixture with the mounting bracket and secure it in place. Ensure all connections are tight and the fixture is stable.
7. **Restore Power:** Once the installation is complete and secure, restore power at the main circuit breaker.

Note: This fixture is designed for outdoor use. Ensure all connections are weather-sealed if not already integrated into the design.

5. Operating Instructions

The Philips myGarden Wall Light is designed for simple operation.

- **Turning On/Off:** This light fixture is typically controlled by an external wall switch (Push Button, Touch type). Simply toggle the connected wall switch to turn the light on or off.
- **Automatic Operation:** If connected to a timer or motion sensor (not included), the light will operate according to the settings of that device.

6. Maintenance

Regular maintenance ensures optimal performance and longevity of your wall light.

- **Cleaning:** Disconnect power before cleaning. Wipe the fixture with a soft, damp cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- **Bulb Replacement:** The product specifications indicate "Bulb included" and "Fixture Type: Non Removable". This suggests the light source is integrated and not user-replaceable. If the light source fails, the entire fixture may need replacement. Contact Philips customer support for assistance.
- **Inspection:** Periodically inspect the fixture for any signs of damage, loose connections, or wear.

Address any issues promptly.

7. Troubleshooting

If you encounter issues with your wall light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power supply. Faulty wiring connection. Integrated light source failure.	Check circuit breaker/fuse. Ensure wall switch is ON. Verify wiring connections (consult electrician). If integrated light source fails, contact Philips support.
Light flickers.	Loose wiring connection. Incompatible dimmer switch (if applicable).	Check wiring connections (consult electrician). Ensure no dimmer is used unless specified as compatible.
Water inside fixture.	Improper sealing during installation. Damaged fixture.	Ensure all seals are correctly seated. If damaged, replace the fixture. Disconnect power immediately.

If the problem persists after attempting these solutions, contact Philips customer support or a qualified electrician.

8. Specifications

Feature	Detail
Brand	Philips
Model Number	My Garden Veranda (16412/47/16)
Style	Modern
Light Fixture Form	Wall
Room Type	Garden
Power Source	Corded Electric
Installation Type	Flush Mount
Finish Type	Stainless Steel
Number of Light Sources	1
Voltage	220 Volts
Item Weight	0.9 Kilograms
Wattage	20 Watts
Controller Type	Push Button
Switch Type	Touch
Mounting Type	Wall Mount
Fixture Type	Non Removable
Shade Color	White
Unit Count	1.0 Count

9. Warranty & Support

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Philips website. Keep your purchase receipt as proof of purchase for warranty claims.

Philips Customer Service:

- Visit Philips Support Website
- Refer to your product packaging for regional contact details.