

[Manuals.plus](#) /

› [DICKIE TOYS](#) /

› DICKIE TOYS 48-inch Mega Crane Playset User Manual

DICKIE TOYS 203462411

DICKIE TOYS 48-inch Mega Crane Playset User Manual

Model: 203462411 | Brand: DICKIE TOYS

PRODUCT OVERVIEW





Image: The DICKIE TOYS 48-inch Mega Crane Playset, showcasing its full height and design.

The DICKIE TOYS 48-inch Mega Crane Playset is a remote-controlled toy crane designed for imaginative play. It features an impressive 48-inch height, a rotating cabin, and functional trolley and winch movements, allowing for the transportation of various building materials. This playset provides an engaging experience for young builders.

Key Features

- 48-inch (120 cm) height for realistic play.
- Cable remote control for precise operation.
- Crane cabin rotates 350 degrees.
- Functional trolley and winch for lifting and moving objects.
- Includes various attachments for diverse play scenarios.
- Develops fine motor skills, cause and effect understanding, and imaginative play.
- Suitable for ages 3 to 5 years.

Safety Information

- Use under the direct supervision of adults.
- Requires 6 x 1.5V R6 (AA) batteries (not included).
- Ensure proper counterweight is used to prevent tipping during operation.

- Keep small parts away from children under 3 years to avoid choking hazards.

PACKAGE CONTENTS

The DICKIE TOYS 48-inch Mega Crane Playset includes:

- Crane set components
- Remote control unit
- Various attachments (e.g., grabber claw, lifting platform)

ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your DICKIE TOYS Mega Crane. Refer to the included video for a visual guide to ensure correct assembly.

1. Remove all components from the packaging.
2. Apply any included stickers to the crane and remote control as indicated in the separate instruction sheet.
3. Assemble the base of the crane, ensuring all parts are securely connected.
4. Attach the vertical tower sections, building the crane to its full height.
5. Connect the crane arm (jib) to the top of the tower and secure the cabin.
6. Thread the crane cable through the designated pulleys and attach the desired lifting attachment (e.g., grabber claw or lifting platform).
7. Insert 6 AA batteries into the remote control unit, observing correct polarity.
8. Place approximately 200g of counterweight (not included, e.g., sand, small stones) into the designated counterweight box at the rear of the crane arm to ensure stability during operation.

Your browser does not support the video tag.

Video: Official assembly and operation guide for the DICKIE TOYS Mega Crane Playset.

OPERATING INSTRUCTIONS

Once assembled and batteries are installed, you can begin operating your Mega Crane using the remote control.

Remote Control Functions

- **Power Button:** Press to turn the crane on/off.
- **Rotation Controls:** Use the directional buttons to rotate the crane cabin 350 degrees left or right.
- **Trolley Movement:** Use the directional buttons to move the trolley along the crane arm, extending or retracting the hook's position.
- **Winch Control:** Use the up/down buttons to raise or lower the hook and its attachment.
- **Grabber Claw Operation:** The grabber claw is manually operated. Position the claw over an object, lower it, and manually close the claw around the object before lifting.

Important Operating Tips

- Always ensure the crane is on a stable, flat surface during operation.
- Do not overload the crane. The maximum lifting capacity is designed for small, lightweight toy items.
- Avoid tangling the remote control cable during rotation.
- Practice movements in an open area before attempting complex lifting tasks.



Image: The remote control unit for the Mega Crane, showing various control buttons.

MAINTENANCE

- **Cleaning:** Wipe the crane with a soft, dry cloth. Do not use harsh chemicals or immerse in water.
- **Battery Care:** Remove batteries from the remote control if the toy will not be used for an extended period.
- **Storage:** Store the crane in a cool, dry place away from direct sunlight.
- **Cable Inspection:** Periodically check the remote control cable for any signs of wear or damage.

TROUBLESHOOTING

- **Crane Not Responding:**
 - Check if the remote control is turned on.
 - Ensure batteries are correctly installed and not depleted. Replace with fresh batteries if necessary.
 - Verify the remote control cable is securely connected to the crane.
- **Crane Tipping Over:**
 - Ensure the counterweight box is filled with approximately 200g of material.
 - Avoid lifting objects that are too heavy for the crane's capacity.
 - Operate the crane on a flat, stable surface.
- **Hook/Claw Not Moving Smoothly:**
 - Check for any obstructions in the cable path or around the winch mechanism.
 - Ensure the cable is properly threaded through all pulleys.

SPECIFICATIONS

Feature	Detail
Brand Name	DICKIE TOYS
Model Number	203462411
Item Type Name	Dickie Toys 48" Mega Crane Playset

Age Range Description	Kid (Manufacturer Minimum Age: 36 Months, Maximum Age: 180 Months)
Material Type	Plastic
Item Dimensions (L x W x H)	18.9 x 3.35 x 27.36 inches (48 x 8.5 x 69.5 cm)
Size	120 cm (48 inches)
Item Weight	1.94 Kilograms
Power Source	Battery Powered
Battery Requirements	6 AA batteries (not included)
Operation Mode	Remote Control
Assembly Required	Yes
Educational Objective	Develops fine motor skills, cause and effect understanding, and imaginative play

WARRANTY AND SUPPORT

Warranty: This product comes with no explicit manufacturer warranty as per available information. Please retain your proof of purchase for any potential claims.

Support: For further assistance, please contact DICKIE TOYS customer service through their official website or the retailer where the product was purchased.

[Visit the DICKIE TOYS Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question