

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Commercial CHEF](#) /
- › [Commercial CHEF CHM770W 0.7 Cubic Feet Countertop Microwave Oven Instruction Manual](#)

Commercial CHEF CHM770W

Commercial CHEF CHM770W 0.7 Cubic Feet Countertop Microwave Oven

Instruction Manual

[Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

Thank you for choosing the Commercial CHEF CHM770W Countertop Microwave Oven. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read all instructions carefully before use and retain this manual for future reference.



Image: The Commercial CHEF CHM770W Microwave Oven, white, with its door open, revealing the interior and the control panel on the right side.

SETUP

Unpacking and Placement

1. Carefully remove the microwave oven and all packing materials from the carton.
2. Place the microwave on a flat, stable surface, such as a countertop, that is strong enough to hold the oven and the food you place in it. Ensure there is adequate ventilation around the unit.
3. Allow at least 3 inches (7.6 cm) of space between the back of the microwave and the wall, 3 inches (7.6 cm) between the sides, and 12 inches (30.5 cm) above the microwave for proper airflow.
4. Ensure the power cord is easily accessible and not obstructed.



Image: The white Commercial CHEF CHM770W microwave oven positioned on a kitchen countertop, illustrating its compact design suitable for limited spaces.

Turtable Installation

1. Place the turntable ring inside the microwave cavity.
2. Position the glass turntable plate securely on top of the turntable ring, ensuring it sits properly on the center hub.



Image: A close-up view of the removable glass turntable and its support ring inside the microwave oven cavity.

Power Connection

Plug the microwave oven into a standard 120V, 60Hz grounded electrical outlet. Do not use an extension cord or adapter. Ensure the outlet is properly grounded to prevent electrical shock.

OPERATING INSTRUCTIONS

Control Panel Overview

The microwave features an intuitive keypad control panel with an LED display for easy operation.

LED DISPLAY

DIGITAL CLOCK & KITCHEN TIMER



Image: A detailed view of the microwave's control panel, showing the digital clock, quick-cook buttons, power level, timer, cook, and defrost options.

Basic Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the microwave door firmly.
3. Enter the desired cooking time using the number pads.
4. Press the **POWER** button to select the power level (10 levels available, 100% is default).
5. Press the **START/STOP** button to begin cooking.

Quick Cook Menu Options

The microwave includes 6 one-touch quick cook buttons for common items:

- **Popcorn:** For quick popcorn preparation.
- **Potato:** For baking potatoes.
- **Pizza:** For reheating pizza slices.
- **Beverage:** For heating drinks.
- **Frozen Food:** For various frozen meals.
- **Reheat:** For general food reheating.

Simply press the desired quick cook button, and the microwave will automatically set the appropriate cooking time and power level. Press **START/STOP** to confirm and begin.

Defrost Functions

The microwave offers two defrost modes:

- **Defrost by Weight:** Enter the weight of the food, and the microwave will calculate the defrost time.
- **Speed Defrost:** Allows for quick defrosting of smaller items.

Child Safety Lock

To activate the child safety lock, press and hold the **STOP/CLEAR** button for 3 seconds. The lock indicator will appear on the display. To deactivate, repeat the process.

Video: An official overview of the Commercial CHEF 0.7 Cubic Feet Countertop Microwave Oven, highlighting its compact design and key features.

MAINTENANCE AND CLEANING

Cleaning the Interior

Regular cleaning of the microwave interior is essential for optimal performance and hygiene. Wipe the interior with a damp cloth and mild detergent after each use. For stubborn stains, place a bowl of water with lemon slices inside and microwave for a few minutes to loosen residue, then wipe clean.

Cleaning the Turntable

The glass turntable is removable for easy cleaning. It can be washed by hand with soap and water or placed in the dishwasher. Ensure the turntable and turntable ring are dry before placing them back into the microwave.

Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals that could damage the finish.

TROUBLESHOOTING

If you encounter any issues with your microwave oven, please refer to the following common solutions before contacting customer service:

- **Microwave not starting:** Ensure the power cord is securely plugged in, the door is fully closed, and the child safety lock is deactivated. Check your household fuse or circuit breaker.
- **Food not heating properly:** Verify that the cooking time and power level are set correctly. Ensure the food is placed centrally on the turntable.
- **Turntable not rotating:** Check if the turntable is properly seated on the turntable ring and that the ring is correctly positioned on the cavity floor. Ensure there are no obstructions.
- **Unusual noises:** This may indicate an issue with the turntable or internal components. If persistent, discontinue use and contact support.

SPECIFICATIONS

MICROWAVE OVEN

700 WATT - 0.7 CUBIC FEET



Image: The Commercial CHEF CHM770W microwave oven with its key dimensions (width, height, depth) clearly indicated.

Feature	Detail
Brand	Commercial CHEF
Model Number	CHM770W
Capacity	0.7 Cubic Feet
Wattage	700 Watts
Voltage	120 Volts
Product Dimensions (D x W x H)	14.06" x 17.81" x 10.31"
Item Weight	23.1 Pounds
Color	White
Installation Type	Countertop
Special Feature	Child Safety Lock
Material	Stainless Steel

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Commercial CHEF customer service directly. You can also visit the official Commercial CHEF website for more resources.

For further assistance, please contact the manufacturer at the details provided in your product documentation.

© 2026 Commercial CHEF. All rights reserved.