

[Manuals.plus](#) /

› [SYLVANIA](#) /

› Sylvania SDVD9805 9-Inch Twin Dual Screen DVD Player User Manual

SYLVANIA SDVD9805

Sylvania SDVD9805 9-Inch Twin Dual Screen DVD Player User Manual

INTRODUCTION

Welcome to the user manual for your Sylvania SDVD9805 Twin Dual Screen DVD Player. This manual provides essential instructions for the proper setup, operation, and maintenance of your device, ensuring a reliable and enjoyable experience. Please read this manual thoroughly before using the product.

IMPORTANT SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not expose the device to rain, moisture, or extreme temperatures.
- Do not attempt to disassemble or modify the unit. Refer all servicing to qualified personnel.
- Use only the power adapters supplied with the device. Using unauthorized adapters may cause damage or fire.
- Avoid placing the unit on unstable surfaces where it could fall and cause injury or damage.
- Keep the device away from direct sunlight and heat sources.
- Ensure proper ventilation around the units during operation.

PACKAGE CONTENTS

Please check the box for the following items:

- 2 x 9-Inch Portable DVD Players (Master and Slave units)
- 1 x Remote Control
- 2 x Mounting Straps for car headrests
- 2 x Earbuds
- 1 x Car Power Adapter

- 1 x AC/DC Adapter
- 1 x AV Connection Cable

PRODUCT OVERVIEW

This section details the physical components and connections of your Sylvania SDVD9805 DVD Player.



Image: One of the Sylvania SDVD9805 portable DVD players with its lid open, revealing the disc tray and various input/output ports on the left side.

Main Unit Features

- **9-Inch LCD Screen:** High-resolution display for video content.
- **DVD Disc Tray:** Top-loading mechanism for inserting standard DVD discs.
- **Control Buttons:** Integrated buttons for Power, Play/Pause, Stop, Skip, and Volume adjustment.
- **Built-in Speakers:** For audio playback without external devices.

Connectivity Ports

The left side of each player features several important connection points:

- **Headphone Jacks (x2):** Allows two users to connect headphones for private listening.
- **AV Input/Output:** Used to connect the two players for synchronized playback or to connect an external video source.
- **USB Port:** For playing media files (video, music, photos) from a USB flash drive.
- **SD Card Slot:** For playing media files from an SD memory card.

- **DC Input:** For connecting the AC/DC adapter or car power adapter to supply power and charge the internal battery.

SETUP

Charging the Battery

Before first use, connect the AC/DC adapter to the DC input port on each player and plug it into a standard wall outlet. Charge both units fully. The charging indicator light will typically change color or turn off when charging is complete.

Connecting Twin Screens

To play the same movie on both screens, identify one unit as the 'master' (this unit will play the DVD or USB/SD media) and the other as the 'slave'. Connect the AV output of the master unit to the AV input of the slave unit using the provided AV connection cable. Ensure both units are powered on and the slave unit is set to AV input mode.

Car Installation

Use the included mounting straps to securely attach each DVD player to the back of car seat headrests. Adjust the straps to ensure the players are stable and do not move during vehicle operation. Ensure the players do not obstruct the driver's view or interfere with vehicle safety features.

OPERATING INSTRUCTIONS

Powering On/Off

Press and hold the Power button on the unit for a few seconds to turn it on or off.

Playing a DVD

1. Open the disc tray cover by gently lifting it.
2. Place a DVD disc onto the spindle with the label side facing up. Ensure the disc is seated correctly.
3. Close the disc tray cover firmly until it clicks into place.
4. The player will automatically begin reading the disc. If it does not, press the Play button on the unit or remote control.

Playing Media from USB/SD Card

1. Insert a USB flash drive into the USB port or an SD card into the SD card slot.
2. Use the remote control or unit buttons to navigate to the