

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER MX3200B 6-Speed Hand Mixer User Manual

BLACK+DECKER MX3200B

BLACK+DECKER MX3200B 6-Speed Hand Mixer User Manual

Model: MX3200B

INTRODUCTION

Thank you for choosing the BLACK+DECKER 6-Speed Hand Mixer. This manual provides important information regarding the safe operation, maintenance, and care of your appliance. Please read it thoroughly before first use and keep it for future reference.

This hand mixer is designed for various mixing tasks, including stirring, beating, whisking, whipping, and working with dough. It features 250 watts of power and a Turbo Boost button for enhanced performance. The slower starting speed helps to minimize mess during operation.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Read all instructions.
- To protect against electrical shock, do not immerse mixer, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces, including the stove.
- Remove all attachments from mixer before washing.

PRODUCT OVERVIEW





The BLACK+DECKER MX3200B Hand Mixer with its standard beaters attached, ready for use. This image highlights the sleek black design and the ergonomic handle.



6 Speeds + Turbo Boost

A close-up view of the mixer's control panel, showing the 6-speed dial (0-6) and the dedicated Turbo Boost button for extra power when needed.



Includes

Two wire beaters, one whisk,
two dough hooks and storage case

The hand mixer displayed alongside its complete set of five attachments: two wire beaters, one whisk, and two dough hooks, illustrating the versatility of the appliance.



Storage Case

The hand mixer and its attachments neatly organized within the included storage case, demonstrating its convenient and space-saving design.

SETUP

Unpacking and Initial Cleaning

1. Carefully remove all packaging materials and any labels from the mixer.
2. Wash all attachments (beaters, whisk, dough hooks) in warm, soapy water or in the dishwasher. Rinse and dry thoroughly.
3. Wipe the mixer body with a damp cloth. Do not immerse the mixer body in water.

Attaching Beaters/Attachments

- Ensure the mixer is unplugged before attaching or removing any accessories.
- Insert the desired beaters or dough hooks into the openings on the bottom of the mixer. Push firmly until they click into place. The beaters are interchangeable.
- For the whisk attachment, insert it into either opening.

OPERATING INSTRUCTIONS

General Mixing Tips

- Always start mixing at the lowest speed (Speed 1) to prevent ingredients from splattering.
- Gradually increase the speed as needed for your recipe.
- Use the Turbo Boost button for short bursts of maximum power.
- For best results, use ingredients at room temperature unless otherwise specified by the recipe.

Speed Guide

Speed Setting	Recommended Use
Speed 1 (Stir)	Combining dry ingredients, folding in flour, mixing thin batters.
Speed 2 (Blend)	Mixing gravies, sauces, puddings, and thick batters.
Speed 3 (Mix)	Creaming butter and sugar, mixing cake mixes.
Speed 4 (Beat)	Beating eggs, whipping potatoes, mixing cookie dough.
Speed 5 (Whip)	Whipping cream, egg whites, frosting.
Speed 6 (High/Turbo)	Heavy mixing, kneading dough (with dough hooks), maximum aeration.



250 Watts of Power

The hand mixer in action, demonstrating its capability to efficiently mix various ingredients, such as this chocolate batter, with its 250 watts of power.

MAINTENANCE AND CLEANING

Cleaning the Mixer Body

- Always unplug the mixer before cleaning.
- Wipe the exterior of the mixer body with a clean, damp cloth. For stubborn spots, use a mild soap solution.
- Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
- Never immerse the mixer body in water or any other liquid.

Cleaning Attachments

- The beaters, whisk, and dough hooks are dishwasher-safe for easy cleaning.
- Alternatively, they can be washed by hand in warm, soapy water. Rinse thoroughly and dry immediately to prevent water spots.

Storage

- Ensure the mixer and all attachments are clean and dry before storing.
- Store the mixer and its attachments in the provided storage case to keep them organized and protected.
- Store in a cool, dry place.



TROUBLESHOOTING

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outlet not working; circuit breaker tripped.	Ensure the mixer is securely plugged into a working electrical outlet. Check your home's circuit breaker.
Attachments are difficult to insert or remove.	Attachments not aligned correctly; debris in openings.	Ensure attachments are aligned with the openings and push firmly. Check for any obstructions in the openings.
Mixer is noisy or vibrates excessively.	Overloaded with thick mixture; attachments not properly seated.	Reduce the amount of ingredients or thin the mixture. Ensure attachments are fully inserted and locked.
Splattering during mixing.	Speed setting too high; bowl too full.	Start at a lower speed and gradually increase. Use a larger mixing bowl or reduce ingredient quantity.

SPECIFICATIONS

Model: MX3200B
Brand: BLACK+DECKER

Power: 250 Watts

Speeds: 6-Speed with Turbo Boost

Material: Plastic (body), Stainless Steel (attachments)

Dimensions (DxWxH): 3.8" x 9" x 7.2"

Item Weight: Approximately 2.1 lbs

Attachments Included: 2 Wire Beaters, 1 Whisk, 2 Dough Hooks

Special Features: Slower starting speed, ergonomic design, bowl and heel rest, storage case.



A visual representation of the hand mixer's dimensions, indicating its compact size for easy handling and storage.

WARRANTY AND SUPPORT

For warranty information, product registration, or customer support, please refer to the official BLACK+DECKER website or the contact information provided in your product packaging.

You can also find additional resources and support documents online:

- [User Guide \(PDF\)](#)
- [User Manual \(PDF\)](#)
- [Visit the Official BLACK+DECKER Store on Amazon](#)

© 2025 BLACK+DECKER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question