

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Big Boss](#) /
- › [Big Boss 16Qt Extra Large Glass Air Fryer Model 9065 Instruction Manual](#)

Big Boss 9065

Big Boss 16Qt Extra Large Glass Air Fryer Instruction Manual

Model: 9065

1. INTRODUCTION

Thank you for choosing the Big Boss 16Qt Extra Large Glass Air Fryer. This appliance is designed to provide a healthier way to cook your favorite foods, utilizing powerful 360° convection heat for crispy results with little to no oil. Its versatile 4-in-1 design allows for air frying, baking, roasting, grilling, and toasting. The glass construction ensures a non-toxic cooking environment, free from Teflon and other harmful chemicals. This manual provides essential information for safe and efficient operation, maintenance, and care of your new air fryer.

GRANITESTONE®

Glass, Non Toxic Air Fryer



Crispy & Healthy
Cooking



1300W High
Powered Heating



XL 16QT
Capacity



Fry
Faster



Low Energy
Consumption



Dishwash
Safe



The Big Boss 16Qt Extra Large Glass Air Fryer in operation, showcasing its capacity and cooking capabilities.

2. SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Always place the air fryer on a stable, heat-resistant surface.
- Do not touch hot surfaces. Use handles or knobs. Always use oven mitts when handling hot components.

- To protect against electric shock, do not immerse the cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the appliance manufacturer.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.
- Ensure the glass bowl is fully cooled before washing, especially when using cold water. Rapid temperature changes can cause glass to crack.

3. PRODUCT OVERVIEW AND COMPONENTS

The Big Boss Air Fryer comes with several components designed for versatile cooking. Familiarize yourself with each part before use.

ONE AIR FRYER, ENDLESS OPTIONS

Frying, roasting, toasting, baking, and more!



- **Temperature Control:** Dial to set desired cooking temperature.
- **Lid Handle:** For safe lifting and placement of the lid.
- **Heat Indicator:** Light to show when the heating element is active.
- **Power Light:** Indicates the appliance is powered on.
- **Timer:** Dial to set cooking duration.
- **Glass Lid with Tight Seal:** Ensures efficient heat circulation.
- **Mesh Basket:** For air frying smaller items like fries or wings.
- **Two Cooking Racks:** High and low racks for multi-level cooking.
- **Stainless Steel Extension Ring:** Increases cooking capacity for larger items.
- **Tray Tongs:** For safely handling hot racks and baskets.
- **Recipe Book:** Includes 50 popular recipes to get you started.
- **Glass Bowl:** The main cooking vessel, made of durable, non-toxic glass.

4. SETUP

Before first use, ensure all packaging materials are removed. Wash all removable parts (glass bowl, racks, basket, extension ring) with warm, soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.

1. Place the main unit on a stable, heat-resistant countertop, ensuring adequate space around it for ventilation.
2. Carefully place the large glass bowl onto the base of the main unit.
3. Insert the desired cooking rack or mesh basket into the glass bowl. If cooking larger items, place the stainless steel extension ring on top of the glass bowl before placing the lid.
4. Place the lid (containing the heating element and controls) securely on top of the glass bowl or extension ring. Ensure it is properly seated.
5. Plug the power cord into a grounded electrical outlet.

For visual guidance on assembly, please refer to the video below. Note: This video demonstrates a similar Nuwave Oven Pro Plus 2 model, but the assembly principles are largely the same.

Video demonstrating the assembly process for a similar convection oven. (Nuwave Oven Pro Plus 2 model shown)

5. OPERATING INSTRUCTIONS

The Big Boss Air Fryer features easy-to-use time and temperature controls for precise cooking.

PRECISION CONTROL FOR FLAWLESS FRYING



The control panel features intuitive dials for setting temperature and time.

Setting Temperature and Time:

1. Ensure the lid is securely placed on the glass bowl.
2. Turn the **Temperature** dial to your desired cooking temperature (range: 180°F to 400°F).
3. Turn the **Timer** dial to your desired cooking time (up to 60 minutes). The appliance will automatically begin heating once both are set.
4. The **Heat** indicator light will illuminate when the heating element is active.
5. When the timer reaches zero, the appliance will automatically shut off and emit an audible signal.

Cooking Tips:

- For best results, preheat the air fryer for 3-5 minutes at the desired temperature before adding food.
- Shake or flip food halfway through cooking for even browning and crispiness.
- Do not overcrowd the basket or racks. Cook in batches if necessary to ensure proper air circulation.
- Use the included recipe book for recommended temperatures and times for various foods.

3 Colors, Your Choice



Guide for optimal temperature settings for different food types.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your air fryer. The Big Boss Air Fryer features a convenient auto-clean function and dishwasher-safe components.

CLEAN UP TAKES CARE OF ITSELF



The auto-clean function simplifies the cleaning process for the glass bowl.

Auto-Clean Function:

1. After cooking, allow the glass bowl to cool slightly.
2. Add a small amount of warm water and a few drops of dish soap to the glass bowl.
3. Place the lid back on the unit.
4. Set the timer to 5-10 minutes and the temperature to 250°F (Thaw/Wash setting).
5. The appliance will circulate the soapy water, helping to loosen food residue.
6. Once complete, unplug the unit, carefully remove the lid, and discard the soapy water.

Manual Cleaning:

- Ensure the appliance is unplugged and completely cooled before cleaning.
- The glass bowl, cooking racks, mesh basket, and extension ring are **dishwasher safe**. Alternatively, wash them by hand with warm, soapy water and a non-abrasive sponge.
- Wipe the exterior of the main unit and the lid (heating element portion) with a damp cloth. Do not immerse the lid in water.
- For stubborn residue on the heating element, gently wipe with a damp cloth after ensuring it is completely cool.

7. TROUBLESHOOTING

If you encounter any issues with your Big Boss Air Fryer, please refer to the following common problems and solutions:

- **Appliance does not turn on:** Ensure the power cord is securely plugged into a working outlet and the lid is properly seated.
- **Food is not cooking evenly:** Do not overcrowd the cooking basket/racks. Shake or flip food halfway through cooking. Ensure the temperature and time settings are appropriate for the food type.
- **Smoke coming from the appliance:** A small amount of smoke during initial use is normal. If excessive smoke occurs, unplug the unit immediately. This may be due to excessive grease buildup or food residue. Clean the unit thoroughly.
- **Glass bowl cracks:** Avoid sudden temperature changes. Ensure the bowl is fully cooled before washing with cold water. Do not place frozen food directly onto a hot glass bowl.

8. SPECIFICATIONS

Feature	Specification
Model Name	9065
Brand	Big Boss
Capacity	16 Quarts (15.14 Liters)
Product Dimensions	12.5"D x 16"W x 13.5"H
Material	Glass
Output Wattage	1300 Watts

Max Temperature Setting	400 Degrees Fahrenheit
Control Method	Touch
Has Nonstick Coating	No
Is Dishwasher Safe	Yes (removable parts)
Air Frying Technology	Hot Air Circulation
Item Weight	14.74 pounds

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or contact the manufacturer directly. The manufacturer of this product is E.Mishan & Sons, Inc.