

BELLA BLA13716

BELLA 13716 Ice Cream Maker Instruction Manual

Model: BLA13716

Brand: BELLA

INTRODUCTION

Thank you for purchasing the BELLA 13716 Ice Cream Maker. This appliance is designed to help you create delicious homemade ice cream, frozen yogurt, and sorbet quickly and easily. Its compact design and simple operation make it a perfect addition to any kitchen. Please read this manual thoroughly before first use to ensure safe and optimal performance.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances.

- Read all instructions before operating the appliance.
- Do not immerse the motor base in water or other liquids.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid contact with moving parts.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not use attachments not recommended or sold by the manufacturer.
- Close supervision is necessary when any appliance is used by or near children.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your BELLA Ice Cream Maker:

- **Motor Base:** Contains the motor that rotates the paddle.
- **Freezer Bowl:** Double-insulated bowl that must be pre-frozen.
- **Mixing Paddle:** Stirring arm that mixes and aerates the ingredients.
- **Transparent Lid:** Allows you to view the ice cream making process and has an opening for adding ingredients.

- **Locking Handles:** Secure the lid to the freezer bowl.



An assembled BELLA 13716 Ice Cream Maker, featuring its vibrant red base, transparent lid, and the visible internal mixing paddle. The unit is compact and designed for countertop use.

SETUP GUIDE

1. **Prepare the Freezer Bowl:** Ensure the freezer bowl is completely frozen. For best results, place the bowl in the freezer for at least 8-12 hours, or until it is completely solid. The colder the bowl, the better the ice cream will freeze.
2. **Assemble the Unit:** Place the frozen freezer bowl onto a stable, flat surface. Insert the mixing paddle into the center of the freezer bowl.
3. **Attach the Motor Base:** Position the motor base onto the transparent lid, ensuring it clicks securely into place.
4. **Secure the Lid:** Place the assembled lid with the motor base onto the freezer bowl. Align the locking handles on the lid with the corresponding slots on the bowl and twist to secure.
5. **Plug In:** Plug the power cord into a standard electrical outlet.

OPERATING INSTRUCTIONS

Follow these steps to make delicious ice cream:

1. **Prepare Your Mixture:** Prepare your desired ice cream, frozen yogurt, or sorbet mixture according to your recipe. Ensure the mixture is chilled before adding it to the machine.
2. **Start the Machine:** Turn on the ice cream maker using the ON/OFF switch located on the motor base. The mixing paddle will begin to rotate.
3. **Add Ingredients:** Slowly pour your chilled mixture through the ingredient opening in the transparent lid while the machine is running.
4. **Churn:** Allow the machine to churn for approximately 20-30 minutes, or until the mixture reaches your desired consistency. The churning time may vary based on the recipe and desired firmness.
5. **Check Consistency:** For a softer consistency, serve immediately. For a firmer consistency, transfer the ice cream to an airtight container and place it in the freezer for 2-4 hours.
6. **Turn Off and Unplug:** Once churning is complete, turn off the machine and unplug it from the outlet.

CARE AND CLEANING

Proper cleaning ensures the longevity of your ice cream maker:

1. **Unplug:** Always unplug the appliance before cleaning.
2. **Disassemble:** Remove the motor base, lid, and mixing paddle from the freezer bowl.
3. **Clean Non-Electrical Parts:** The mixing paddle and transparent lid are dishwasher safe (top rack recommended) or can be hand-washed with warm, soapy water. Rinse thoroughly and dry.
4. **Clean Freezer Bowl:** Hand-wash the freezer bowl with warm, soapy water. Do not place it in the dishwasher as this can damage the insulation. Ensure the bowl is completely dry before placing it back in the freezer.
5. **Clean Motor Base:** Wipe the motor base with a damp cloth. Never immerse the motor base in water or any other liquid.
6. **Storage:** Store the disassembled parts once completely dry.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
Ice cream is not freezing.	Freezer bowl not sufficiently frozen. Mixture not chilled.	Ensure freezer bowl is frozen for 8-12 hours. Chill mixture thoroughly before adding.
Machine stops during operation.	Mixture is too thick. Overload.	Reduce the amount of mixture. Ensure mixture is not too thick. Unplug, wait 10 minutes, then restart.
Lid does not lock properly.	Lid or bowl not aligned correctly.	Ensure the lid and bowl are properly aligned before twisting the locking handles.

SPECIFICATIONS

- Model:** BLA13716
- Brand:** BELLA
- Capacity:** 1 Liter
- Material:** Plastic
- Color:** Red
- Dimensions:** 10.24 x 10.24 x 10.24 inches

Item Weight: 5.4 Pounds

Operation Mode: Automatic

Care Instructions: Dishwasher Safe (paddle and lid), Hand-wash (freezer bowl)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official BELLA website. You can also contact BELLA customer service for assistance.

Online Support: [Visit the BELLA Store on Amazon](#)

© 2023 BELLA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question