

[Manuals.plus](#) /

› [Bissell](#) /

› Bissell Liftoff Cleaner Hose (Model 2037905) Instruction Manual

Bissell 2037905

Bissell Liftoff Cleaner Hose (Model 2037905) Instruction Manual

OEM Part Number: 2037905

INTRODUCTION

This manual provides comprehensive instructions for the Bissell Liftoff Cleaner Hose, OEM part number 2037905. This replacement hose is designed to fit various compatible Bissell models, including the Little Green Pro (Model 2505). It is manufactured in the United States and is an O.E.M. authorized part. Please read these instructions carefully before installation and use to ensure proper function and longevity of your product.



Image 1: The Bissell Liftoff Cleaner Hose, showing its coiled design and connectors.

PRODUCT OVERVIEW

The Bissell Liftoff Cleaner Hose is a crucial component for your portable spot cleaner, enabling effective cleaning in hard-to-reach areas. This replacement part includes the hose and handle assembly, ready for installation.



Image 2: Close-up view of the Bissell Liftoff Cleaner Hose, highlighting the handle and attachment end.

SETUP AND INSTALLATION

This section provides a detailed guide for replacing the hose on compatible Bissell models. Tools required include a Phillips screwdriver and needle-nose pliers. It is recommended to keep track of the screws as they are removed, noting their original positions for reassembly.

Hose Replacement Procedure:

1. Detach both the solution tank and the waste tank from the cleaner unit.
2. Remove the six screws that secure the outer shell to the unit. Typically, two are located at the bottom of each side, and one at the very top of the arc.
3. Remove the three screws on the cord wrap assembly. Two are in holes within the wrap arm, and one is located under where the solution tank sits.
4. On the hose wrap, locate the round grey sticker. Carefully push a flathead screwdriver into a void behind it and pull back to gain leverage, then slowly peel off the sticker to avoid damage.
5. Remove the five screws that hold the hose wrap to the side casing. At this point, the hose wrap and outer shell can be completely removed.
6. Between the two chimney-shaped tubes that feed the waste tank, remove the two screws attaching them to the motor housing assembly.
7. Remove the four screws that secure the lid of the motor housing. Two are in deep pits towards the outside of the unit, and the other two are exposed towards the middle. A right-angle screwdriver may be necessary for the middle screws due to an overhang.
8. Lift the cover off the motor housing and use needle-nose pliers to loosen the two hose clamps that attach the T-shaped connector.
9. Attach the new hose's T-shaped connector and securely put the hose clamps back into place.
10. Ensure the rubber gasket around the solution hose aligns correctly with the notch in the motor housing, then reattach the lid and its screws.
11. Reattach the two chimney screws.
12. Reattach the outer shell pieces, ensuring all locking tabs are correctly aligned, then secure with the six outer shell

casing screws removed in step two.

- 13. Reattach the three cord wrap screws.
- 14. Finally, reattach the hose wrap and its five screws, then carefully reapply the round grey sticker.

For a visual guide to the installation process, please refer to the video below. This video demonstrates the steps for replacing the hose on a Bissell Little Green Pro cleaner.

Your browser does not support the video tag.

Video 1: Detailed guide on replacing the hose for a Bissell Little Green Pro cleaner. This video demonstrates the screw locations and assembly process.

OPERATING INSTRUCTIONS

Once the new hose is securely installed, operate your Bissell cleaner according to its original user manual. Ensure all connections are tight before each use to prevent leaks and maintain optimal suction. The hose is designed for efficient spot cleaning and reaching difficult areas on carpets, upholstery, and car interiors.

MAINTENANCE

Proper maintenance of your replacement hose will extend its lifespan and ensure continued performance.

- After each use, rinse the hose with clean water to remove any cleaning solution residue or debris.
- Regularly inspect the entire length of the hose for any signs of cracks, kinks, or blockages.
- Store the hose properly to avoid excessive bending, crushing, or entanglement, which can lead to damage.
- Avoid coiling the hose too tightly, as this can create stress points and cause the material to tear, especially near the connectors.

TROUBLESHOOTING

If you encounter issues with your cleaner after hose replacement, consider the following common problems and solutions:

- **Reduced Suction:** Check all hose connections to ensure they are tight and properly sealed. Inspect the hose for any visible cracks, holes, or blockages. Verify that the cleaner's solution and waste tanks are correctly seated and that all filters are clean and free of debris.
- **Leaks:** Confirm that all hose clamps and connectors are securely fastened. Examine the hose for any visible damage that might be causing a leak.
- **Hose Kinks:** Avoid sharp bends during both use and storage. If a kink occurs, gently straighten it to restore proper flow. Persistent kinking may indicate improper storage or material fatigue.

SPECIFICATIONS

Brand	Bissell
Model Number	2037905
Material	Rubber
Color	Black
Item Length	54 Inches
Included Components	Hose & Handle

WARRANTY AND SUPPORT

This Bissell Liftoff Cleaner Hose (Model 2037905) comes with a 30-day manufacturer's warranty. For warranty claims, technical support, or any questions regarding your product, please contact Bissell customer support directly. Refer to your original cleaner's manual or the Bissell website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question