

Smartby CT-90302

Smartby Universal Remote Control for Toshiba TVs (Model CT-90302) Instruction Manual

1. INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your Smartby Universal Remote Control, model CT-90302. This remote is designed as a direct replacement for various Toshiba TV models, including LCD, LED, 3D, HDTV, and 4K UHD Smart TVs. It offers a convenient solution for controlling your Toshiba television without the need for complex programming.

Please read this manual thoroughly before using the remote control to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

The Smartby Universal Remote Control (CT-90302) is engineered for ease of use and broad compatibility with Toshiba televisions. Its ergonomic design and clearly labeled buttons facilitate intuitive control over your TV's functions.





Figure 2.1: Front view of the Smartby Universal Remote Control, showing all buttons and layout.





Figure 2.2: Back view of the Smartby Universal Remote Control, highlighting the battery compartment.

Key Features:

- **No Programming Required:** Ready for use immediately after battery installation.
- **Broad Compatibility:** Supports a wide range of Toshiba TV models (excluding Fire TV models).

- **Full Functionality:** Replicates all essential functions of original Toshiba remote controls.
- **Durable Design:** Constructed for reliable performance and long transmission distance.

3. SETUP

3.1 Battery Installation

The Smartby Universal Remote Control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 3.1: Battery compartment with cover removed, illustrating battery placement.

3.2 Initial Use

Once batteries are installed, the remote control is ready for immediate use with your Toshiba TV. No programming or pairing is required. Simply point the remote at your television and begin operating it.

4. OPERATING INSTRUCTIONS

The Smartby Universal Remote Control provides access to all standard functions of your Toshiba TV. Below is a guide to common button functions:

- **POWER:** Turns the TV on or off.
- **INPUT:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **Number Buttons (0-9, +10, 100):** Directly select channels or input numerical values.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the channel up or down.
- **MUTE:** Mutes or unmutes the TV audio.
- **MENU:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Navigate through menus and confirm selections.
- **BACK:** Returns to the previous menu or screen.
- **INFO:** Displays information about the current program or input.
- **MODE SELECT (TV, CABLE/SAT, AUX1, AUX2):** Allows selection of the device to be controlled if the remote supports multi-device control. Ensure 'TV' mode is selected for television operation.
- **Playback Controls (PLAY, PAUSE/STEP, STOP, REW, FF, SKIP, REC, RESUME PLAY, SLOW):** Control media playback functions for compatible devices connected to your TV (e.g., DVD players, VCRs).

For specific advanced functions, refer to your Toshiba TV's original user manual, as button labels on this universal remote correspond to standard Toshiba remote functions.

5. MAINTENANCE

5.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

5.2 Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's surface or internal components.

5.3 Storage

When storing the remote for extended periods, remove the batteries to prevent leakage, which can cause damage. Store in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following troubleshooting steps:

- **Remote is not responding:**
 - Ensure batteries are correctly installed with proper polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Ensure you are within the effective operating range and pointing the remote directly at the TV.
 - Try unplugging your Toshiba TV from the power outlet for 60 seconds, then plug it back in. This can reset the TV's infrared receiver.
- **Certain buttons do not work:**
 - Verify that the remote is in 'TV' mode if it has a mode selection feature.
 - Clean the remote's surface, especially around the unresponsive buttons, to ensure no debris is interfering.
 - Some advanced functions may not be supported on all Toshiba TV models, particularly older ones.
- **Remote works intermittently:**
 - This often indicates low battery power. Replace batteries.
 - Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the infrared signal.
- **Compatibility:** This remote is designed for Toshiba TVs. It is not compatible with Toshiba Fire TV models.

7. SPECIFICATIONS

Model Number	CT-90302 (Internal SKU: 4330254586)
--------------	-------------------------------------

Brand	Smartby
Compatible Devices	Toshiba Televisions (LCD, LED, 3D, HDTV, 4K UHD Smart TV)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	8.9 x 2.6 x 0.7 inches (approximately)
Item Weight	3.52 ounces (approximately)

8. WARRANTY AND SUPPORT

This Smartby Universal Remote Control is designed for reliable performance. For any issues not resolved by the troubleshooting guide, please contact the retailer or manufacturer for assistance.

Please retain your proof of purchase for any warranty claims. Specific warranty terms may vary by region and retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

