

Sea Gull Lighting 65806-827

Sea Gull Lighting 65806-827 Pendant Light Instruction Manual

Model: 65806-827

[Introduction](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

[Support](#)

INTRODUCTION

This manual provides instructions for the safe installation, operation, and maintenance of your Sea Gull Lighting 65806-827 Pendant Light. Please read these instructions thoroughly before beginning installation and retain them for future reference.

The Sea Gull Lighting 65806-827 is a transitional style 1-light pendant fixture featuring a Bell Metal Bronze finish and Satin Etched Glass shades. It is designed for indoor use only and uses one 60W Medium base bulb.

Key Features:

- Transitional styled 1-light Pendant design.
- Finished in Bell Metal Bronze.
- Includes Satin Etched Glass for diffused light.
- Requires 1 (60W) Medium base bulb (not included).
- UL Listed for safety.



Image: The Sea Gull Lighting 65806-827 Pendant Light, showcasing its Bell Metal Bronze finish and Satin Etched Glass shades, installed in a room setting.

SETUP AND INSTALLATION

Important Safety Information: Always turn off the power at the main circuit breaker or fuse box before beginning installation. Consult a qualified electrician if you are unsure about wiring procedures. This fixture is designed for indoor use only.

Tools and Materials Required (Not Included):

- Screwdriver (Phillips and flathead)
- Wire strippers
- Pliers
- Electrical tape
- Ladder
- Safety glasses

Installation Steps:

1. Prepare for Installation:

- Turn off electrical power at the main fuse box or circuit breaker.
- Unpack all components carefully and inspect for any damage. Keep all packaging materials until you are sure all parts are accounted for.

2. Mount the Mounting Plate:

- Attach the mounting plate to the junction box in the ceiling using the provided mounting screws. Ensure the plate is securely fastened.

3. Adjust Chain/Cord Length (if applicable):

- Determine the desired hanging height for the pendant. Adjust the chain or cord length as necessary. For chain-hung fixtures, use pliers to open and remove excess chain links. For cord-hung fixtures, shorten the cord by pushing it up into the canopy.

4. Wire the Fixture:

- Connect the fixture's black wire to the house's black (hot) wire using a wire nut.
- Connect the fixture's white wire to the house's white (neutral) wire using a wire nut.
- Connect the fixture's ground wire (bare copper or green) to the house's ground wire and to the mounting plate's ground screw.
- Ensure all wire connections are secure and covered with wire nuts and electrical tape if necessary.

5. Secure the Canopy:

- Carefully push the wired connections into the junction box.
- Raise the fixture canopy to the ceiling and secure it to the mounting plate using the provided screws or decorative nuts.

6. Install the Glass Shade:

- Carefully attach the Satin Etched Glass shade to the fixture according to the specific design. Typically, this involves securing it with a threaded ring or screws.

7. Install the Bulb:

- Screw one 60-watt maximum Medium (E26) base incandescent bulb into the socket. Do not exceed the maximum wattage.

8. Restore Power:

- Turn the electrical power back on at the main circuit breaker or fuse box.
- Test the fixture to ensure it is working correctly.

OPERATING INSTRUCTIONS

The Sea Gull Lighting 65806-827 Pendant Light operates like a standard light fixture. Once properly installed and powered, it can be controlled via a wall switch connected to the circuit.

Basic Operation:

- **Turning On/Off:** Use the wall switch connected to the fixture's electrical circuit to turn the light on or off.

Note on Control Method: While the product specifications mention "App" as a control method, this typically refers to compatibility with smart home systems or smart bulbs that can be controlled via an app, rather than the fixture itself having built-in app control. The fixture itself is a standard wired pendant light.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your pendant light.

Cleaning:

- **Always turn off power** to the fixture at the circuit breaker before cleaning.
- For the Bell Metal Bronze finish, wipe with a soft, dry cloth. Do not use abrasive cleaners, polishes, or solvents as they may damage the finish.
- For the Satin Etched Glass shade, gently wipe with a soft, damp cloth. Mild glass cleaner can be used if necessary, applied to the cloth first, not directly to the glass. Ensure the glass is completely dry before restoring power.

Bulb Replacement:

- **Always turn off power** to the fixture at the circuit breaker before replacing the bulb.
- Allow the old bulb to cool completely before touching it.
- Unscrew the old bulb from the socket.
- Screw in a new 60-watt maximum Medium (E26) base incandescent bulb. Do not exceed the specified wattage to prevent overheating and potential damage.
- Restore power and test the new bulb.

TROUBLESHOOTING

If you experience issues with your pendant light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	• Power is off at the circuit breaker. • Bulb is loose or burned out. • Incorrect wiring. • Faulty wall switch.	• Check the circuit breaker and ensure it is in the "ON" position. • Tighten the bulb or replace it with a new one. • Review wiring connections (ensure power is off first). Consult an electrician if unsure. • Test the wall switch.

Problem	Possible Cause	Solution
---------	----------------	----------

Light flickers.	• Loose bulb. • Loose wiring connection. • Incompatible dimmer switch (if applicable).	• Tighten the bulb. • Check wiring connections (ensure power is off first). • Ensure dimmer switch is compatible with incandescent bulbs.
Fixture hums.	• Loose components. • Incompatible dimmer switch.	• Ensure all parts are securely fastened. • Replace dimmer with a compatible one or a standard switch.

If the problem persists after attempting these solutions, contact a qualified electrician or Sea Gull Lighting customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Sea Gull Lighting
Model Number	65806-827
Product Dimensions	12.25 x 18.04 x 12.25 inches
Item Weight	4 pounds
Color	Bell Metal Bronze (Finish), Clear / Tinted Glass (Shade)
Material	Glass
Style	Transitional & Beach
Light Fixture Form	Pendant
Specific Uses	Indoor use only
Power Source	Corded Electric
Special Feature	Energy Star Lighting (Note: This may refer to compatibility with Energy Star bulbs, as the fixture itself is incandescent.)
Control Method	App (via compatible smart bulbs/systems)

Feature	Detail
Light Source Type	Incandescent
Finish Type	Bronze
Shade Material	Glass
Number of Light Sources	1
Voltage	120 Volts
Wattage	60 watts (Max)
Mounting Type	Ceiling Mount
Specification Met	UL Listed
UPC	785652227363

WARRANTY INFORMATION

This Sea Gull Lighting fixture is equipped with a **1-year warranty** backed by the manufacturer. This warranty covers defects in materials and workmanship under normal use and service.

For specific terms and conditions, or to make a warranty claim, please refer to the documentation included with your product or contact Sea Gull Lighting customer support.

Extended protection plans may also be available for purchase separately:

- 3-Year Protection Plan
- 4-Year Protection Plan
- Complete Protect: One plan covers all eligible past and future purchases (monthly billing)

These extended plans are offered by third-party providers and are separate from the manufacturer's standard warranty.

CUSTOMER SUPPORT

For technical assistance, replacement parts, or warranty inquiries, please contact Sea Gull Lighting customer support.

Manufacturer: Sea Gull Lighting

Please have your model number (65806-827) and date of purchase available when contacting support.

You can often find contact information on the manufacturer's official website or on the product packaging.