

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Keter](#) /

› [Keter Rockwood 150 Gallon Deck Box Instruction Manual Model 214301](#)

Keter 214301

Keter Rockwood 150 Gallon Deck Box Instruction Manual

PRODUCT OVERVIEW

The Keter Rockwood 150 Gallon Deck Box is designed for outdoor storage, offering a large capacity for various items such as cushions, garden tools, and pool supplies. Its durable resin construction provides weather resistance, keeping contents dry and ventilated. The design features an elegant wood-panel appearance and an automatic opening mechanism for convenient access. This unit can also serve as a seating solution.

Key Features:

- Durable, weather-resistant construction keeps contents dry and ventilated.
- Low maintenance; will not warp, dent, stain, or peel.
- Elegant wood-panel appearance.
- Easy access storage with an automatic opening mechanism.
- Ideal for storing large cushions, garden, and pool supplies.

ASSEMBLY INSTRUCTIONS

Before beginning assembly, ensure all parts are present and undamaged. Refer to the included parts list. Assembly typically requires a Phillips head screwdriver and may be easier with two people.

Step-by-Step Guide:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat surface to identify each piece.
2. **Assemble Base and Side Panels:** Connect the base panel to the side panels. Ensure all tabs and slots align correctly and click into place. Apply gentle pressure until a secure fit is achieved.
3. **Attach Front and Back Panels:** Secure the front and back panels to the assembled base and side panels. Verify all connections are firm.
4. **Install Lid Hinges:** Position the lid and attach the hinges to the back panel and the lid using the provided screws. Ensure the hinges are oriented correctly for smooth operation.

5. **Connect Automatic Opening Mechanism:** Attach the gas struts or hydraulic lifters to the designated points on the lid and the side panels. Follow the specific instructions for your model to ensure proper function and safety. This step often benefits from a second person to hold the lid.
6. **Final Check:** Once assembled, gently open and close the lid to confirm the automatic mechanism operates smoothly and the lid closes securely.

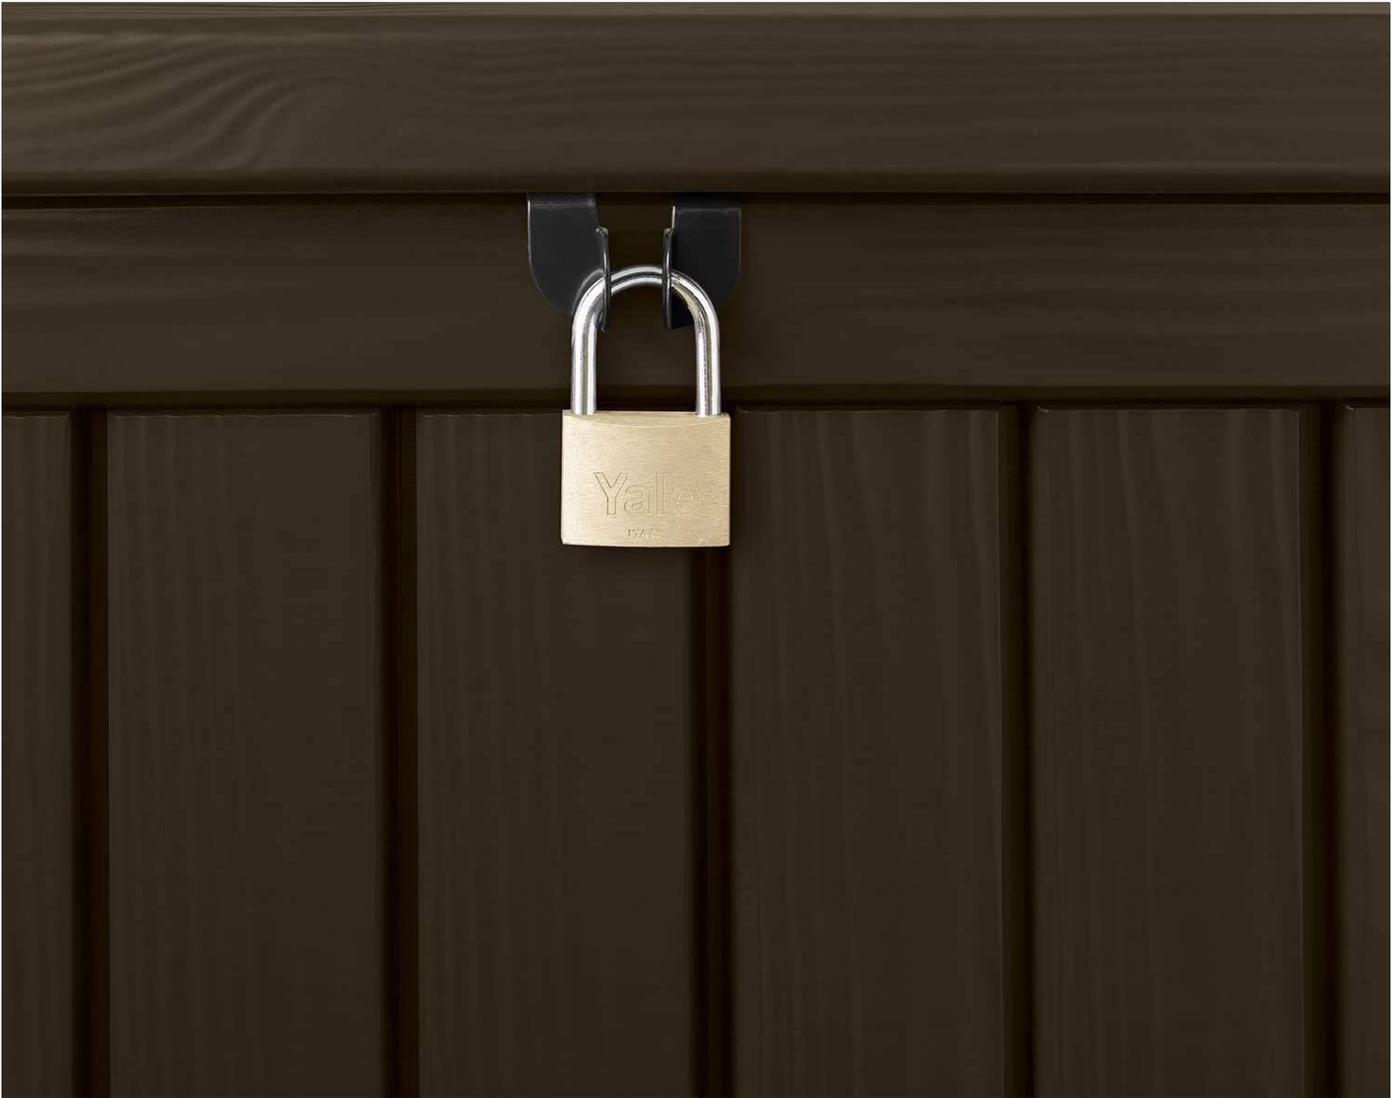


Image: All components of the Keter Rockwood Deck Box laid out before assembly. This image shows the various panels, lid, and hardware required for construction.



Image: A Keter Rockwood Deck Box in a partially assembled state, demonstrating how the side and front panels connect to form the main structure.

OPERATING INSTRUCTIONS

The Keter Rockwood Deck Box is designed for simple and convenient use.

Opening the Lid:

To open the lid, gently lift the front edge. The automatic opening mechanism (gas struts) will assist in raising the lid smoothly and holding it open, providing full access to the storage compartment. This feature prevents the lid from slamming shut unexpectedly.

Closing the Lid:

To close, gently pull the lid downwards. The automatic mechanism will control the descent, ensuring a soft and controlled closure. Ensure the lid is fully closed to maintain weather resistance.

Securing the Box:

The deck box features a provision for a padlock (not included) to secure your stored items. Align the padlock loops on the lid and the front panel, then insert your padlock.



Image: The Keter Rockwood Deck Box with its lid fully open, revealing the spacious interior filled with various garden tools and supplies. The automatic opening mechanism is visible, holding the lid in place.



Image: A person demonstrating the ease of opening the Keter Rockwood Deck Box, with the lid smoothly lifting thanks to the automatic mechanism.



Image: A close-up view of the Keter Rockwood Deck Box showing the integrated loops for attaching a padlock, providing an option for securing contents.

CARE AND MAINTENANCE

Proper care and maintenance will ensure the longevity and appearance of your Keter Rockwood Deck Box.

- **Cleaning:** Clean the deck box periodically with a mild soap solution and a soft cloth or sponge. Rinse thoroughly with water. Avoid abrasive cleaners, brushes, or harsh chemicals, as these can damage the resin surface.
- **Stain Removal:** For stubborn stains, a diluted bleach solution can be used, followed by thorough rinsing. Test on an inconspicuous area first.
- **Weather Protection:** While the deck box is weather-resistant, prolonged exposure to extreme weather conditions (e.g., heavy snow loads, intense UV radiation) can be mitigated by placing it in a sheltered area or using a protective cover if desired.
- **Inspection:** Periodically check all connections and the automatic opening mechanism for proper function. Ensure screws are tight and hinges are free of debris.
- **Ventilation:** The deck box is designed with ventilation to prevent moisture buildup. Ensure these vents are not obstructed.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Keter Rockwood Deck Box.

- **Lid Does Not Close Properly:**
 - Check for obstructions inside the box or along the lid's edge.
 - Ensure the box is on a level surface. Uneven ground can cause the frame to twist slightly, affecting lid

alignment.

- Verify that the hinges and automatic opening mechanism are correctly installed and not damaged.

- **Water Inside the Box:**

- Confirm the lid is fully closed and sealed.
- Check for any cracks or damage to the resin panels. While durable, extreme impacts can cause damage.
- Ensure the deck box is not placed in an area where water can pool around its base, potentially seeping in from underneath.

- **Difficulty Opening/Closing Lid:**

- Inspect the automatic opening mechanism (gas struts) for any signs of damage or wear.
- Lubricate hinge points with a silicone-based spray if movement feels stiff.
- Ensure no items inside the box are pressing against the lid, preventing it from opening or closing freely.

PRODUCT SPECIFICATIONS

Brand	Keter
Model Number	214301
Color	Espresso Brown
Material	Resin
Product Dimensions (L x W x H)	61"L x 25.3"W x 28.5"H
Capacity	150 Gallons
Storage Volume	150 Gallons
Closure Type	Flip Top
Water Resistance Level	Water Resistant
Item Weight	43.4 Pounds
Opening Mechanism	Automatic Opening Mechanism
Recommended Uses	For storage
Special Feature	Automatic, Durable, Sturdy



Image: A diagram showing the Keter Rockwood Deck Box with its key dimensions: 61 inches length, 25.3 inches width, and 28.5 inches height.

WARRANTY INFORMATION

Keter products are manufactured to high standards and are subject to quality control. This product comes with a manufacturer's warranty against defects in materials and workmanship under normal use. The specific terms and duration of the warranty may vary by region and purchase date. Please retain your proof of purchase for warranty claims. For detailed warranty information, refer to the documentation included with your product or visit the official Keter website.

CUSTOMER SUPPORT

Should you require assistance with assembly, parts, or have any questions regarding your Keter Rockwood Deck Box, please contact Keter customer support. Contact information can typically be found on the Keter official website or on the product packaging. When contacting support, please have your model number (214301) and proof of purchase readily available.