

Jaclo 819-ULB

Jaclo 819-ULB Finger Touch Plug Lavatory Drain Instruction Manual

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Jaclo 819-ULB Finger Touch Plug Lavatory Drain. Designed for durability and ease of use, this unlacquered brass drain features a convenient finger touch plug mechanism. Please read these instructions carefully before beginning installation to ensure proper function and longevity of your product.

SAFETY INFORMATION

- Always turn off the main water supply to the sink before beginning any plumbing work.
- Wear appropriate personal protective equipment, such as safety glasses and gloves, during installation.
- Ensure all connections are secure to prevent leaks. Do not overtighten, as this may damage components.
- If you are unsure about any step of the installation process, consult a qualified plumber.
- Keep small parts away from children.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Drain Body (Upper and Lower sections)
- Finger Touch Plug
- Rubber Washer
- Friction Washer
- Lock Nut
- Tailpiece

INSTALLATION INSTRUCTIONS

Tools Required: Plumber's putty or silicone sealant, adjustable wrench, soft cloth.

1. **Prepare the Sink Opening:** Ensure the sink drain opening is clean and free of any old sealant or debris.
2. **Apply Sealant:** Apply a bead of plumber's putty or silicone sealant around the underside of the drain flange (the top part of the drain body that sits in the sink).
3. **Insert Drain Body:** Insert the drain body through the sink opening from the top. Press firmly to seat the flange and create a seal.
4. **Assemble from Underside:** From underneath the sink, slide the rubber washer onto the drain body, followed by the friction washer, and then thread the lock nut onto the drain body.
5. **Tighten Connections:** Hand-tighten the lock nut, then use an adjustable wrench to tighten it an additional 1/4 to 1/2 turn. Do not overtighten. Wipe away any excess sealant that squeezes out from around the flange.
6. **Attach Tailpiece:** Connect the tailpiece to the bottom of the drain body. Ensure a proper seal with a washer and nut (typically supplied with the P-trap assembly, not the drain).
7. **Connect P-Trap:** Connect your P-trap assembly to the tailpiece.
8. **Test for Leaks:** Once all connections are made, turn on the water supply and fill the sink. Check carefully for any leaks around the drain flange, lock nut, and P-trap connections. Tighten gently if necessary.



Image: The Jaclo 819-ULB Finger Touch Plug Lavatory Drain, showing its unlacquered brass finish and primary components. This image illustrates the drain body and plug, which are key elements in the installation process described above.

OPERATING THE FINGER TOUCH PLUG

The Jaclo 819-ULB drain features a simple finger touch mechanism for opening and closing the drain plug.

- **To Close the Drain:** Gently press down on the top of the drain plug. It will click into a sealed position, retaining water in the sink.
- **To Open the Drain:** Gently press down on the top of the drain plug again. It will click and release, allowing water to drain freely.

MAINTENANCE AND CARE

To maintain the appearance and function of your unlacquered brass drain:

- **Cleaning:** Clean regularly with a soft cloth and mild, non-abrasive soap and water. Rinse thoroughly and dry immediately.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, scouring pads, or harsh chemical

detergents, as these can damage the unlacquered brass finish.

- **Natural Patina:** Unlacquered brass will naturally develop a unique patina over time. This is a characteristic of the material and not a defect. If a brighter finish is desired, specialized brass cleaners can be used sparingly, following the cleaner's instructions.
- **Plug Removal:** The finger touch plug can typically be removed by pulling it straight up for cleaning any debris from the drain opening. Reinsert by aligning and pushing down until it seats properly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Drain leaks around the sink opening.	Improperly seated sealant or loose lock nut.	Ensure plumber's putty/silicone is properly applied and the lock nut is tightened sufficiently (do not overtighten). Reapply sealant if necessary.
Drain leaks from tailpiece connection.	Loose connection or missing/damaged washer.	Check and tighten the tailpiece nut. Ensure the washer is correctly seated and not damaged.
Finger touch plug does not seal or open properly.	Debris under the plug or mechanism malfunction.	Remove the plug and clean any hair or debris from the drain opening and the plug mechanism. Reinsert the plug. If the issue persists, contact customer support.
Slow draining.	Hair or debris accumulation in the drain.	Remove the plug and clear any obstructions from the drain opening. Use a drain snake if the blockage is further down.

SPECIFICATIONS

- **Brand:** Jaclo
- **Model Number:** 819-ULB
- **Part Number:** 819-ULB
- **Material:** Unlacquered Brass (ULB)
- **Type:** Finger Touch Plug Lavatory Drain
- **UPC:** 020111088070
- **ASIN:** B00BKC9VSE

WARRANTY AND SUPPORT

Jaclo products are manufactured to high-quality standards. For specific warranty information regarding your 819-ULB Finger Touch Plug Lavatory Drain, please refer to the warranty documentation included with your purchase or visit the official Jaclo website. For technical support or assistance with parts, please contact Jaclo customer service directly.

