

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PROFLO](#) /

› [PROFLO PFW6032ALSK Plus A 60" x 32" Alcove 8 Jet Whirlpool Bath Tub User Manual](#)

## PROFLO PFW6032ALSK



# PROFLO PFW6032ALSK Plus A 60" x 32" Alcove 8 Jet Whirlpool Bath Tub

Model: PFW6032ALSK

## INTRODUCTION

---

Welcome to the PROFLO PFW6032ALSK Plus A 60" x 32" Alcove 8 Jet Whirlpool Bath Tub user manual. This document provides essential information for the safe installation, operation, and maintenance of your new bath tub. Please read all instructions carefully before installation and use to ensure proper function and longevity of the product.

## SAFETY INFORMATION

---

Observe the following safety precautions to reduce the risk of injury or property damage:

- **Electrical Safety:** The bath tub must be connected to a dedicated, grounded electrical circuit protected by a Ground Fault Circuit Interrupter (GFCI). Do not operate the whirlpool system without sufficient water in the tub.
- **Water Temperature:** Avoid using excessively hot water, as prolonged exposure can cause hyperthermia. Always test water temperature before entering the tub.
- **Chemicals:** Use only cleaning agents specifically recommended for acrylic surfaces and whirlpool systems. Avoid abrasive cleaners, solvents, or harsh chemicals that can damage the tub surface or internal components.
- **Children:** Close supervision is necessary when children are near or in the bath tub.
- **Medical Conditions:** Individuals with heart conditions, diabetes, high or low blood pressure, or other medical conditions should consult a physician before using a whirlpool bath.
- **Foreign Objects:** Keep hair, loose clothing, and other objects away from the suction fittings to prevent entanglement or damage.

## PACKAGE CONTENTS

---

Verify that all components are present and undamaged upon receipt:

- PROFLO PFW6032ALSK Whirlpool Bath Tub (Acrylic)

- 8 Adjustable Jets (pre-installed)
- Integrated Pump System (pre-installed)
- Installation Hardware (check packaging for specific items)

## INSTALLATION (SETUP)

---

Proper installation is crucial for the safe and efficient operation of your whirlpool bath tub. It is highly recommended that installation be performed by a qualified, licensed professional plumber and electrician in accordance with all local plumbing and electrical codes.

### Pre-Installation Checks:

- **Location:** This model is designed for alcove installation. Ensure the installation area can accommodate the tub's dimensions of 60"L x 32"W x 19.75"H.
- **Structural Support:** Verify that the floor structure can support the weight of the tub when filled with water (approximately 45 gallons) and a bather.
- **Drainage:** This model features a left-hand drain. Confirm that your plumbing rough-in matches this configuration.
- **Electrical Requirements:** A dedicated 115 Volt, 15 Amp electrical circuit with GFCI protection is required for the whirlpool pump. Ensure the electrical supply is within reach of the pump motor.
- **Water Supply:** Hot and cold water lines must be available and properly capped until connection.

### Installation Steps (Summary - Refer to detailed instructions from your professional installer):

1. Prepare the alcove opening according to the tub's dimensions.
2. Position the tub and connect the drain assembly to the existing plumbing.
3. Connect the hot and cold water supply lines to the faucet (if applicable, faucet not included).
4. Make the electrical connection for the whirlpool pump to the dedicated GFCI circuit.
5. Level the tub using shims if necessary, ensuring stability.
6. Secure the tub to the wall studs as per local building codes.
7. Perform a leak test by filling the tub with water and operating the jets before sealing the perimeter.
8. Apply a waterproof sealant around the tub's perimeter where it meets the wall.



Image: PROFLO PFW6032ALSK Alcove 8 Jet Whirlpool Bath Tub. This image shows the overall design and configuration of the tub, including the skirt and left-hand drain.

## OPERATION

---

Follow these steps for operating your PROFLO whirlpool bath tub:

1. **Fill the Tub:** Ensure the drain is closed. Fill the tub with water to a level at least 2 inches above the highest jets. Operating the pump without sufficient water can cause damage.
2. **Activate Jets:** Locate the control button or switch, typically on the tub deck, and press it to turn on the whirlpool pump. The 8 jets will begin to circulate water.
3. **Adjusting Jets:** The 8 jets are fully adjustable. You can rotate the outer ring of each jet nozzle to change the direction of the water flow. Some jets may also allow for adjustment of water intensity by rotating the inner part of the nozzle.
4. **Deactivate Jets:** Press the control button/switch again to turn off the whirlpool pump.
5. **Draining:** After use, open the drain to empty the tub.

## MAINTENANCE

---

Regular cleaning and maintenance will help preserve the appearance and functionality of your whirlpool bath tub.

- **Surface Cleaning:** Clean the acrylic surface regularly with a soft cloth or sponge and a non-abrasive, mild bathroom cleaner. Rinse thoroughly with clean water after cleaning. Avoid harsh chemicals, abrasive pads, or solvents that can scratch or dull the acrylic finish.
- **Jet and Plumbing System Cleaning:** Periodically, it is recommended to clean the internal plumbing and jets to prevent buildup of soap scum, oils, and bacteria. Fill the tub with hot water above the jets, add a specialized whirlpool system cleaner (follow product instructions), and run the jets for 10-15 minutes. Drain the tub, refill with clean water, and run the jets again for a few minutes to rinse.
- **Drain Maintenance:** Regularly remove hair and debris from the drain stopper and overflow plate to ensure proper drainage.
- **Pump Access:** Ensure the access panel to the pump is not obstructed for future servicing.

## TROUBLESHOOTING

---

If you encounter issues with your whirlpool bath tub, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Jets do not operate	No power to pump; GFCI tripped; Insufficient water level	Check circuit breaker and GFCI. Ensure tub is filled above jets. Verify electrical connection.
Weak jet flow	Jets clogged; Air intake blocked; Pump issue	Clean jet nozzles. Ensure air intake is clear. Perform a system cleaning. If problem persists, contact service.
Water leaks from tub	Loose plumbing connection; Damaged seal	Immediately shut off water supply. Contact a qualified plumber for inspection and repair.
Unusual noise from pump	Debris in pump; Pump malfunction	Turn off pump. If noise persists or is severe, contact a qualified technician.

For issues not listed above or if troubleshooting steps do not resolve the problem, please contact PROFLO customer support or a qualified service technician.

## SPECIFICATIONS

---

Key specifications for the PROFLO PFW6032ALSK Whirlpool Bath Tub:

- **Model Number:** PFW6032ALSK
- **Product Dimensions:** 60"L x 32"W x 19.75"H
- **Material:** Acrylic
- **Capacity:** 45 Gallons
- **Installation Type:** Alcove
- **Drain Location:** Left Hand
- **Number of Jets:** 8 (fully adjustable)
- **Electrical Requirements:** 115 Volts
- **Item Weight (Empty):** 110 Pounds

- **UPC:** 781889197202

## WARRANTY AND SUPPORT

---

Your PROFLO PFW6032ALSK Whirlpool Bath Tub is backed by a limited 5-year warranty. This warranty covers manufacturing defects in materials and workmanship under normal use and service.

For complete details regarding warranty coverage, limitations, and how to make a claim, please refer to the official warranty document provided with your purchase. It is important to retain your proof of purchase for warranty validation.

For technical assistance, troubleshooting guidance, or to inquire about warranty service, please contact PROFLO customer support. Contact information can typically be found on the official PROFLO website or within your product documentation.

