

- Manuals.plus /
- › FURORA LIGHTING /
- › FURORA LIGHTING Desmet V9636-79 2-Light Wall Sconce User Manual

FURORA LIGHTING V9636-79

FURORA LIGHTING Desmet V9636-79 2-Light Wall Sconce User Manual

Model: V9636-79 | Brand: FURORA LIGHTING

1. INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your FURORA LIGHTING Desmet V9636-79 2-Light Wall Sconce. Please read all instructions carefully before beginning installation and retain this manual for future reference.

The Desmet V9636-79 is a transitional style 2-light wall sconce designed for outdoor use, featuring an antique bronze finish and metal construction. It is compatible with LED light sources and can accommodate up to 250 watts total.





Image 1.1: The FURORA LIGHTING Desmet V9636-79 2-Light Wall Sconce, showcasing its antique bronze finish and cylindrical design.

2. SAFETY INFORMATION

WARNING: Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.

- All electrical connections must be in accordance with local codes, ordinances, and the National Electric Code (NEC).
- Consult a qualified electrician if you are unsure about the installation process.

- Do not install this fixture in wet locations unless specifically rated for such use. This fixture is rated for outdoor use.
- Ensure the mounting surface can support the weight of the fixture.
- Do not exceed the maximum wattage specified for the light bulbs.
- Handle glass components with care to prevent breakage and injury.
- Wear safety glasses and gloves during installation.

3. PACKAGE CONTENTS

Carefully unpack your fixture and check that all parts are included. If any parts are missing or damaged, do not attempt to assemble or install the product. Contact customer service for assistance.

- Light Fixture (1)
- Mounting Hardware Kit (1) (typically includes mounting bracket, screws, wire nuts)
- Instruction Manual (1)

Note: Light bulbs are typically not included and must be purchased separately.

4. SETUP AND INSTALLATION

Follow these steps to install your wall sconce. Professional installation is recommended.

1. **Turn Off Power:** Locate the circuit breaker or fuse box that supplies power to the desired installation location. Turn off the power completely before proceeding.
2. **Prepare Mounting Location:** Ensure the electrical box is securely mounted in the wall. Remove any existing fixture and its mounting bracket.
3. **Attach Mounting Bracket:** Secure the new mounting bracket (from the hardware kit) to the electrical box using the provided screws. Ensure it is firmly attached.
4. **Make Electrical Connections:**
 - Connect the **ground wire** (bare copper or green) from the fixture to the ground wire from the electrical box and to the mounting bracket using a wire nut.
 - Connect the **neutral wire** (white) from the fixture to the white wire from the electrical box using a wire nut.
 - Connect the **live wire** (black) from the fixture to the black wire from the electrical box using a wire nut.

Ensure all wire connections are secure and no bare wire is exposed. Carefully tuck the wires into the electrical box.

5. **Secure Fixture:** Align the fixture with the mounting bracket and secure it in place using the provided screws or nuts. Ensure the fixture is flush against the wall and stable.
6. **Install Light Bulbs:** Insert the appropriate light bulbs (not included) into the sockets. Refer to the specifications section for maximum wattage.
7. **Restore Power:** Once installation is complete and all connections are secure, restore power at the circuit breaker or fuse box.



Image 4.1: The Desmet V9636-79 wall sconce installed on an exterior wall, demonstrating its aesthetic integration.

5. OPERATING INSTRUCTIONS

The FURORA LIGHTING Desmet V9636-79 wall sconce is designed for simple operation.

- **Power Control:** The fixture is typically controlled by a standard wall switch connected to the electrical circuit. Flip the wall switch to the 'ON' position to illuminate the sconce and to the 'OFF' position to turn it off.
- **Remote Control:** This model supports remote control functionality. If a compatible remote control (not included) is used, follow the remote's specific instructions for pairing and operation.

6. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your wall sconce.

- **Cleaning:** To clean the fixture, ensure the power is turned off. Wipe the surface with a soft, damp cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.

- **Bulb Replacement:** Ensure power is off before replacing bulbs. Allow bulbs to cool completely before touching. Replace with bulbs of the same type and wattage, not exceeding the maximum specified.
- **Inspection:** Periodically inspect the fixture for any signs of wear, loose connections, or damage. If any issues are found, disconnect power and consult a qualified electrician.

7. TROUBLESHOOTING

If you encounter issues with your wall sconce, refer to the following common problems and solutions:

- **Light does not turn on:**
 - Check if the power is on at the circuit breaker.
 - Ensure the wall switch is in the 'ON' position.
 - Verify that the light bulbs are correctly installed and not burnt out. Replace if necessary.
 - Check electrical connections for proper contact. (Turn off power before checking).
- **Light flickers:**
 - Ensure bulbs are fully tightened in their sockets.
 - Check for loose wire connections. (Turn off power before checking).
 - Ensure the bulbs are compatible with the fixture and any dimmer switches if installed.
- **Fixture is loose:**
 - Turn off power. Tighten the mounting screws that secure the fixture to the mounting bracket.

If these steps do not resolve the issue, contact a qualified electrician or FURORA LIGHTING customer support.


8. SPECIFICATIONS

Feature	Detail
Brand	FURORA LIGHTING
Model Number	V9636-79
Style	Transitional
Color/Finish	Antique Bronze
Material	Metal
Light Fixture Form	Sconce
Indoor/Outdoor Usage	Outdoor
Power Source	Corded Electric
Control Method	Remote (and Wall Switch)
Light Source Type	LED Compatible
Number of Light Sources	2
Maximum Wattage	250 watts (total)

Feature	Detail
Mounting Type	Wall Mount
Item Weight	4.46 pounds
Product Dimensions (L x W x H)	6 x 6 x 18 inches
UPC	748066996362

Surface Wall Mount

E: 8³/₄"

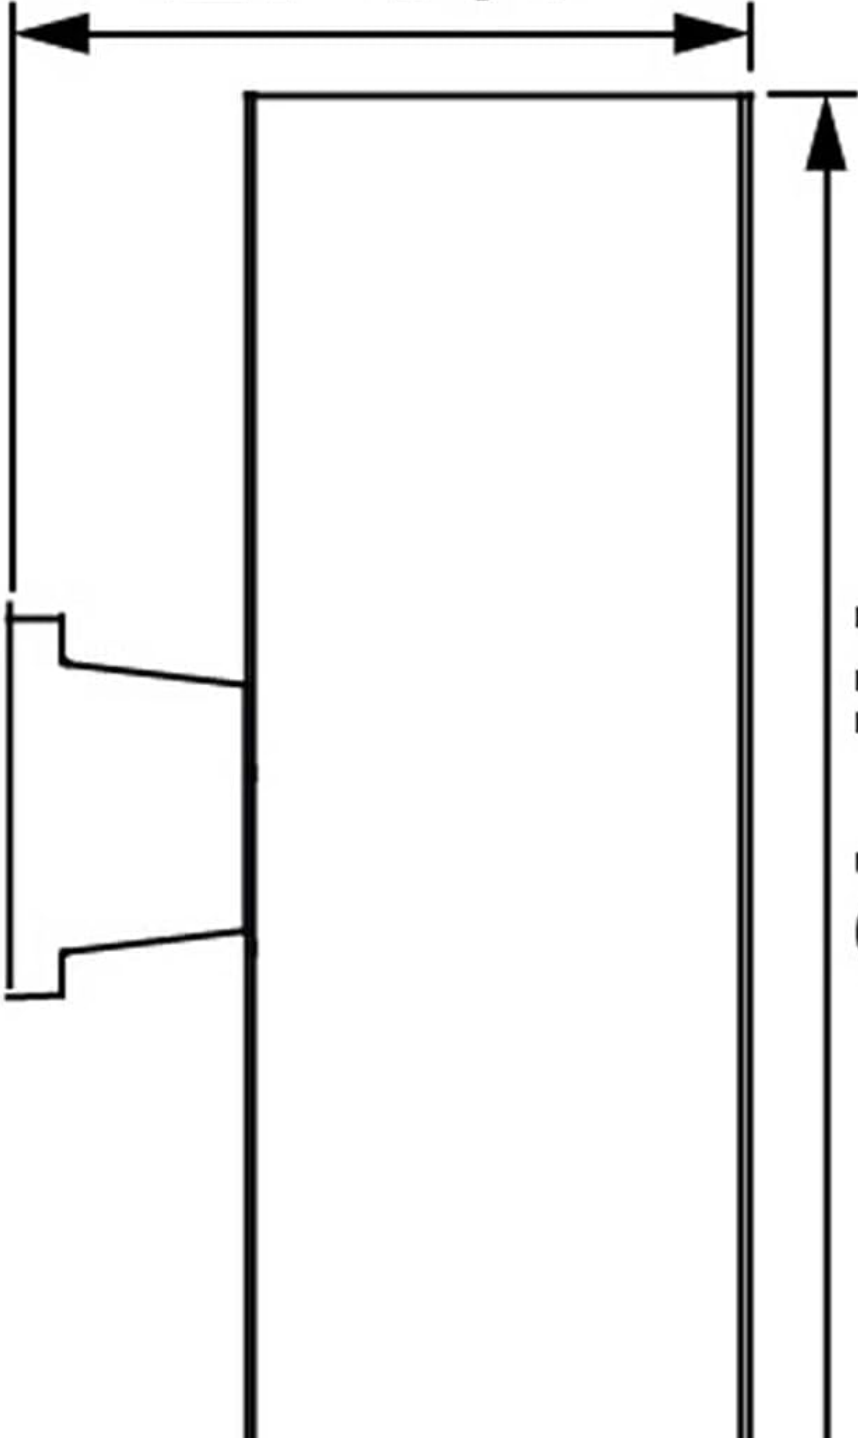

H: 18"

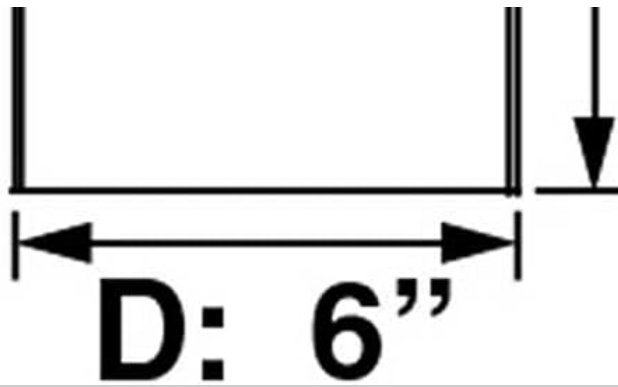


Image 8.1: Dimensional drawing of the Desmet V9636-79 wall sconce, showing height (H: 18"), depth (D: 6"), and width (E: 8¾").

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact FURORA LIGHTING customer service. Keep your purchase receipt as proof of purchase.

Manufacturer: E-Commerce Trade

For further assistance, please visit the [FURORA LIGHTING Store on Amazon](#).

© 2023 FURORA LIGHTING. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00BMT42W0>

More documents and user manuals: <https://manuals.plus/>