

MONTBLANC 107338

Montblanc Timewalker TMW Titanium Flyback Men's Watch 107338 User Manual

Model: 107338

[Introduction](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

This manual provides essential instructions for the proper use, setup, and maintenance of your Montblanc Timewalker TMW Titanium Flyback Men's Watch, model 107338. This timepiece features an automatic movement, chronograph, and flyback function, encased in titanium with a grey leather strap and sapphire crystal.

Please read this manual thoroughly to ensure optimal performance and longevity of your watch.

2. SETUP AND INITIAL WINDING

2.1 Unboxing and Initial Inspection



Box supplied may be different from picture

Image: Montblanc watch box. The image displays an off-white outer cardboard box and an open black presentation box, both featuring the Montblanc logo. Inside the black box is a white watch cushion. Please note that the actual packaging may vary.

Upon receiving your Montblanc Timewalker watch, carefully remove it from its packaging. Inspect the watch for any visible damage. The watch is supplied in a protective box, which may vary in design from the one shown in the image.

2.2 Winding the Watch

Your Montblanc Timewalker watch is equipped with an automatic movement. While it winds itself through the motion of your wrist, it is recommended to manually wind it if it has stopped or has not been worn for an extended period (e.g., 72 hours, which is its power reserve).

1. Unscrew the crown (if it is a screw-down crown) by turning it counter-clockwise until it springs free.
2. Pull the crown out to position 1 (first click).
3. Turn the crown clockwise approximately 30-40 times to fully wind the mainspring.
4. Push the crown back to its original position and screw it down clockwise to ensure water resistance.

2.3 Setting the Time and Date

1. Unscrew the crown (if applicable) and pull it out to position 2 (second click). The seconds hand will stop.
2. Turn the crown clockwise or counter-clockwise to set the desired time. To avoid damaging the movement, it is advisable to set the date when the hour hand is not between 9 PM and 3 AM.
3. Pull the crown out to position 3 (third click).
4. Turn the crown to set the date.
5. Once the time and date are set, push the crown back to position 0 and screw it down firmly to maintain water resistance.

3. OPERATING THE CHRONOGRAPH AND FLYBACK FUNCTIONS

Your watch features a chronograph for measuring elapsed time and a flyback function for rapid consecutive timing.

3.1 Chronograph Operation

The chronograph is controlled by two pushers, typically located at 2 o'clock and 4 o'clock.

1. **Start:** Press the upper pusher (at 2 o'clock) to start the chronograph seconds hand.
2. **Stop:** Press the upper pusher again to stop the chronograph. Read the elapsed time from the central chronograph seconds hand and the sub-dials (60 seconds and 24 hours).
3. **Reset:** Press the lower pusher (at 4 o'clock) to reset all chronograph hands to zero.

3.2 Flyback Function

The flyback function allows for immediate restarting of the chronograph without needing to stop and reset it first. This is particularly useful for timing consecutive events.

1. While the chronograph is running, press the lower pusher (at 4 o'clock).
2. The chronograph hands will instantly fly back to zero and immediately begin timing a new event.

4. CARE AND MAINTENANCE

4.1 Water Resistance

Your Montblanc Timewalker watch is water resistant to 30 meters (100 feet). This rating means it is suitable for splashes or brief immersion in water, but not for swimming, diving, or showering. Always ensure the crown is fully screwed down to maintain water resistance.

- Do not operate the crown or pushers when the watch is wet or submerged.
- Avoid exposing the watch to extreme temperature changes.
- Have the water resistance seals checked periodically (e.g., every 2-3 years) by an authorized service center.

4.2 Cleaning

To clean your watch, use a soft, dry cloth. For the titanium case, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners or abrasive materials, especially on the leather strap.

The grey leather strap should be kept dry and away from direct sunlight or extreme humidity to prevent damage and discoloration.

4.3 Service and Storage

For optimal performance, it is recommended to have your watch serviced by an authorized Montblanc service center every 3-5 years. When not wearing your watch, store it in its original box or a watch winder to keep the automatic movement running.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch has stopped or is running slow.	Insufficient power reserve.	Manually wind the watch (refer to Section 2.2). Wear the watch regularly to allow the automatic movement to wind.
Date changes at noon instead of midnight.	AM/PM indicator is incorrect.	Advance the time by 12 hours.
Chronograph hands do not reset to zero.	Requires calibration or service.	Consult an authorized Montblanc service center. Do not attempt to adjust yourself.
Condensation under the crystal.	Loss of water resistance or extreme temperature change.	Immediately take the watch to an authorized service center.

6. SPECIFICATIONS

- **Model Number:** 107338
- **Movement:** Swiss Automatic
- **Case Material:** Titanium
- **Case Diameter:** 43 mm
- **Case Thickness:** 16 mm
- **Crystal:** Scratch-resistant Sapphire Crystal
- **Dial Color:** Grey
- **Band Material:** Leather (Grey)
- **Clasp Type:** Tang Buckle
- **Water Resistance:** 30 meters / 100 feet
- **Features:** Chronograph, Double Flyback Feature, Date Display, Luminescent Hands and Markers, 72 Hour Power Reserve, Sapphire Crystal Exhibition Case Back
- **Item Weight:** Approximately 499 g (1.1 Pounds)
- **Product Dimensions:** 15.01 x 15.01 x 15.01 cm (approximate packaging dimensions)

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Your Montblanc Timewalker watch is covered by a manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty are provided with your purchase documentation. Please retain your proof of purchase for warranty claims.

The warranty typically does not cover normal wear and tear, damage resulting from improper use, accidents, or unauthorized repairs. For detailed warranty terms, please refer to the official Montblanc warranty booklet included with your watch.

7.2 Customer Support

For any questions, service requests, or technical assistance, please contact an authorized Montblanc boutique or service center. You can find contact information and locations on the official Montblanc website.

When contacting support, please have your watch model number (107338) and purchase details readily available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question