

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Panasonic](#) /

› Panasonic Bluetooth Cordless Phone KX-TG7875S Link2Cell with Enhanced Noise Reduction & Digital Answering Machine - 5 Handsets (Black/Silver) Black/Silver 5 Handsets Phone

Panasonic KX-TG7875S

Panasonic Bluetooth Cordless Phone KX-TG7875S Link2Cell User Manual

Model: KX-TG7875S | Brand: Panasonic

PRODUCT OVERVIEW

The Panasonic Bluetooth Cordless Phone KX-TG7875S Link2Cell system offers advanced communication features for home or small business environments. It integrates seamlessly with up to two smartphones via Bluetooth, allowing users to make and receive cell calls directly from the cordless handsets. Key functionalities include a digital answering machine with message forwarding, a USB charging port for mobile devices, and enhanced noise reduction technology for clearer conversations.

- **Link2Cell Connectivity:** Connects up to two smartphones via Bluetooth, enabling cell calls to be made and received from any of the 5 portable handsets. No traditional landline is required for this feature.
- **Digital Answering Machine with Message Forwarding:** Records incoming messages and can forward them to a registered cell phone, ensuring you stay connected even when away from home.
- **USB Charge and Power Back-up:** Features a convenient USB input on the base unit to charge your smartphone. The system is designed to maintain connectivity during power outages.
- **Talking Caller ID:** Utilizes text-to-speech technology to announce the caller's information between rings, allowing you to identify callers from across the room.
- **Enhanced Noise Reduction Technology:** Suppresses background noise and simultaneously enhances your voice for improved call clarity.
- **Extensive Phonebook and Call Block:** Stores up to 3,000 numbers in the phonebook and allows blocking of up to 250 unwanted numbers.
- **Crystal Clear Display:** Handsets feature a 1.8-inch white backlit display for easy readability.

WHAT'S IN THE BOX

Upon unpacking your Panasonic KX-TG7875S system, please verify that all the following components are included:

- 1 x Base Unit with Digital Answering Machine
- 5 x Cordless Handsets

- 4 x Handset Chargers (one handset charges on the base unit)
- 2 x AC Adapters (one for the base unit, one for the chargers)
- 1 x Telephone Line Cord (for landline connection, if desired)
- 10 x AAA Rechargeable Batteries (2 per handset)
- 1 x User Manual (this document)



Figure 1: Panasonic KX-TG7875S system showing the main base unit with one handset and four additional charging cradles with handsets.

SETUP GUIDE

- 1. Install Batteries:** Open the battery compartment on the back of each cordless handset. Insert the two supplied AAA rechargeable batteries, ensuring correct polarity. Close the compartment cover.
- 2. Connect Base Unit:**
 - Connect the AC adapter to the base unit's power jack and plug the other end into a standard electrical outlet.
 - (Optional for Landline) Connect the telephone line cord to the base unit's LINE jack and the other end to your telephone wall jack.
- 3. Connect Handset Chargers:** Plug the AC adapters for the individual handset chargers into electrical outlets.
- 4. Charge Handsets:** Place each handset on its respective base unit or charging cradle. The display will indicate "Charging." Allow at least 7 hours for a full charge before initial use.
- 5. Initial Setup:** Once charged, the handset display will prompt you to set the date, time, and language. Follow the on-screen instructions using the navigation keys.



Figure 2: The base unit features a USB port for charging a smartphone, demonstrating its versatile connectivity.

OPERATING INSTRUCTIONS

Making and Receiving Calls

- **To Make a Call:** Lift a handset from its cradle or press the **TALK** button. Dial the phone number.
- **To Receive a Call:** When the phone rings, lift the handset or press the **TALK** button.
- **Speakerphone:** During a call, press the **SP-PHONE** button to switch to speakerphone mode. Press again to return to handset mode.
- **Volume Adjustment:** Use the **VOL ▲/▼** buttons on the side of the handset during a call to adjust the earpiece or speakerphone volume.

Link2Cell (Bluetooth) Features

- **Pairing a Smartphone:** Access the Bluetooth menu on the base unit or handset. Follow the prompts to search for and pair your smartphone. Up to two smartphones can be paired.
- **Making Cell Calls:** Once paired, you can select to make calls using your connected cell line directly from the cordless handset.
- **Receiving Cell Calls:** Incoming calls to your paired smartphone will ring on the cordless handsets, allowing you to answer from anywhere within range.
- **USB Charging:** Connect your smartphone to the USB port on the base unit for convenient charging.

Digital Answering Machine

- **Turning On/Off:** Press the **ANSWER ON/OFF** button on the base unit to activate or deactivate the answering machine.
- **Playing Messages:** Press the **PLAY/STOP** button on the base unit to listen to messages. Use the skip buttons (◀ ◀ / ▶ ▶) to navigate.
- **Remote Access:** You can access your messages remotely from an outside line by following the instructions in the full user guide.
- **Message Forwarding:** Set up message forwarding to your registered cell phone through the answering machine settings.

Advanced Features

- **Talking Caller ID:** Ensure this feature is enabled in the settings. The handset will announce the caller's name

or number.

- **Call Block:** To block an unwanted number, press the **CALL BLOCK** button on the handset during or after a call, or add numbers manually through the menu. The system can block up to 250 numbers.
- **Noise Reduction:** During a call, press the **NOISE REDUCTION** button on the handset to reduce background noise from the other party's end.
- **Phonebook:** Store up to 3,000 contacts. Names and numbers entered into one handset are automatically shared with all other registered handsets.
- **Intercom:** Use the intercom feature to communicate between handsets within your home.
- **Tone Equalizer:** Adjust the audio quality (treble/bass) during a call for a more comfortable listening experience.

MAINTENANCE

- **Cleaning:** Wipe the phone and base unit with a soft, dry cloth. Avoid using abrasive cleaners, benzene, thinner, or any other solvents.
- **Battery Care:** Use only the specified rechargeable batteries. If the phone will not be used for an extended period, remove the batteries to prevent leakage.
- **Environmental Conditions:** Avoid exposing the unit to excessive smoke, dust, moisture, or direct sunlight.

TROUBLESHOOTING

If you experience issues with your Panasonic KX-TG7875S system, please refer to the following common solutions before contacting support:

- **No Dial Tone / Cannot Make or Receive Calls:**
 - Ensure the base unit's AC adapter is securely plugged into both the unit and a working electrical outlet.
 - If using a landline, check that the telephone line cord is properly connected to both the base unit and the wall jack.
 - Verify that the handset batteries are fully charged.
- **Poor Sound Quality / Static:**
 - Move closer to the base unit.
 - Ensure the handset batteries are fully charged.
 - Check for interference from other electronic devices (e.g., microwaves, Wi-Fi routers).
- **Answering Machine Not Recording Messages:**
 - Confirm the answering machine is turned ON (indicator light on base unit).
 - Check if the memory is full. Erase old messages if necessary.
- **Handset Display is Blank or Not Working:**
 - Place the handset on the charger to ensure it is receiving power.
 - Verify batteries are correctly installed and charged.

For more detailed troubleshooting or issues not listed here, please consult the comprehensive user manual or visit the Panasonic support website.

SPECIFICATIONS

Feature	Detail
Model Number	KX-TG7875S
Brand	Panasonic
Telephone Type	Cordless
Color	Black/Silver
Number of Handsets	5
Answering System Type	Digital
Power Source	Corded Electric
Batteries	10 AAA batteries required (included)
Product Dimensions	4.6 x 7.1 x 6.7 inches
Item Weight	2.9 pounds
Material	Plastic
Dialer Type	Dual Keypad
First Available Date	March 30, 2013

WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the warranty card included with your purchase or visit the official Panasonic website. The warranty typically covers manufacturing defects for a specified period from the date of purchase.

For technical support, frequently asked questions, or to download the full comprehensive user manual, please visit the Panasonic support section on their official website. You may also find contact information for customer service there.

Online Resources: www.panasonic.com