

FABER 110.0058.111

FABER EGEA X 60 Wall-Mounted Cooker Hood Instruction Manual

Model: **110.0058.111**

Brand: **FABER**

1. INTRODUCTION

This instruction manual provides comprehensive guidance for the safe installation, efficient operation, and proper maintenance of your FABER EGEA X 60 wall-mounted cooker hood. Please read this manual thoroughly before installation and use, and keep it for future reference. Following these instructions will ensure optimal performance and extend the lifespan of your appliance.

2. SAFETY INSTRUCTIONS

General Safety:

- Ensure the electrical installation complies with all local regulations and standards.
- Do not allow children to operate the appliance.
- Always disconnect the appliance from the power supply before performing any cleaning or maintenance.
- Do not flambé under the cooker hood.
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.
- Regularly clean the filters to prevent fire hazards.

Installation Safety:

- Installation must be carried out by a qualified technician.
- Ensure adequate ventilation in the room when the cooker hood is used simultaneously with gas or other fuel-burning appliances.
- The minimum distance between the supporting surface for the cooking vessels on the hob and the lowest part of the

cooker hood must be at least 65 cm.

3. PRODUCT OVERVIEW

The FABER EGEA X 60 is a wall-mounted cooker hood designed to efficiently remove smoke, steam, and cooking odors from your kitchen. It features a pyramid shape and a durable stainless steel finish, making it both functional and aesthetically pleasing.

Key Features:

- **Material:** Stainless Steel, Steel Alloy
- **Mounting Type:** Wall-mounted
- **Controls:** Push Button
- **Light Source:** Incandescent (20 Watt)
- **Filter Type:** Baffle
- **Ventilation Type:** Extracting
- **Shape:** Pyramid

Components Included:

- Screws for installation

4. SETUP AND INSTALLATION

Proper installation is crucial for the performance and safety of your cooker hood. Refer to the technical drawing below for precise measurements and mounting guidelines.

4.1 Pre-Installation Checks

- Unpack the cooker hood and check for any damage.
- Ensure all necessary components, including the provided screws, are present.
- Verify that the wall structure is strong enough to support the weight of the hood.
- Confirm the availability of a suitable electrical outlet and, if applicable, an external exhaust duct.

4.2 Mounting the Cooker Hood

The FABER EGEA X 60 is designed for wall mounting. Use the provided screws and follow the dimensions in the diagram for accurate placement. The hood can be configured for either filtering (recirculating) or aspirating (ducted) operation.

- Mark the drilling points on the wall according to the hood's dimensions and the desired height above the cooking surface.
- Drill holes and insert wall plugs suitable for your wall type.
- Secure the mounting bracket to the wall.
- Carefully lift and attach the hood body to the mounting bracket.
- Install the chimney sections, ensuring they are properly aligned and secured.

4.3 Electrical Connection

Connect the cooker hood to a grounded electrical outlet. Ensure the voltage and frequency match the specifications of the appliance. If in doubt, consult a qualified electrician.

4.4 Ducting Options

The hood supports both filtering and aspirating modes. The technical drawing indicates different height ranges for each configuration:

- **Filtering (Recirculating) Mode:** Minimum height 515 mm - Maximum height 795 mm. This mode requires charcoal filters (not included) to purify the air before returning it to the kitchen.
- **Aspirating (Ducted) Mode:** Minimum height 420 mm - Maximum height 685 mm. This mode requires an exhaust duct to vent air outside.



Figure 1: Technical drawing with dimensions for FABER EGEA X 60 cooker hood installation. This diagram illustrates the overall width (598-898 mm), depth (471 mm), and height (620 mm total, with chimney sections). The minimum and maximum heights for both filtering (515-795 mm) and aspirating (420-685 mm) configurations are indicated, along with chimney section dimensions (169 mm, 167 mm, 402 mm, 200 mm) and a 25.5 mm offset.

5. OPERATING INSTRUCTIONS

The FABER EGEA X 60 cooker hood is operated via push buttons located on the front panel.

5.1 Fan Operation

- Press the **ON/OFF** button to start or stop the fan.

- Use the speed selection buttons (typically marked 1, 2, 3, or with symbols) to adjust the extraction power according to your cooking needs. Lower speeds are suitable for light cooking, while higher speeds are for intense frying or grilling.

5.2 Light Operation

- Press the **LIGHT** button to turn the incandescent lights on or off.
- The lights provide illumination for your cooking area.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your cooker hood. Always disconnect the appliance from the power supply before cleaning or servicing.

6.1 Cleaning the Baffle Filters

- Baffle filters should be cleaned regularly, typically every 2-4 weeks depending on usage.
- To remove, locate the release latches or handles on the filters and pull them down or slide them out.
- Wash the filters by hand in hot soapy water or in a dishwasher. Ensure they are completely dry before re-installing.
- *Note:* If using the hood in filtering (recirculating) mode, charcoal filters (not included) will also need to be replaced periodically. Refer to the charcoal filter's specific instructions for replacement frequency.

6.2 Exterior Cleaning

- Clean the stainless steel exterior with a soft cloth and a non-abrasive cleaner specifically designed for stainless steel.
- Avoid using abrasive sponges, harsh detergents, or corrosive cleaners, as these can damage the finish.
- Wipe in the direction of the grain to prevent streaks.

6.3 Light Bulb Replacement

- The hood uses 20-watt incandescent light bulbs.
- To replace a bulb, ensure the power is off and the bulb has cooled down.
- Carefully remove the old bulb and screw in a new one of the same type and wattage.

7. TROUBLESHOOTING

Before contacting customer support, please refer to the following troubleshooting guide for common issues.

Problem	Possible Cause	Solution
Hood does not turn on.	No power supply. Faulty power cord/plug.	Check if the hood is properly plugged in. Check the circuit breaker. Contact a qualified electrician if the issue persists.

Problem	Possible Cause	Solution
Poor suction performance.	Grease filters are clogged. Incorrect fan speed. Obstruction in the ducting (aspirating mode). Charcoal filters saturated (filtering mode).	Clean the baffle filters. Select a higher fan speed. Check for and remove any ducting obstructions. Replace charcoal filters.
Lights are not working.	Light bulb is faulty. Loose connection.	Replace the incandescent light bulb. Ensure bulbs are screwed in tightly.
Excessive noise during operation.	Loose components. Obstruction in the fan. Improper installation.	Check for and tighten any loose screws or parts. Inspect the fan for foreign objects. Ensure the hood is securely mounted and level.

8. SPECIFICATIONS

Feature	Detail
Brand	FABER
Model Number	110.0058.111
Product Dimensions (D x W x H)	47.1P x 59.8l x 62H cm (47.1 x 59.8 x 62 cm)
Material	Stainless Steel, Steel Alloy
Mounting Type	Wall-mounted
Controls Type	Push Button
Light Source	Incandescent
Electrical Power	20 Watt
Filter Type	Baffle
Ventilation Type	Extracting
Finish	Stainless
Item Shape	Pyramid
GTIN	08015139033098
Manufacturer Part Number	110.0058.111

9. WARRANTY AND SUPPORT

Your FABER EGEA X 60 cooker hood is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or warranty claims, please contact FABER customer support. Contact details can typically be found on the FABER official website or on your purchase documentation.

When contacting support, please have your model number (110.0058.111) and purchase date available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question