

- Manuals.plus /
- > Pyle /
 - > Pyle PPHP1037UB 1000W Powered Bluetooth PA System Speaker User Manual

Pyle PPHP1037UB

Pyle PPHP1037UB 1000W Powered Bluetooth PA System Speaker User Manual

Model: PPHP1037UB | Brand: Pyle

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Pyle PPHP1037UB Powered Bluetooth PA System Speaker. Please read this manual thoroughly before using the product to ensure proper setup, usage, and maintenance. Retain this manual for future reference.

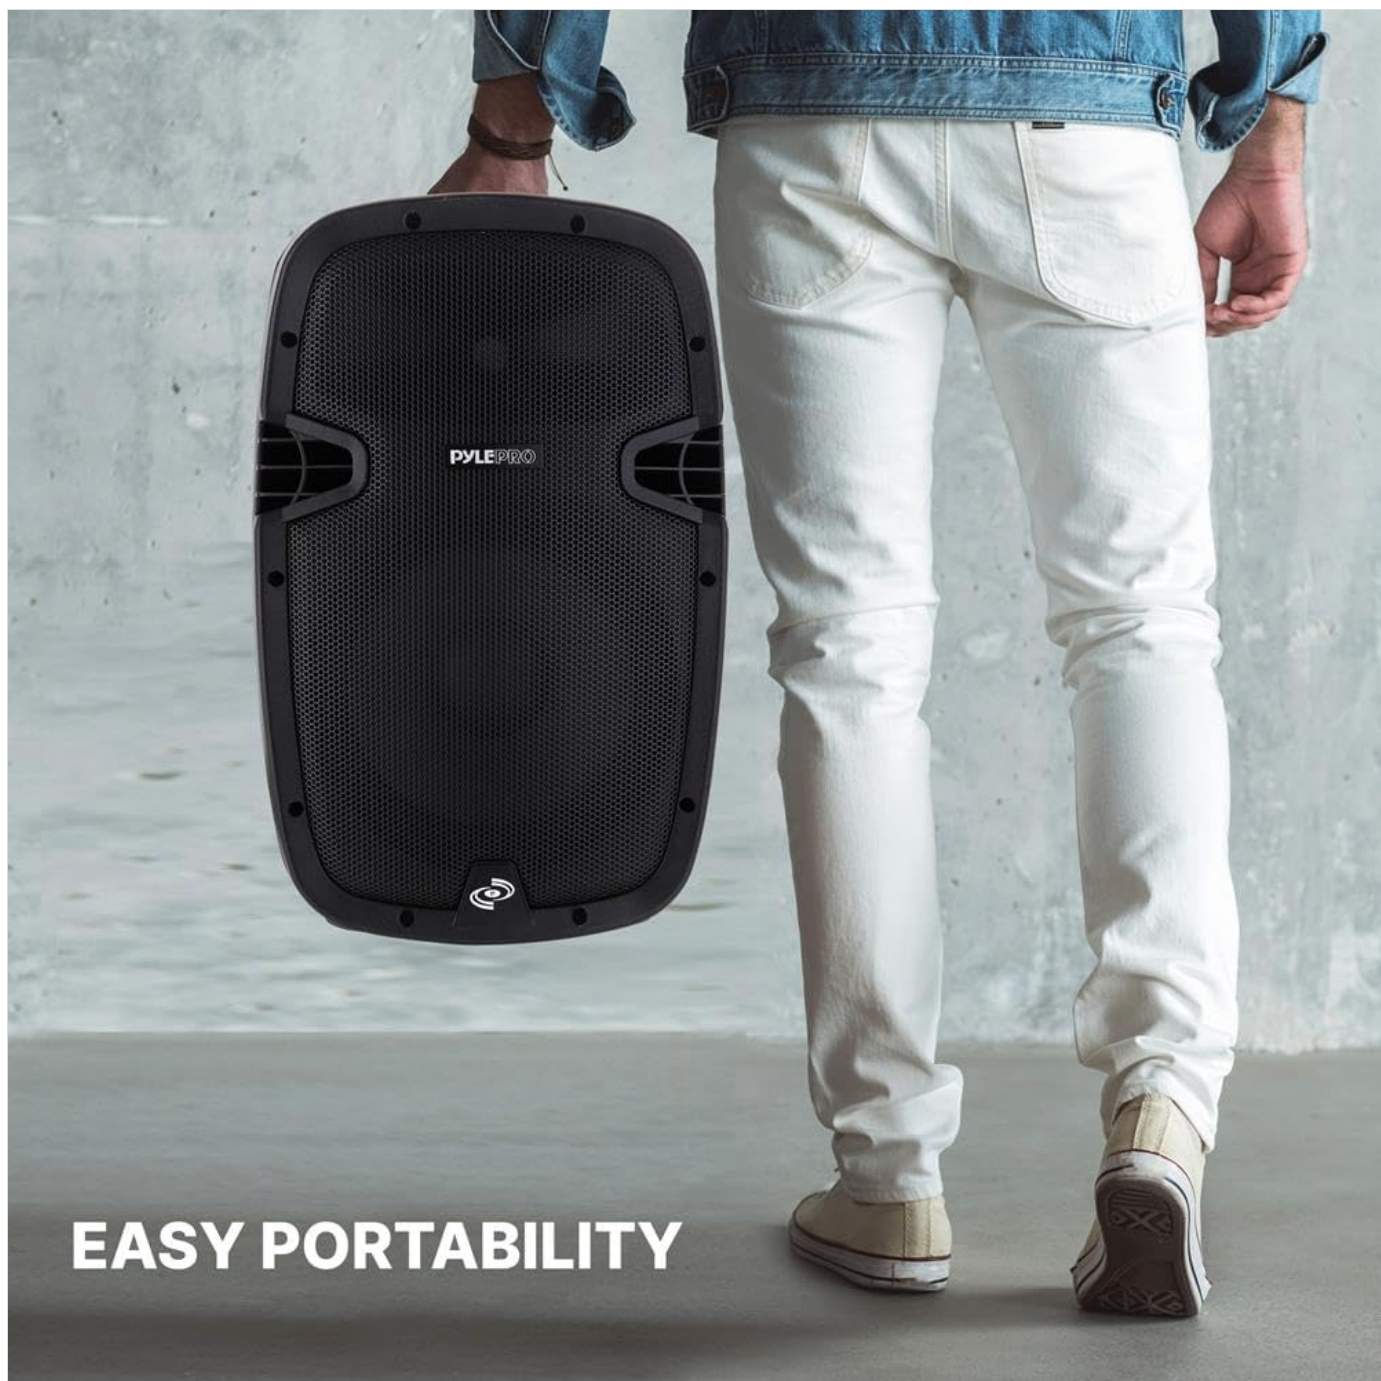


Image 1.1: The Pyle PPHP1037UB speaker being carried, highlighting its portable design.

2. IMPORTANT SAFETY INSTRUCTIONS

- **Power Source:** Connect the unit only to a power supply of the type described in this manual or on the unit.
- **Ventilation:** Ensure proper ventilation. Do not block any ventilation openings.
- **Water and Moisture:** Do not expose this appliance to rain or moisture. Do not place objects filled with liquids, such as vases, on the apparatus.
- **Heat:** Do not place the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Clean only with a dry cloth.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Placement:** Place the unit on a stable, level surface to prevent it from falling.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Pyle PPHP1037UB Powered PA Speaker
- Remote Control
- Power Adapter



Image 3.1: Contents of the Pyle PPHP1037UB package, including the speaker, remote, and power adapter.

4. PRODUCT OVERVIEW

4.1 Internal Components

The PPHP1037UB features a robust audio design for clear and powerful sound reproduction.



Image 4.1: An internal view of the speaker, highlighting the 10-inch subwoofer and 1-inch tweeter.

4.2 Rear Panel / Control Panel

The rear panel houses all input/output connections and control knobs for adjusting audio settings.



Image 4.2: Detailed view of the rear control panel.

1. **MIC VOL:** Adjusts the volume of the microphone input.
2. **MP3 VOL:** Adjusts the volume for USB/SD card playback and Bluetooth audio.
3. **BASS:** Controls the low-frequency audio output.
4. **TREBLE:** Controls the high-frequency audio output.
5. **AUX:** 3.5mm auxiliary input for external audio devices.
6. **MASTER VOL:** Overall volume control for all audio sources.
7. **LINE IN:** XLR and 1/4 inch RCA input for line-level audio sources.
8. **USB/SD Card Slot:** For playing MP3 files directly from USB drives or SD cards.
9. **Power Switch:** Turns the unit ON or OFF.
10. **AC IN:** Power input for the included power adapter.

5. SETUP

5.1 Power Connection

1. Ensure the Power Switch on the rear panel is in the OFF position.
2. Connect the included power adapter to the AC IN port on the rear panel.
3. Plug the power adapter into a standard wall outlet.
4. Flip the Power Switch to the ON position to power on the unit.

5.2 Speaker Stand Mounting

The PPHP1037UB is compatible with standard 35mm speaker stands (not included).

1. Ensure the speaker stand is stable and capable of supporting the weight of the speaker.
2. Carefully lift the speaker and align the 35mm port on the bottom of the speaker with the pole of the speaker stand.
3. Gently lower the speaker onto the stand until it is securely seated.



Image 5.1: The speaker mounted on a stand, illustrating the 35mm port compatibility.

6. OPERATING INSTRUCTIONS

6.1 Bluetooth Pairing

Stream audio wirelessly from your Bluetooth-enabled devices.

1. Power on the PPHP1037UB speaker.
2. Press the 'MODE' button on the control panel or remote until 'BLUETOOTH' mode is selected. The display will show 'BLUE'.
3. On your mobile device, enable Bluetooth and search for available devices.
4. Select 'PYLE AUDIO' from the list of devices.
5. Once paired, the speaker will emit a confirmation tone, and you can begin streaming audio.



Image 6.1: The speaker ready for wireless music streaming via Bluetooth.

6.2 USB/SD Card Playback

Play MP3 audio files directly from a USB flash drive or SD memory card.

1. Insert a USB flash drive or SD card (with MP3 files) into the corresponding slot on the rear panel.
2. The unit will automatically switch to USB/SD mode and begin playing audio. If not, press the 'MODE' button to select USB/SD.
3. Use the playback controls (Play/Pause, Next, Previous) on the control panel or remote to manage your music.

6.3 Auxiliary Input

Connect external audio devices using a 3.5mm audio cable.

1. Connect one end of a 3.5mm audio cable to the AUX input on the rear panel of the speaker.
2. Connect the other end of the cable to the headphone jack or audio output of your external device (e.g., smartphone, tablet, laptop).
3. Press the 'MODE' button until 'AUX' mode is selected.
4. Adjust the volume on both the speaker (MASTER VOL) and your external device.

6.4 Microphone and Instrument Input

Connect microphones or instruments for live sound applications.

1. Connect your microphone to the MIC input (XLR or 1/4 inch) on the rear panel.
2. Adjust the MIC VOL knob to control the microphone's volume.
3. The speaker features a Microphone Priority Function, which automatically lowers background music when a microphone signal is detected.

Microphone Priority Function



Image 6.2: Demonstrating the Microphone Priority Function during use.

6.5 Sound Adjustment

Use the BASS and TREBLE knobs on the rear panel to fine-tune the audio output to your preference or venue acoustics.

- Turn the **BASS** knob clockwise to increase low frequencies or counter-clockwise to decrease them.
- Turn the **TREBLE** knob clockwise to increase high frequencies or counter-clockwise to decrease them.

6.6 Remote Control Operation

The included remote control allows for convenient operation from a distance.

- **Power:** Turns the unit ON/OFF.
- **Mode:** Switches between input modes (Bluetooth, USB/SD, AUX).
- **Volume +/-:** Adjusts the master volume.
- **Play/Pause:** Starts or pauses playback in USB/SD or Bluetooth mode.

- **Previous/Next:** Skips to the previous or next track in USB/SD or Bluetooth mode.
- **EQ:** Selects preset equalizer modes (if available).
- **Numeric Buttons:** For direct track selection in USB/SD mode.

7. MAINTENANCE

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the exterior surfaces. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Ventilation:** Keep ventilation openings clear of dust and debris.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Power switch off; Outlet not working	Ensure power cable is securely connected; Turn power switch ON; Test outlet with another device
No sound output	Volume too low; Incorrect input mode; Audio cable faulty; Bluetooth not paired	Increase MASTER VOL and source volume; Select correct input mode; Check/replace audio cable; Re-pair Bluetooth device
Bluetooth connection unstable	Device too far; Obstructions; Interference	Move device closer to speaker; Remove obstructions; Avoid other wireless devices
USB/SD playback not working	Incorrect file format; Corrupted files; USB/SD card not inserted correctly	Ensure files are MP3 format; Try different USB/SD card; Re-insert USB/SD card
Distorted sound	Volume too high; Input signal too strong; EQ settings incorrect	Lower MASTER VOL and source volume; Reduce input signal level; Adjust BASS/TREBLE knobs

9. SPECIFICATIONS

- **Brand:** Pyle
- **Model:** PPHP1037UB
- **Peak Power Output:** 1000 Watts
- **Speaker Maximum Output Power:** 700 Watts
- **Woofer Size:** 10 inches
- **Tweeter Size:** 1 inch (Kapton)
- **Frequency Response:** 1 KHz (Note: This value seems incomplete, typical range is broader)
- **Connectivity Technology:** Auxiliary, Bluetooth, USB
- **Audio Output Mode:** Mono
- **Speaker Stand Mount:** 35mm compatible
- **Cabinet Construction:** ABS

10. WARRANTY AND SUPPORT

Pyle products are designed and manufactured to the highest quality standards. For warranty information or technical support, please refer to the warranty card included with your product or visit the official Pyle website. Do not attempt to repair the unit yourself, as this may void your warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00BQOHC3C>

More documents and user manuals: <https://manuals.plus/>