



[Manuals.plus](#) /

› [Beyution](#) /

› Beyution Dual Side Keyboard Internet Remote for Vizio TVs User Manual

## Beyution Dual Side Keyboard Internet Remote

# Beyution Dual Side Keyboard Internet Remote User Manual

Model: Dual Side Keyboard Internet Remote

Brand: Beyution

## INTRODUCTION

This manual provides instructions for the Beyution Dual Side Keyboard Internet Remote. This remote control is designed to enhance your Vizio TV experience by offering both traditional remote functions and a full QWERTY keyboard for easier navigation of smart TV features and internet applications. It is compatible with various Vizio TV models, including E472VL, E472VLE, E552VLE, E460ME, M420SR, M420SV, M470SV, M550SV, E3D320VX, E3D420VX, E3DB420VX, E3D470VX, M320SR, M3D421SR, M3D550SR, M3D460SR, M3D420SR, XVT3D474SV, XVT3D650SV, M420SL, M470SL, M550SL, M370SR, M420KD, E551VA, M470VSE, M650VSE, M550VSE, E420i-A1, E500i-A1, E601i-A3, and E470i-A0.



Image: The Beyution Dual Side Keyboard Internet Remote, illustrating its two distinct sides: one with standard television controls and the other with a full QWERTY keyboard.

## SETUP

---

### 1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it until it clicks securely into place.

### 2. Initial Use

The Beyution Dual Side Keyboard Internet Remote is generally ready for use with compatible Vizio TVs immediately after battery installation. No complex pairing process is typically required for basic functions. For advanced features or if the remote does not respond, ensure your TV's remote sensor is unobstructed.

## OPERATING INSTRUCTIONS

---

### 1. Standard Remote Side (Front)

This side features conventional television remote buttons for common functions:

- **Power Button:** Turns the TV on or off.
- **Input/Source:** Selects different input sources (HDMI, AV, etc.).
- **Volume Up/Down:** Adjusts the television volume.
- **Channel Up/Down:** Changes television channels.
- **Navigation Pad (Arrow Buttons & OK):** Used for menu navigation and selection.
- **Back/Exit:** Returns to the previous menu or exits current menu.
- **Menu/Settings:** Accesses TV settings and options.
- **Internet App Button:** Directly launches smart TV applications or the internet browser.

### 2. QWERTY Keyboard Side (Back)

Flip the remote over to access the full QWERTY keyboard. This side is ideal for:

- Entering text in search bars within smart TV apps (e.g., Netflix, YouTube).
- Typing URLs in the TV's web browser.
- Composing messages or logging into accounts on supported applications.

The keyboard side typically activates automatically when the remote is flipped. Some Vizio TV models may require specific settings to fully utilize the keyboard functionality.

## MAINTENANCE

---

### 1. Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always use new AAA batteries and ensure correct polarity. Do not mix old and new batteries or different types of batteries.

### 2. Cleaning

To clean the remote, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's electronics or finish.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly inserted batteries; obstructed signal path.	Replace batteries with new AAA batteries, ensuring correct polarity. Remove any obstructions between the remote and the TV's sensor.
Keyboard not working	Remote not flipped correctly; TV not recognizing keyboard input; low batteries.	Ensure the remote is fully flipped to the keyboard side. Check TV settings for external keyboard support. Replace batteries.
Internet App button not launching apps	TV not connected to internet; app not installed or updated.	Verify your Vizio TV has an active internet connection. Ensure the desired app is installed and up to date on your TV.

## SPECIFICATIONS

---

- **Product Dimensions:** 5 x 1 x 0.5 inches
- **Item Weight:** 1.76 ounces
- **Batteries Required:** 2 AAA batteries
- **Compatible Devices:** Television (specifically various Vizio TV models as listed in the Introduction)
- **Max Number of Supported Devices:** 1
- **Color:** Black
- **Special Feature:** Ergonomic design, Dual-sided with QWERTY keyboard

## WARRANTY AND SUPPORT

---

For information regarding product warranty or technical support, please refer to the documentation provided at the time of purchase or contact the seller directly. Specific warranty terms and support channels are typically provided by the manufacturer or authorized distributor.