

[manuals.plus](#) /

› [KidKraft](#) /

› [KidKraft Laundry Playset Model 63179 Instruction Manual](#)

KidKraft 63179

KidKraft Laundry Playset Model 63179 Instruction Manual

Children's Pretend Wooden Stacking Washer and Dryer Toy with Iron and Basket, Pastel



1. INTRODUCTION

The KidKraft Laundry Playset is designed to provide children aged 36 months to 10 years with an engaging and imaginative play experience. This wooden stacking washer and dryer set allows children to mimic real-life laundry tasks, fostering social and interactive life skills. The set includes a play iron, a laundry basket, and a chalkboard for added interactive elements.



Image 1: The KidKraft Laundry Playset in pastel colors, featuring the stacked washer and dryer unit with an attached ironing board and a green laundry basket.

2. WHAT'S IN THE BOX

Please ensure all components are present before beginning assembly:

- Wooden panels for the washer and dryer unit
- Hardware (screws, connectors)
- Plastic laundry basket
- Play iron
- Assembly instructions

3. SETUP AND ASSEMBLY

Assembly of the KidKraft Laundry Playset is designed to be straightforward, typically taking 30-40 minutes for one person. Follow the included step-by-step instructions carefully.

3.1 Important Assembly Notes:

- **Screw Identification:** The playset includes two types of screws: those matching the exterior color of the toy and silver-colored screws. While they may be labeled identically in the instructions, pay close attention to use the color-matched screws for visible exterior parts to maintain aesthetic consistency.
- **Stability:** For enhanced safety, especially on carpeted surfaces or with active play, it is recommended to secure the playset to a wall using the provided hardware. The back panels include pre-drilled holes for this purpose.

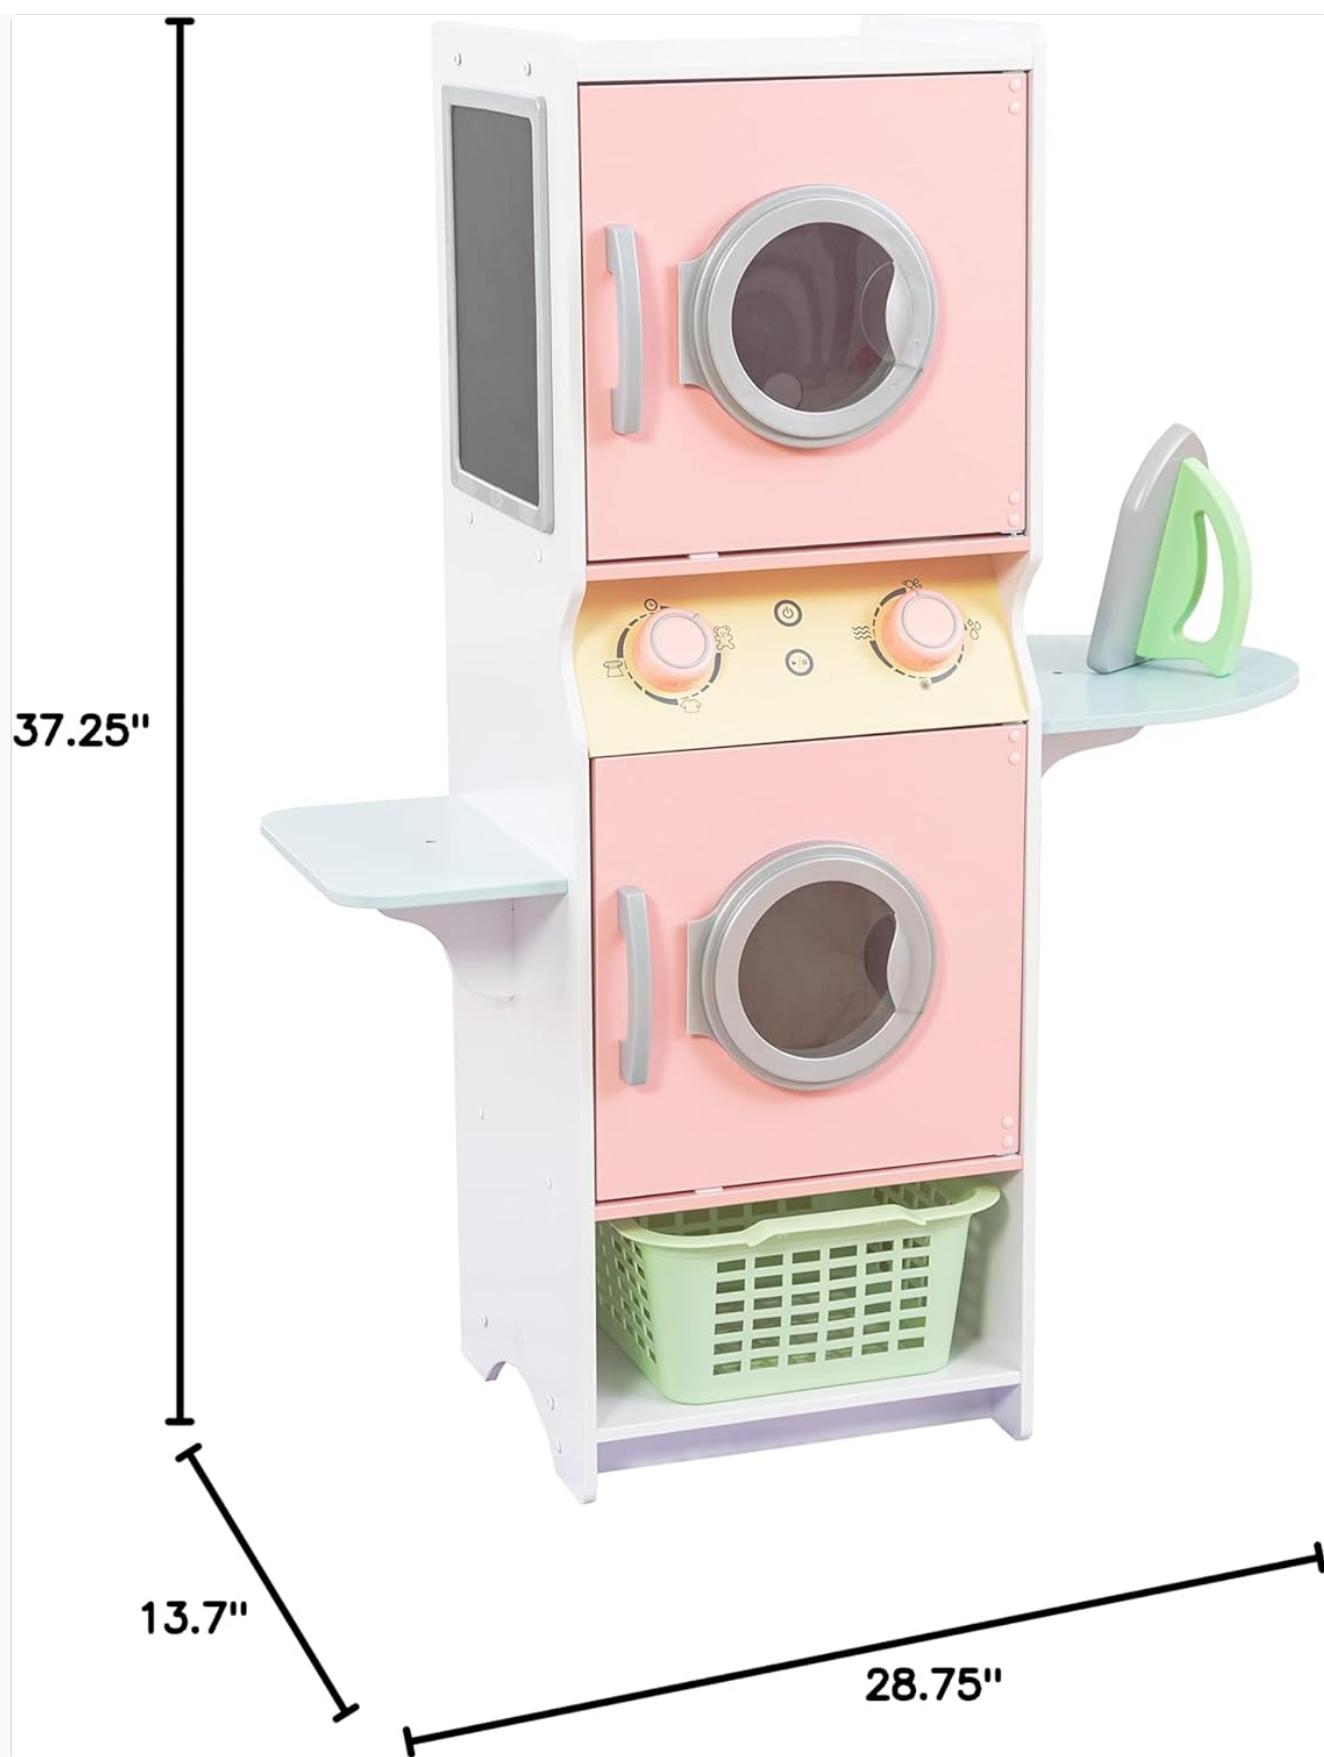


Image 2: Diagram illustrating the dimensions of the assembled laundry playset.

4. OPERATING INSTRUCTIONS

The KidKraft Laundry Playset offers various interactive features for realistic pretend play:

4.1 Washer and Dryer Doors:

- Both the top (dryer) and bottom (washer) units feature doors that open and close. These doors can be opened either by the main handle or by the circular windowed door, allowing for versatile play.
- Place pretend laundry items inside the compartments.



Image 3: The playset with both the washer and dryer doors open, showing the interior space for play laundry.

4.2 Control Knobs:

- The control panel between the washer and dryer features two turning knobs that produce clicking sounds, simulating real appliance operation.
- Children can turn these knobs to select different pretend wash or dry cycles.

4.3 Ironing Station:

- A pop-up side shelf serves as an ironing board. Use the included play iron to press pretend clothes.



Image 4: A child engaging with the playset, demonstrating the use of the play iron on the integrated ironing board.

4.4 Laundry Basket:

- The green plastic laundry basket stores conveniently in the cubby beneath the washer.
- Use it to collect and transport pretend laundry.

4.5 Chalkboard:

- A chalkboard is located on one side of the unit. Children can use chalk (not included) to write laundry lists or messages.

5. MAINTENANCE

To ensure the longevity and cleanliness of your KidKraft Laundry Playset:

- **Cleaning:** Wipe surfaces with a damp cloth and mild soap. Avoid abrasive cleaners or harsh chemicals, as these can damage the wood finish.

- **Inspection:** Periodically check all screws and connections to ensure they are tight. Retighten if necessary.
- **Storage:** Store the playset in a dry environment to prevent warping or damage to the wooden components.

6. TROUBLESHOOTING

If you encounter any issues with your playset, consider the following:

- **Loose Parts:** If any parts become loose, re-tighten the corresponding screws. Do not overtighten.
- **Door Malfunction:** Ensure no foreign objects are obstructing the door hinges or latches. Check that all screws securing the doors are properly fastened.
- **Playset Instability:** Verify that the playset is placed on a flat, stable surface. If on carpet, ensure the wall anchor is properly installed as per assembly instructions.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	28.75 x 13.7 x 37.25 inches
Item Weight	26.2 pounds
Item Model Number	63179
Manufacturer Recommended Age	36 months - 10 years
Material	Wood
Color	Pastel

8. SAFETY INFORMATION

Please review the following safety guidelines to ensure safe use of the KidKraft Laundry Playset:

- Adult assembly required.
- Always supervise children during play.
- Ensure the playset is stable and securely fastened to a wall to prevent tipping.
- Regularly inspect the playset for any loose or damaged parts. Discontinue use if damage is found and repair or replace parts as needed.
- Keep small parts away from young children to prevent choking hazards.

9. WARRANTY AND SUPPORT

For warranty information, replacement parts, or customer support, please contact KidKraft directly through their official website or customer service channels. Keep your proof of purchase for any warranty claims.

© 2026 KidKraft. All rights reserved.