



Manuals.plus /

- › WarnerBrothers /
- › The Ring 2 (2005) DVD User Guide

WarnerBrothers B00BTYJYVW

The Ring 2 (2005) DVD User Guide

Model: B00BTYJYVW

1. INTRODUCTION

This guide provides essential information for the proper use and care of your 'The Ring 2' (2005) DVD. Please read these instructions carefully to ensure optimal viewing experience and disc longevity.



Image 1.1: Front cover of 'The Ring 2' (2005) DVD.

2. DISC HANDLING AND CARE

Proper handling and care are crucial for maintaining the quality and playability of your DVD.

- **Handling:** Always hold the DVD by its edges or by placing a finger through the center hole. Avoid touching the shiny playback surface to prevent fingerprints and scratches.
- **Storage:** Store the DVD in its original case, away from direct sunlight, extreme temperatures, and high humidity.
- **Cleaning:** If the disc becomes dirty, gently wipe it with a soft, lint-free cloth from the center outwards. Do not use abrasive materials or harsh chemical cleaners.

3. PLAYBACK SETUP

To watch the DVD, you will need a DVD player connected to a television or monitor.

1. **Connect your DVD player:** Ensure your DVD player is correctly connected to your television or display device using appropriate cables (e.g., HDMI, RCA, Component). Refer to your DVD player's and television's manuals for specific connection instructions.
2. **Power on devices:** Turn on your television and DVD player. Select the correct input source on your television for the DVD player.

4. BASIC PLAYBACK OPERATIONS

Follow these steps to play your DVD:

1. **Insert the disc:** Open the DVD player's disc tray, place the 'The Ring 2' DVD with the label side facing up, and close the tray.
2. **Start playback:** The DVD should begin playing automatically or display a main menu. If a menu appears, use your DVD player's remote control to navigate and select 'Play Movie' or a similar option.
3. **Basic controls:**
 - **Play/Pause:** Press the **PLAY** or **PAUSE** button to start or temporarily stop playback.
 - **Stop:** Press the **STOP** button to end playback and return to the beginning of the disc or the main menu.
 - **Chapter Skip:** Use the **NEXT** or **PREVIOUS** chapter buttons to jump between scenes.
 - **Menu:** Press the **MENU** or **TITLE** button to access the DVD's main menu for scene selection, special features, or setup options.

5. AUDIO AND LANGUAGE SETTINGS

Many DVDs offer multiple audio tracks and subtitle options. These can usually be accessed via the DVD's main menu or directly through your DVD player's remote control.

- **Audio:** Look for an 'Audio' or 'Language' option in the DVD menu to switch between available audio tracks (e.g., English, French).
- **Subtitles:** Select 'Subtitles' or 'Captions' from the menu to turn subtitles on or off, or to choose a different language.

6. TROUBLESHOOTING

If you encounter issues while playing your DVD, try the following solutions:

- **Disc not playing:**
 - Ensure the disc is inserted correctly with the label side up.
 - Check the disc for visible scratches or smudges and clean it if necessary (refer to Section 2).
 - Try playing another DVD to confirm your DVD player is functioning correctly.

- **No audio or video:**

- Verify that all cables connecting your DVD player to your TV are securely attached.
- Ensure your TV is set to the correct input source for your DVD player.
- Check the volume level on both your TV and DVD player.

- **Skipping or freezing:**

- Clean the disc thoroughly.
- Ensure the disc is not warped or severely damaged.

7. PRODUCT SPECIFICATIONS

Feature	Detail
ASIN	B00BTYJYVW
Studio	WarnerBrothers
Media Format	Color, Dolby, Multiple Formats, NTSC, Widescreen
Release Date	May 21, 2013
Language	English (Dolby Digital 5.1), French (Dolby Digital 5.1)
Number of Discs	1
Product Dimensions	0.7 x 7.5 x 5.4 inches; 2.72 ounces
Genre	Mystery

8. WARRANTY AND SUPPORT

DVD media typically does not come with an extended manufacturer's warranty beyond initial functionality. If your disc is defective upon purchase, please contact the retailer for a replacement within their return policy period. For issues related to your DVD player, please consult your player's user manual or its manufacturer's support.