

[Manuals.plus](#) /

› [Beyution](#) /

› Beyution XRT300 Keyboard Remote User Manual

Beyution XRT300 KEYBOARD REMOTE

User Manual for Beyution XRT300 Keyboard Remote

For VIZIO M320SL, M370SL, M420SL, M470SL, M550SL, M470VSE, M650VSE, M550VSE, E420i-A1, E500i-A1, E601i-A3, E470i-A0 Internet TVs

INTRODUCTION

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your Beyution XRT300 Keyboard Remote. This remote is designed to enhance your control over compatible VIZIO Internet TV models, featuring both standard remote functions and a full QWERTY keyboard for easier text input.

SETUP

Battery Installation

The XRT300 remote requires two (2) AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Initial Use

Once batteries are installed, the remote is ready for use with compatible VIZIO Internet TV models. Point the remote directly at your television and begin operation. No complex pairing is typically required for infrared (IR) remotes.

OPERATING INSTRUCTIONS

The XRT300 remote features a dual-sided design, offering both traditional remote controls and a full QWERTY keyboard.



Figure 1: Front (right) and Back (left) of the XRT300 Remote Control.

This image displays both the front (standard remote controls) and back (QWERTY keyboard) of the XRT300 remote. The

front side provides all essential TV control buttons, while the reverse side offers a complete keyboard for text entry.

Front Side Controls (Standard Remote)

- **Power Button ():** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **App Buttons (Amazon, Netflix, M-GO):** Direct access to popular streaming applications.
- **Playback Controls (, ,):** Rewind, Play/Pause, Fast Forward for media playback.
- **CC (Closed Captioning):** Toggles closed captions on or off.
- **INFO:** Displays information about the current program or input.
- **EXIT:** Exits current menu or application.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and select options. The **OK** button confirms selections.
- **MENU:** Opens the TV's main menu.
- **BACK:** Returns to the previous screen or menu.
- **GUIDE:** Accesses the electronic program guide (if available).
- **Volume Up/Down (VOL +/-):** Adjusts the TV's volume.
- **Mute ():** Mutes or unmutes the TV's audio.
- **Channel Up/Down (CH +/-):** Changes the TV channel.
- **Number Pad (0-9):** Direct channel entry or numerical input.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies by application or TV menu.

Back Side Controls (QWERTY Keyboard)

The reverse side of the remote features a full QWERTY keyboard for convenient text input, especially useful for smart TV applications, web browsing, and search functions.

- **Alphabetical Keys (A-Z):** Standard letter input.
- **Number Keys (0-9):** Numerical input.
- **Symbol Keys:** Access various symbols and special characters.
- **CAPS/SHIFT:** Toggles capitalization or accesses secondary characters on keys.
- **ALT:** Used in combination with other keys for alternative characters.
- **SPACE:** Inserts a space.
- **TAB:** Moves cursor to the next field.
- **ENTER:** Confirms input or selection.
- **DEL (Delete):** Deletes characters.
- **Colored Buttons (A, B, X, Y):** Functionality varies by application or TV menu.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's finish or internal components.

Storage

Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries. Obstruction between remote and TV. Remote out of range.	Replace batteries with new ones, ensuring correct polarity. Remove any obstructions. Move closer to the TV.
Specific buttons not working.	Dirt or debris under the button. Internal malfunction.	Clean the remote surface. If problem persists, the remote may require replacement.
Keyboard not typing.	TV not in a text input field. Compatibility issue.	Ensure the TV screen displays a text input box. Verify your TV model is listed as compatible.
Remote works intermittently.	Low battery power. Infrared sensor on TV is dirty or obstructed.	Replace batteries. Clean the IR sensor on your TV.

SPECIFICATIONS

- **Model Number:** XRT300 KEYBOARD REMOTE
- **Brand:** Beyution
- **Connectivity Technology:** Infrared
- **Compatible Devices:** Television (specifically VIZIO Internet TV models: M320SL, M370SL, M420SL, M470SL, M550SL, M470VSE, M650VSE, M550VSE, E420i-A1, E500i-A1, E601i-A3, E470i-A0, etc.)
- **Batteries Required:** 2 x AAA (not included)
- **Product Dimensions:** 7 x 5 x 2 inches
- **Item Weight:** 2.82 ounces

WARRANTY AND SUPPORT

For specific warranty information regarding your Beyution XRT300 Keyboard Remote, please refer to the documentation provided at the time of purchase or contact the seller directly. Warranty terms may vary.

For technical support or further assistance, please contact the manufacturer, Beyution factory, or the retailer from whom the product was purchased. You may also consult the support resources for your specific VIZIO television model for remote control compatibility and setup guides.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00BUOIYDA>

More documents and user manuals: <https://manuals.plus/>