

Panasonic KX-TGA681EXS

Panasonic KX-TGA681EXS Cordless Phone User Manual

Model: KX-TGA681EXS

INTRODUCTION

This manual provides detailed instructions for the proper setup, operation, and maintenance of your Panasonic KX-TGA681EXS cordless telephone. Please read this manual thoroughly before using your new phone to ensure safe and optimal performance. Keep this manual for future reference.





Image: The Panasonic KX-TGA681EXS cordless phone, showing the handset and its charging base. The handset features a display screen and a numeric keypad.

SETUP

1. Unpacking

Carefully remove all components from the packaging. Ensure you have the handset, base unit, AC adapter, telephone line cord, and two AAA rechargeable batteries.

2. Battery Installation

1. Open the battery compartment cover on the back of the handset.
2. Insert the two supplied AAA NiMH rechargeable batteries, observing the correct polarity (+ and -).
3. Close the battery compartment cover securely.

Note: Only use the specified rechargeable NiMH batteries. Non-rechargeable batteries may cause damage or explosion.

3. Base Unit Connection

1. Connect the AC adapter to the base unit and plug it into a standard electrical outlet.
2. Connect the telephone line cord to the base unit and plug the other end into a telephone wall jack.
3. Place the handset on the base unit to begin charging. The initial charge takes approximately 7 hours.

Important: Ensure the base unit is placed in a central location, away from other electronic devices that may cause interference.

OPERATING INSTRUCTIONS

Making and Receiving Calls

- **To Make a Call:** Press the **TALK** button, then dial the phone number. Alternatively, dial the number first, then press **TALK**.
- **To Receive a Call:** When the phone rings, press the **TALK** button.
- **To End a Call:** Press the **OFF** button or place the handset back on the base unit.
- **Volume Adjustment:** During a call, use the **Volume Up/Down** buttons on the side of the handset to adjust the earpiece volume.

Phonebook

The phonebook can store up to 120 numbers. To add a contact:

1. Press the **MENU** button.
2. Navigate to "Phonebook" and select "Add New Entry".
3. Enter the name and phone number using the keypad.
4. Press **SAVE**.

Once programmed on one handset, phonebook entries are accessible on all registered handsets.

Call Blocking

Block up to 50 unwanted numbers to reduce nuisance calls.

1. Press the **CALL BLOCK** button (or navigate via **MENU**).
2. Select "Add Number" and enter the number you wish to block.
3. Confirm the entry.

Intercom Function

If you have multiple registered handsets, you can make internal calls between them.

1. Press the **INTERCOM** button.
2. Dial the number of the desired handset (e.g., "2" for handset 2).
3. The other handset will ring.

Ringtones and Alarms

- **Ringtones:** Choose from 40 different ringtone melodies. Access this setting via the **MENU**.
- **Alarms:** The handset features three independent alarm settings. Configure these through the **MENU**.

ECO Mode

The phone is equipped with an ECO mode that reduces wireless radiation by up to 99% when the handset is on the base unit and not in use. This feature operates automatically.

MAINTENANCE

Cleaning the Unit

Wipe the exterior surfaces of the handset and base unit with a soft, damp cloth. Do not use abrasive cleaners, waxes, or solvents. Ensure no liquid enters the unit.

Battery Care and Replacement

The included NiMH batteries are designed for long life. If you notice a significant decrease in talk time or standby time, it may be time to replace them. For optimal performance, use Panasonic eneloop or eneloop pro AAA NiMH rechargeable batteries.

- Always replace both batteries at the same time.
- Dispose of old batteries according to local regulations.

TROUBLESHOOTING

If you experience issues with your phone, please refer to the following common solutions before contacting support.

Problem	Solution
No dial tone	<ul style="list-style-type: none">• Ensure the AC adapter is securely plugged into the base unit and a working electrical outlet.• Verify the telephone line cord is properly connected to the base unit and the wall jack.• Test the wall jack with another phone to confirm it is active.
Handset does not charge	<ul style="list-style-type: none">• Ensure the handset is correctly seated on the base unit. The charge indicator should illuminate.• Clean the charging contacts on both the handset and base unit with a dry cloth.• Check if the batteries are inserted with correct polarity.
Poor call quality or static	<ul style="list-style-type: none">• Move the handset closer to the base unit.• Relocate the base unit away from other electronic devices (e.g., microwaves, computers, Wi-Fi routers) that may cause interference.• Check for loose telephone line connections.
Display is blank or unreadable	<ul style="list-style-type: none">• Ensure the handset batteries are charged. Place the handset on the base unit for several hours.• If the issue persists after charging, the batteries may need replacement.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	KX-TGA681EXS
Brand	Panasonic
Telephone Type	Cordless
Color	Silver
Product Dimensions (L x W x H)	3.39 x 4.21 x 3.03 inches
Item Weight	12.2 ounces (346 Grams)
Batteries	2 AAA NiMH rechargeable batteries (included)
Power Source	Corded Electric
Material	Metal
Answering System Type	Digital
Phonebook Capacity	Up to 120 entries
Call Block Capacity	Up to 50 numbers

WARRANTY AND SUPPORT

Your Panasonic KX-TGA681EXS cordless phone is covered by a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included in your product packaging or visit the official Panasonic support website. If you require technical assistance or have questions not covered in this manual, please contact Panasonic customer support.

Online Support: www.panasonic.com/support