

[Manuals.plus](#) /

> [Vidal Sassoon](#) /

> Vidal Sassoon Extra Long Digital Straightener, 1 Inch Instruction Manual

Vidal Sassoon VSST2559

Vidal Sassoon Extra Long Digital Straightener, 1 Inch

MODEL: VSST2559

Important Safeguards

Please read all instructions before using this appliance. Keep away from water.

- **Burn Hazard:** Surfaces become extremely hot during use. Avoid direct contact with skin.
- **Electric Shock Risk:** Keep away from water. Do not use near bathtubs, sinks, or other water sources.
- **Fire Risk:** Unplug the appliance when not in use. Do not leave unattended when plugged into an electrical outlet.
- Keep out of reach of children.

Product Overview

The Vidal Sassoon Extra Long Digital Straightener features 1-inch tourmaline ceramic plates designed for smooth, frizz-free results. Its extra-long plates provide greater surface coverage, making it suitable for longer hairstyles. The straightener includes a precise digital temperature display, heats up in 30 seconds, and has an automatic shut-off function for safety. A tangle-free swivel cord enhances usability.



This image shows a woman styling her hair with the Vidal Sassoon Extra Long Digital Straightener, demonstrating its ergonomic design and ease of use.

Setup

1. Ensure the straightener is unplugged and the plates are cool before initial setup.
2. Place the straightener on a heat-resistant surface.
3. Plug the appliance into a standard electrical outlet. The digital display will illuminate.

Operating Instructions

1. **Power On/Off:** Press and hold the power button until the digital display shows the temperature. To turn off, press and hold the power button again.
2. **Temperature Adjustment:** Use the '+' and '-' buttons to select your desired temperature. The digital display will show the current temperature as it heats up. The straightener heats up in approximately 30 seconds.
3. **Hair Preparation:** Ensure hair is clean, dry, and free of tangles. For best results, divide hair into small, manageable sections.

- 4. Straightening:** Take a section of hair and place it between the plates, close to the roots. Gently close the plates and glide the straightener slowly down the hair section from root to tip. Repeat until the desired straightness is achieved. The extra-long plates are particularly effective for longer hair.
- 5. Cool Down:** After use, turn off the straightener and unplug it from the outlet. Allow it to cool completely on a heat-resistant surface before storing.

The tourmaline ceramic technology helps to distribute heat evenly, reducing frizz and leaving hair smooth.

Maintenance

- Cleaning:** Ensure the straightener is unplugged and completely cool before cleaning. Wipe the plates and exterior with a soft, damp cloth. Do not use abrasive cleaners or immerse the appliance in water.
- Storage:** Store the cooled straightener in a dry, safe place, away from moisture. Do not wrap the cord tightly around the appliance, as this can cause damage.

Troubleshooting

Problem	Possible Cause / Solution
Straightener does not turn on.	Ensure the appliance is securely plugged into a working electrical outlet. Check the power button is pressed and held.
Straightener is not heating up.	Verify the power is on and the temperature is set. Allow up to 30 seconds for initial heat-up. If still not heating, unplug and re-plug.
Automatic shut-off activates unexpectedly.	The straightener has an automatic shut-off feature for safety. If it turns off during use, simply turn it back on. This may indicate prolonged inactivity.
Hair is not straightening effectively.	Ensure hair is completely dry. Use smaller sections of hair. Adjust the temperature to a higher setting if your hair type requires it. Glide the straightener slowly.

Specifications

Model Number: VSST2559

Product Dimensions: 14 x 5 x 2.75 inches

Item Weight: 14.4 ounces

Material Type: Ceramic

Heater Surface Material: Tourmaline

Power Source: Corded Electric

Product Benefits: Frizz Control

Hair Type: Frizz-free (suitable for various hair types)

Resulting Hair Type: Straight

Heat-up Time: 30 seconds

Features: Digital temperature display, Automatic shut-off, Tangle-free swivel cord, Extra-long plates



An illustration indicating the approximate dimensions of the product packaging, showing a length of 15 inches (37 cm).

Warranty and Support

For information regarding warranty coverage, product registration, or technical support, please refer to the warranty card included with your product or visit the official Vidal Sassoon website. Keep your purchase receipt as proof of purchase.

Contact information for customer service can typically be found on the manufacturer's website or in the product packaging.