

[manuals.plus](#) /

› [Vidal Sassoon](#) /

› [Vidal Sassoon 3-in-1 Tourmaline Waver Styling Iron Instruction Manual](#)

## Vidal Sassoon VSIR3253C

# Vidal Sassoon 3-in-1 Tourmaline Waver Styling Iron Instruction Manual

Model: VSIR3253C

## IMPORTANT SAFETY INFORMATION

**Burn hazard:** Surfaces get extremely hot during use. Avoid contact with skin. Always use the provided heat protective glove when handling hot surfaces.

**Electric shock risk:** Keep away from water. Do not use near bathtubs, sinks, or other water sources. Ensure hands are dry before plugging in or unplugging the appliance.

**Fire risk:** Unplug when not in use. Do not leave unattended when plugged in. Place the hot appliance on a heat-resistant surface. Keep out of reach of children.

This appliance is designed for household use only. Do not use outdoors or operate with a damaged cord or plug.

## PRODUCT OVERVIEW

The Vidal Sassoon 3-in-1 Tourmaline Waver Styling Iron features interchangeable barrels to create defined, natural, or tousled waves. It heats up quickly and offers multiple heat settings for various hair types and styling needs.



Image: The Vidal Sassoon 3-in-1 Tourmaline Waver Styling Iron with its standard barrel configuration.



Image: The Vidal Sassoon 3-in-1 Tourmaline Waver, showcasing the three different interchangeable barrel types for varied wave styles.

## SETUP AND BARREL INSTALLATION

1. **Ensure the appliance is unplugged and cool.**
2. **Select the desired barrel type:** Choose between the barrels for defined, natural, or tousled waves.
3. **Install the barrel:** Align the chosen barrel with the base of the waver. Gently push and twist until it clicks securely into place. Refer to the diagram for proper alignment.
4. **Verify secure attachment:** Lightly tug on the barrel to ensure it is firmly attached before plugging in the appliance.



Image: Close-up view of the waver barrels, illustrating the rotational movement required to attach or detach the interchangeable barrels.



Image: One of the interchangeable barrels, designed to create deep, defined waves.



Image: Another interchangeable barrel, designed to create softer, more natural-looking waves.

## OPERATING INSTRUCTIONS

- 1. Preparation:** Ensure hair is clean, dry, and detangled. Apply a heat protectant spray if desired.
- 2. Power On:** Plug the waver into a suitable electrical outlet. Turn the appliance ON using the power switch. The indicator light will illuminate.
- 3. Heat Setting:** Select the appropriate heat setting for your hair type using the temperature control. The waver heats up in approximately 30 seconds.
- 4. Section Hair:** Divide your hair into manageable sections, typically 1-2 inches wide.
- 5. Waving Technique:**
  - Wearing the provided heat protective glove, open the waver and clamp a section of hair between the barrels, starting close to the roots (but not touching the scalp).
  - Hold for a few seconds (typically 5-10 seconds, depending on hair type and desired wave intensity).

- Release the hair and move the waver down the same section, overlapping the last wave slightly to ensure a continuous pattern.
- Repeat this process until the entire section is waved.

6. **Cool Down:** Allow waves to cool completely before styling or brushing to help set the style.

7. **Power Off:** After use, turn the appliance OFF and unplug it from the outlet. Allow it to cool down completely before storing.

*Tip:* For best results, experiment with different heat settings and holding times to find what works best for your hair type and desired wave style.

## MAINTENANCE AND CARE

- **Cleaning:** Ensure the appliance is unplugged and completely cool before cleaning. Wipe the barrels and exterior with a soft, damp cloth. Do not use abrasive cleaners or immerse the appliance in water.
- **Storage:** Store the waver in a cool, dry place, out of reach of children. The locking switch helps keep the barrels closed for compact storage. Do not wrap the cord around the appliance, as this can damage the cord.
- **Cord Care:** Regularly inspect the power cord for any signs of damage. If the cord is damaged, discontinue use and contact customer support.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in correctly; power switch is off; electrical outlet issue.	Ensure the plug is fully inserted into a working outlet. Turn the power switch to the ON position. Check the circuit breaker or try a different outlet.
Waves are not holding or are too loose.	Insufficient heat; hair sections too large; not holding long enough; hair not completely dry.	Increase the heat setting. Use smaller hair sections. Hold the waver on hair for a longer duration. Ensure hair is completely dry before styling. Allow waves to cool before disturbing.
Hair is frizzing.	Hair is not completely dry; too much heat; improper technique.	Ensure hair is completely dry. Reduce the heat setting. Ensure you are clamping and releasing smoothly without dragging. Consider using a heat protectant.
Barrels are difficult to change.	Barrels are hot; improper alignment.	Ensure the appliance is unplugged and completely cool before attempting to change barrels. Refer to the "Setup and Barrel Installation" section for proper alignment and twisting motion.

## SPECIFICATIONS

- **Model Number:** VSIR3253C
- **Brand:** Vidal Sassoon
- **Material:** Ceramic Tourmaline
- **Product Dimensions:** 14 x 6.25 x 2.5 inches
- **Weight:** 1.3 Pounds

- **Heat-up Time:** 30 seconds
- **Features:** Multiple heat settings, Dual voltage, Tangle-free swivel cord, Locking switch, Heat protective glove included.

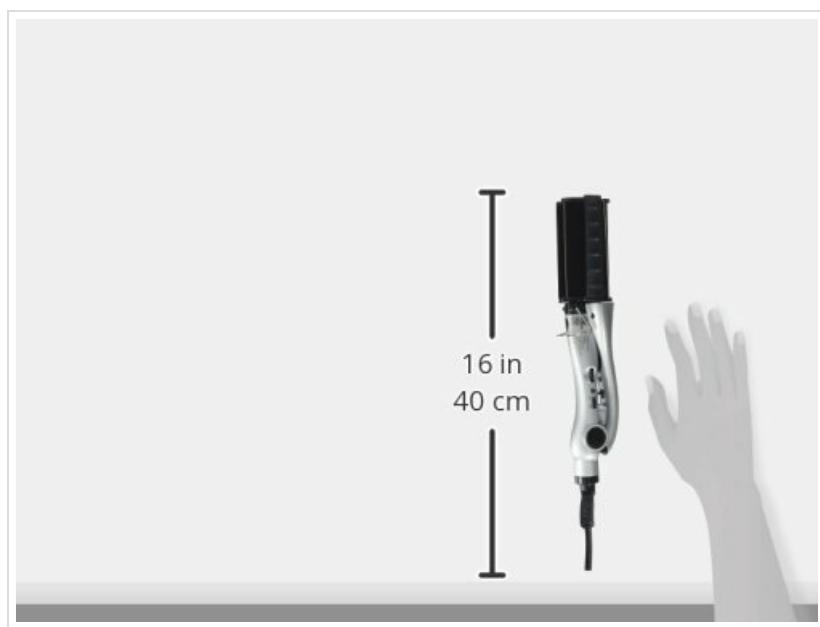


Image: A diagram illustrating the approximate dimensions of the Vidal Sassoon 3-in-1 Tourmaline Waver Styling Iron.

## WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or visit the official Vidal Sassoon website. Keep your purchase receipt as proof of purchase for warranty claims.