



Manuals.plus /

› GROHE /

› Grohe 36314000 Euroeco Cosmopolitan E Single Hole Touchless Electronic Bathroom Faucet User Manual

GROHE 36314000

Grohe 36314000 Euroeco Cosmopolitan E Single Hole Touchless Electronic Bathroom Faucet User Manual

Model: 36314000 | Brand: GROHE

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Grohe 36314000 Euroeco Cosmopolitan E Single Hole Touchless Electronic Bathroom Faucet. Designed for both residential and commercial applications, this faucet combines modern aesthetics with advanced touchless technology for enhanced hygiene and water efficiency.

The Grohe Euroeco Cosmopolitan E faucet features an infrared electronic motion activation sensor for water activation and is battery operated (includes lithium battery 6 V, CR-P2). It is ADA compliant and engineered with GROHE StarLight and GROHE EcoJoy technologies.

KEY FEATURES

- Single lever sink mixer design.
- Extractable for easy use.
- Diverter: aerator/shower jet.
- Automatic return to aerator.
- SpeedClean anti-lime system.
- Engineered specifically for Grohe products.
- Infrared electronic motion activation sensor for touchless operation.
- Battery operated (includes lithium battery 6 V, CR-P2).
- ADA compliant.

PRODUCT OVERVIEW



Figure 1: Front view of the Grohe Euroeco Cosmopolitan E Single Hole Touchless Electronic Bathroom Faucet in Starlight Chrome finish.



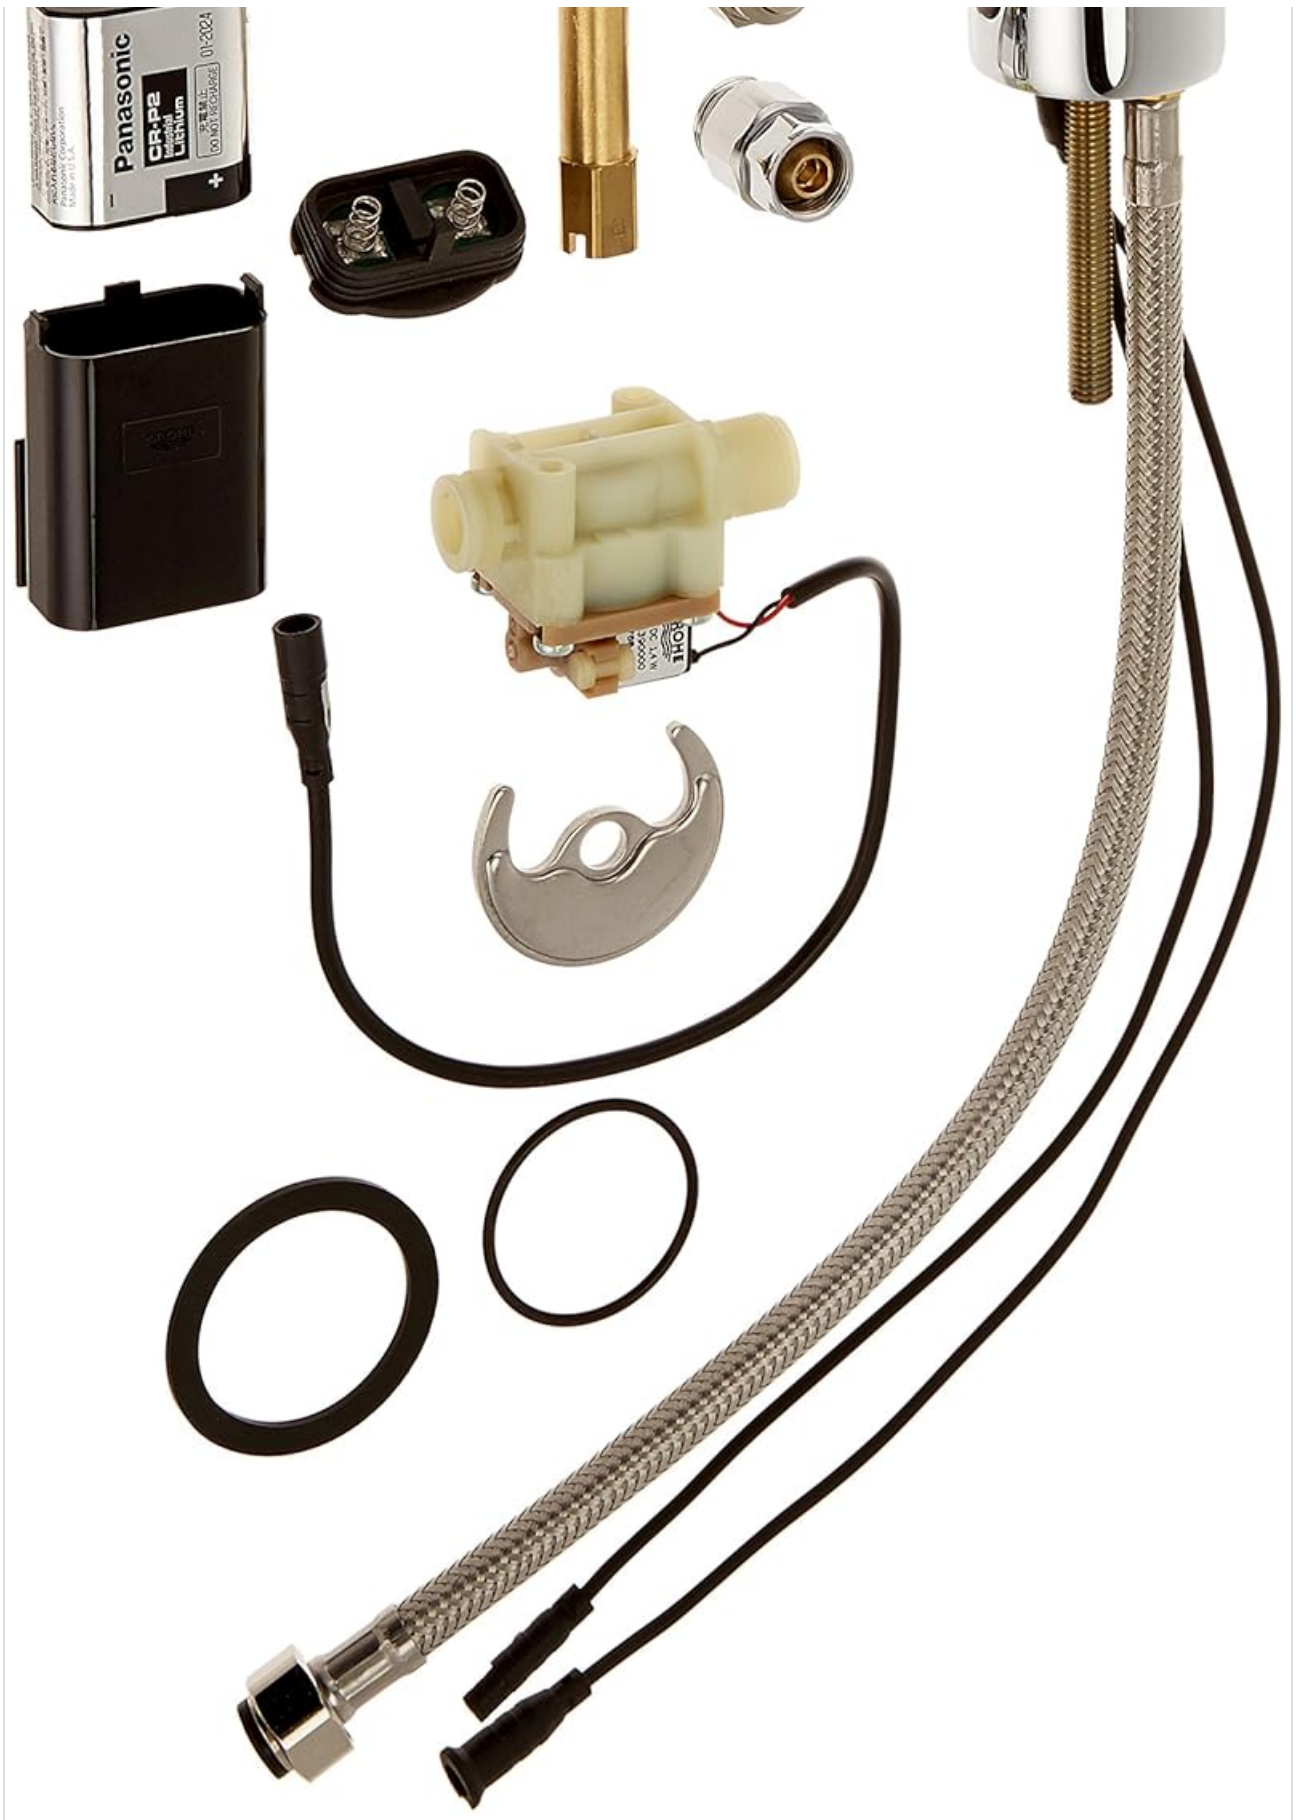


Figure 2: All components included with the Grohe Euroeco Cosmopolitan E Touchless Faucet, including the faucet body, hoses, battery pack, and mounting hardware.

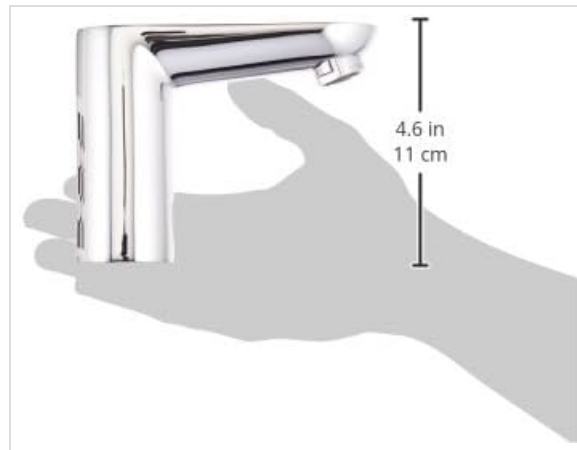


Figure 3: Illustrative image showing the approximate dimensions of the Grohe Euroeco Cosmopolitan E Touchless Faucet, with a height of approximately 4.6 inches (11 cm).

SETUP AND INSTALLATION

The Grohe Euroeco Cosmopolitan E faucet is designed for single-hole deck mount installation. Ensure all necessary components are present before beginning installation. Professional installation is recommended for optimal performance and to ensure compliance with local plumbing codes.

For detailed visual guidance on installation, please refer to the official installation video below:

Your browser does not support the video tag.

Video 1: Official installation overview for the Grohe Euroeco Cosmopolitan E Single Hole Touchless Electronic Bathroom Faucet. This video demonstrates the key steps for mounting the faucet and connecting the water lines.

Pre-Installation Checklist:

- Verify all parts are included as per the packing list.
- Ensure water supply is turned off at the main valve.
- Clear the installation area and ensure adequate lighting.
- Have necessary tools ready (e.g., adjustable wrench, screwdriver, sealant).

OPERATING INSTRUCTIONS

The Grohe Euroeco Cosmopolitan E faucet operates via an infrared electronic motion sensor. To activate water flow, simply place your hands within the sensor's detection range under the spout. The water will flow automatically. To stop the water flow, remove your hands from the sensor's range.

The faucet is designed to provide a consistent water temperature, which is typically set during installation. If your model includes a temperature adjustment lever, use it to fine-tune the water temperature to your preference.

MAINTENANCE

To maintain the pristine appearance and optimal functionality of your Grohe faucet, regular cleaning is recommended. Use a soft cloth and a mild, non-abrasive cleaning solution. Avoid harsh chemicals, abrasive cleaners, or scouring pads, as these can damage the Starlight Chrome finish.

The SpeedClean anti-lime system helps prevent limescale buildup on the aerator. To clean, simply wipe the aerator nozzles with your finger to dislodge any mineral deposits. For battery replacement, refer to the specific instructions provided with your faucet's battery pack, typically located under the sink.

TROUBLESHOOTING

If you encounter issues with your Grohe touchless faucet, consider the following common troubleshooting steps:

Problem	Possible Cause	Solution
No water flow or weak flow.	Low water pressure, clogged aerator, depleted battery, sensor obstruction.	Check water supply valves. Clean the aerator. Replace the battery. Ensure nothing is blocking the sensor.
Water continuously runs.	Sensor malfunction, object in sensor range.	Remove any objects from the sensor's field. Clean the sensor window. If problem persists, contact support.
Inconsistent water temperature.	Water heater issues, incorrect temperature setting.	Check your water heater settings. Adjust the temperature mixing valve if present.

For issues not covered here, or if problems persist, please contact Grohe customer support.

SPECIFICATIONS

Attribute	Detail
Brand	GROHE
Model Name	Euroeco Cosmopolitan E
Model Number	36314000
Finish Type	StarLight Chrome
Material	Brass
Mounting Type	Deck Mount
Hole Count	1
Special Features	ADA Compliant, WaterSense Certified
Maximum Flow Rate	0.5 Gallons Per Minute
Item Weight	1 pound (16 ounces)
Product Dimensions	14.96 x 9.06 x 3.94 inches
Power Source	Battery (6V, CR-P2 lithium battery included)

WARRANTY AND SUPPORT

The Grohe 36314000 Euroeco Cosmopolitan E Faucet comes with a limited warranty. For specific details regarding warranty coverage, terms, and conditions, please refer to the warranty documentation included with your product packaging or visit the official GROHE website. Keep your proof of purchase for warranty claims.

For technical support, replacement parts, or further assistance, please contact GROHE customer service. Contact information can typically be found on the GROHE website or within your product's original packaging.

You can also visit the official GROHE Store on Amazon for more product information and support resources.