

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Panasonic](#) /

› [Panasonic K1HY08YY0031 USB Cable User Manual](#)

## Panasonic K1HY08YY0031

# Panasonic K1HY08YY0031 USB Cable User Manual

Model: K1HY08YY0031

## INTRODUCTION

---

This manual provides instructions for the proper use and care of your Panasonic K1HY08YY0031 USB Cable. This cable is designed for connecting various Panasonic brand models and other compatible electronic devices for data transfer and charging purposes.



Image: The Panasonic K1HY08YY0031 USB Cable, featuring its standard USB Type A connectors on both ends, designed for reliable device connectivity.

## SETUP

The Panasonic K1HY08YY0031 USB Cable is a plug-and-play device, requiring no special software installation for basic functionality.

1. **Identify Ports:** Locate the appropriate USB Type A ports on your Panasonic device (e.g., camera, camcorder) and the host device (e.g., computer, charger).
2. **Connect Cable:** Insert one end of the USB cable into the USB port of your Panasonic device.
3. **Connect to Host:** Insert the other end of the USB cable into a compatible USB port on your computer, laptop, or a USB wall adapter for charging.
4. **Verify Connection:** Ensure both ends of the cable are securely connected. Your device should indicate a connection (e.g., charging icon, data transfer prompt).

## OPERATING INSTRUCTIONS

### Data Transfer

To transfer data between your Panasonic device and a computer:

1. Connect the cable as described in the "Setup" section.
2. Once connected, your computer should recognize the Panasonic device as a removable storage device or prompt you to select a connection mode (e.g., Mass Storage, PC Connection).
3. Follow the on-screen prompts on your computer or device to access and transfer files.
4. After transferring files, safely eject the device from your computer's operating system before disconnecting the cable to prevent data corruption.

## Charging

To charge your Panasonic device using the USB cable:

1. Connect the cable from your Panasonic device to a USB wall adapter or a powered USB port on a computer.
2. Ensure the power source is active.
3. The device's charging indicator should activate, confirming that it is receiving power.

## MAINTENANCE

- **Storage:** Store the cable in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling or bending the cable sharply, which can damage internal wires.
- **Cleaning:** Use a soft, dry cloth to clean the cable and its connectors. Do not use liquid cleaners or solvents.
- **Handling:** Always grasp the connector head when plugging or unplugging the cable, rather than pulling on the cable itself. This prevents strain on the cable's connection points.
- **Inspection:** Periodically inspect the cable for any signs of wear, fraying, or damage to the insulation or connectors. Discontinue use if damage is observed.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not recognized by computer.	Loose connection, faulty USB port, incorrect device settings.	<ul style="list-style-type: none"><li>• Ensure the cable is securely plugged into both devices.</li><li>• Try a different USB port on your computer.</li><li>• Check your device's settings to ensure it's in the correct mode for PC connection.</li><li>• Restart both the computer and the Panasonic device.</li></ul>
Device not charging.	Faulty power source, damaged cable, device issue.	<ul style="list-style-type: none"><li>• Verify the USB wall adapter or computer USB port is providing power.</li><li>• Try a different power source.</li><li>• Inspect the cable for visible damage. If damaged, replace it.</li><li>• Ensure the device's battery is properly inserted and not fully depleted.</li></ul>

Problem	Possible Cause	Solution
Slow data transfer.	USB port speed limitations, large file sizes, background processes.	<ul style="list-style-type: none"> <li>• Use a USB 2.0 or higher port on your computer if available.</li> <li>• Close unnecessary applications on your computer.</li> <li>• Ensure your device's firmware is up to date.</li> </ul>

## SPECIFICATIONS

Feature	Detail
Brand	Panasonic
Model Number	K1HY08YY0031
Part Number	K1HY08YY0031
Connector Type	USB Type A
Cable Type	USB
Compatible Devices	Computer, Laptop, Smartphone, Tablet, Other USB-enabled Devices
Connector Gender	Male-to-Male
Material	Copper
Item Weight	1.44 ounces
Product Dimensions	5 x 4 x 1 inches
UPC	361147000583

## WARRANTY AND SUPPORT

This product is an authorized aftermarket part. For specific warranty information, please refer to the documentation provided with your original Panasonic device or contact the seller directly. For technical support, please consult the support resources for your specific Panasonic device model.