

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Vivanco](#) /

› [Vivanco RR 220 Samsung Compatible Smart TV Remote Control User Manual](#)

Vivanco 38016

Vivanco RR 220 Samsung Compatible Smart TV Remote Control User Manual

Model: 38016

INTRODUCTION

This manual provides instructions for the Vivanco RR 220 remote control, designed for compatibility with Samsung Smart TVs. Please read this manual thoroughly before using the device to ensure proper operation and to understand its features.

PACKAGE CONTENTS

- Vivanco RR 220 Remote Control
- This User Manual

Note: Batteries are not included and must be purchased separately.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Replace the battery cover, ensuring it clicks securely into place.

- **Mute Button:** Silences the TV audio.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Used to navigate menus and select options.
- **Back/Return Button:** Returns to the previous screen or menu.
- **Smart Hub/Home Button:** Accesses the Smart Hub or main menu of your Samsung Smart TV.
- **Source/Input Button:** Selects input sources (HDMI, AV, etc.).
- **Color Buttons (Red, Green, Yellow, Blue):** For specific functions within certain applications or menus, as indicated on-screen.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind):** Controls media playback on compatible devices or apps.

For specific functions related to your TV model, refer to your Samsung TV's user manual.

MAINTENANCE

Cleaning the Remote Control

- Use a soft, dry cloth to wipe the surface of the remote control.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.
- Ensure no liquid enters the remote control through button gaps or the battery compartment.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries or different types of batteries.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not working.	<ul style="list-style-type: none"> • Dead or incorrectly inserted batteries. • Obstruction between remote and TV. • Remote control out of range. 	<ul style="list-style-type: none"> • Replace batteries with new AAA batteries, ensuring correct polarity. • Remove any objects blocking the line of sight to the TV's IR receiver. • Ensure you are within the maximum operating range of 15 meters.
Some buttons do not function.	<ul style="list-style-type: none"> • Button stuck or damaged. • Function not supported by your specific TV model. 	<ul style="list-style-type: none"> • Gently press the button multiple times. If it remains stuck, the remote may be damaged. • Verify if the function is available on your TV's original remote or in your TV's user manual.

SPECIFICATIONS

- **Brand:** Vivanco
- **Model Name:** RR 220
- **Product Model Number:** 38016
- **Compatible Devices:** Home cinema, DVD/Blu-ray player, Television (Samsung Smart TV compatible)
- **Connectivity Technology:** Wireless IR (Infrared)
- **Number of Buttons:** 57

- **Battery Type:** 2 x AAA (Alkaline recommended)
- **Batteries Included:** No
- **Product Dimensions:** 18 x 4.8 x 2.3 cm
- **Product Weight:** 80 g
- **Maximum Range:** 15 meters
- **Special Features:** IPTV, DVB-T, HDTV compatibility

